



1	2	3	4	5	6	7	8
SIGN.	Descriptions	Note	SIGN.	Descriptions	Note	SIGN.	Descriptions
A01	PRESSOSTATO DI ALTA PRESSIONE P-STAT PRESSOSTAT HAUTE PRESSION DRUCKSCHALTER HOCHDRUCK PRESSOSTATO DE ALTA		RSF	RELE SEQUENZA FASE RELAY DE SECURITE CONTROL RELAY STEUERELAS FLIERE FAISERUNG RELE CONTROL SECUENCIA FASES		01	INTER. RSF SWITCH RSF AUTOMATISCHER RSF INTER. RSF
K03	RELE ¹ ALTA PRESSIONE RELAYS HAUTE PRESSION RELAYS HOCHDRUCK RELE DE ALTA		SRI	SERRANDA DAMPER REGISTRE MOTORISIERTE COMPUESTA		02	INTER. COMPRESSORI SWITCH COMPRESSORS INTER. COMP. AUTOMATISCHER KOMP. INTER. COMP.
K04	CONTATTORI COMPRESSORE COMPRESSOR CONTACTORS CONTACTEUR COMPRESSEUR SCHULTZ VENDORHER CONTACTOR DEL VENTILADOR		FS1	PRESSOSTATO FLUSSO ARIA AIR FLOW PRESSURE SWITCH PRESSOST. D'ENGORGEMENT DE FILTRE DRUCKSCHALTER NIEDERDRUCK PRESSOSTATO DE BAWA		04	INTER. LUMIFICATORE SWITCH HUMIDIFER. INTER. HUMIDIF. AUTOMATISCHER BEFEUCHTER INTER. HUMIDIF.
K03	CONTATTORI LUMIFICATORE HUMIDIFIER CONT. HUMIDIFICATEUR BEFEUCHTER VERBODUNG CONT. HUMIDIFICADOR		TP1	TERMOSTATO SICUREZZA RISCALDAMENTO HEATING SAFETY THERMOSTAT THERMOSTAT DE SECURITE CHAUFFAGE THERMOSTATE EXOTROEIZUNG THERMOSTATO DE SEGURIDAD DE LAS RESISTENCIAS		05	INTER. VENTILATORI SWITCH FANS INTER. VENT. AUTOMATISCHER VENT. INTER. VENT.
K04	CONTATTORI MOTOVENTILATORE FAN MOTOR CONTACTOR CONTACTEUR SCHULTZ VENTILATEUR VENTILATOR SCHULTZ CONTACTOR DEL MOTOVENTILADOR		P1	PRESSOSTATO CONDENSAZIONE CONDENSING PRESSION SENSOR SONDE DE LA PRESSION DE CONDENSATION KONDENSATIONSROCK-DRUCKER SONDA PRESSION CONDENSACION		06	INTER. RISCALDAMENTO ELETTRICO SWITCH E HEATERS INTER. CHAUFFAGE ELET. AUTOMATISCHER ELTFRUHZUNGS INTER. RES.
K05	RISCALDAMENTO ELETTRICO EL. HEATERS CHAUFFAGE ELECTRIQUE ELETR. HAUZUNG RESISTENCIAS ELÉCTRICAS		SA	TEMPERATURA AMBIENTE INTERNO SHELTER INTERNAL AIR TEMPERATURE SENSOR SONDE TEMPERATURE D'AIR INTERIEUR AUSSENER LUFTTEMP.-FILTER SONDA DE TEMPERATURA DE LA DESCARGA DE AIRE		07	INTER. AUSILIARI SWITCH AUX INTER. AUS. AUTOMATISCHER AUX INTER. AUS.
C02	COMPRESSORE COMPRESSOR COMPRESSEUR ZULIFTEMPERATUR COMPRESOR		SM	TEMPERATURA ARIA IN MANDATA DISCHARGE AIR TEMPERATURE SONDE DE TEMPERATURE ZULIFTEMPERATUR TEMP. DE LA DESCARGA DE AIRE		R01	RESISTENZE CARTER GRANOCASE HEATERS RESISTANCE DE CARTER KUBELWARMENHEIZUNGS RESISTENCIAS DE CARTER
TR	TRASFORMATORE TRANSFORMER TRANSFORMATEUR TRANSFORMADOR		SE	TEMPERATURA ARIA ESTERNA OUTDOOR AIR SENSOR SONDE AIR EXTERNE SONDEN LUFTTEMP. SONDA DE AIRE EXTERNA		Y1	SOLENOIDI LIQUIDO FLUID SOLENOID VALVE ELECTROVANNE FREON KABELVENTIL-KABELMUTTEL ELECTROVALVULA FREON
OS	INTERUTTORE GENERALE MAIN SWITCH INTERRUPTEUR GENERAL HAUPTSCHALTER INTERRUPTOR GENERAL		BP1	PRESSOSTATO DI BASSA PRESSIONE P-STATI DRUCKSCHALTER NIEDERDRUCK PRESSOSTATO DE BAWA		TP3	TERMICHE VENTILATORI THERMAL PROTECTIONS FANS TERMICHE VENTILATORI TERMICHE VENTILATORI
M1	MOTOVENTILATORE EVAPORANTE EVAP. FAN MOTOR EVAPORANTER MOTORISIERTE		K1	REGOLATORE DI VELOCITA' SPEED CONTROLLER REGULATEUR DE VITESSE VENTILATOR/DREHZAHREGELER REGULADOR VELOCIDAD		Y4	CARGO ACQUA UMID. HUMIDIFIER FEED VALVE ELECTROVANNE D'ALIM. DE HUMID. BEFEUCHTER VERSORGUNG VALVULA ALIM. HUMIDIF.
M2	EVAP. FAN MOTOR EVAPORANTER MOTORISIERTE		FS2	PRESSOSTATO FILTRI SPORCHI CLOGGED FILTER PRESSURE SWITCH PRESSOSTAT D'ENGORGEMENT DE FILTRE DRUCKSCHALTER FILTERVERSCHMUTZUNG PRESSOSTATO FILTROS SUJOS		Y5	SCARGO ACQUA UMID. HUMIDIFIER DRAIN VALVE ELECTROVANNE D'ALIM. DE HUMID. BEFEUCHTER ENTLEERUNG VALVULA DESAQUE HUMID.
M3	MOTOVENTILADOR EVAPORADORA		R1	RISCALDAMENTO ELETTRICO EL. HEATERS CHAUFFAGE ELECTRIQUE ELETR. HAUZUNG RESISTENCIAS ELÉCTRICAS		SU	SONDA UMIDITA' HUMIDITY PROBE HYDRUMETER FEUCHTER LUFTFEUCHTHEITMESSUNGS SONDE DE HUMEDAD
NI1	COND. DI RIFASAMENTO POWER FACT. CORRECTION COND. CORRECT. COS. PHI KOND. KORR. COS. PHI COND. DE COMP. DE FASES		R2				

REV.	MODIFICATIONS	DATE	SIGN.	APPR.	POLUDO	REPLACE	REPLACE	ORIGIN:	LENNOX	HF620C0225	SHEET 2 OF 18
1		2			3	4	4				CONTINUE 3

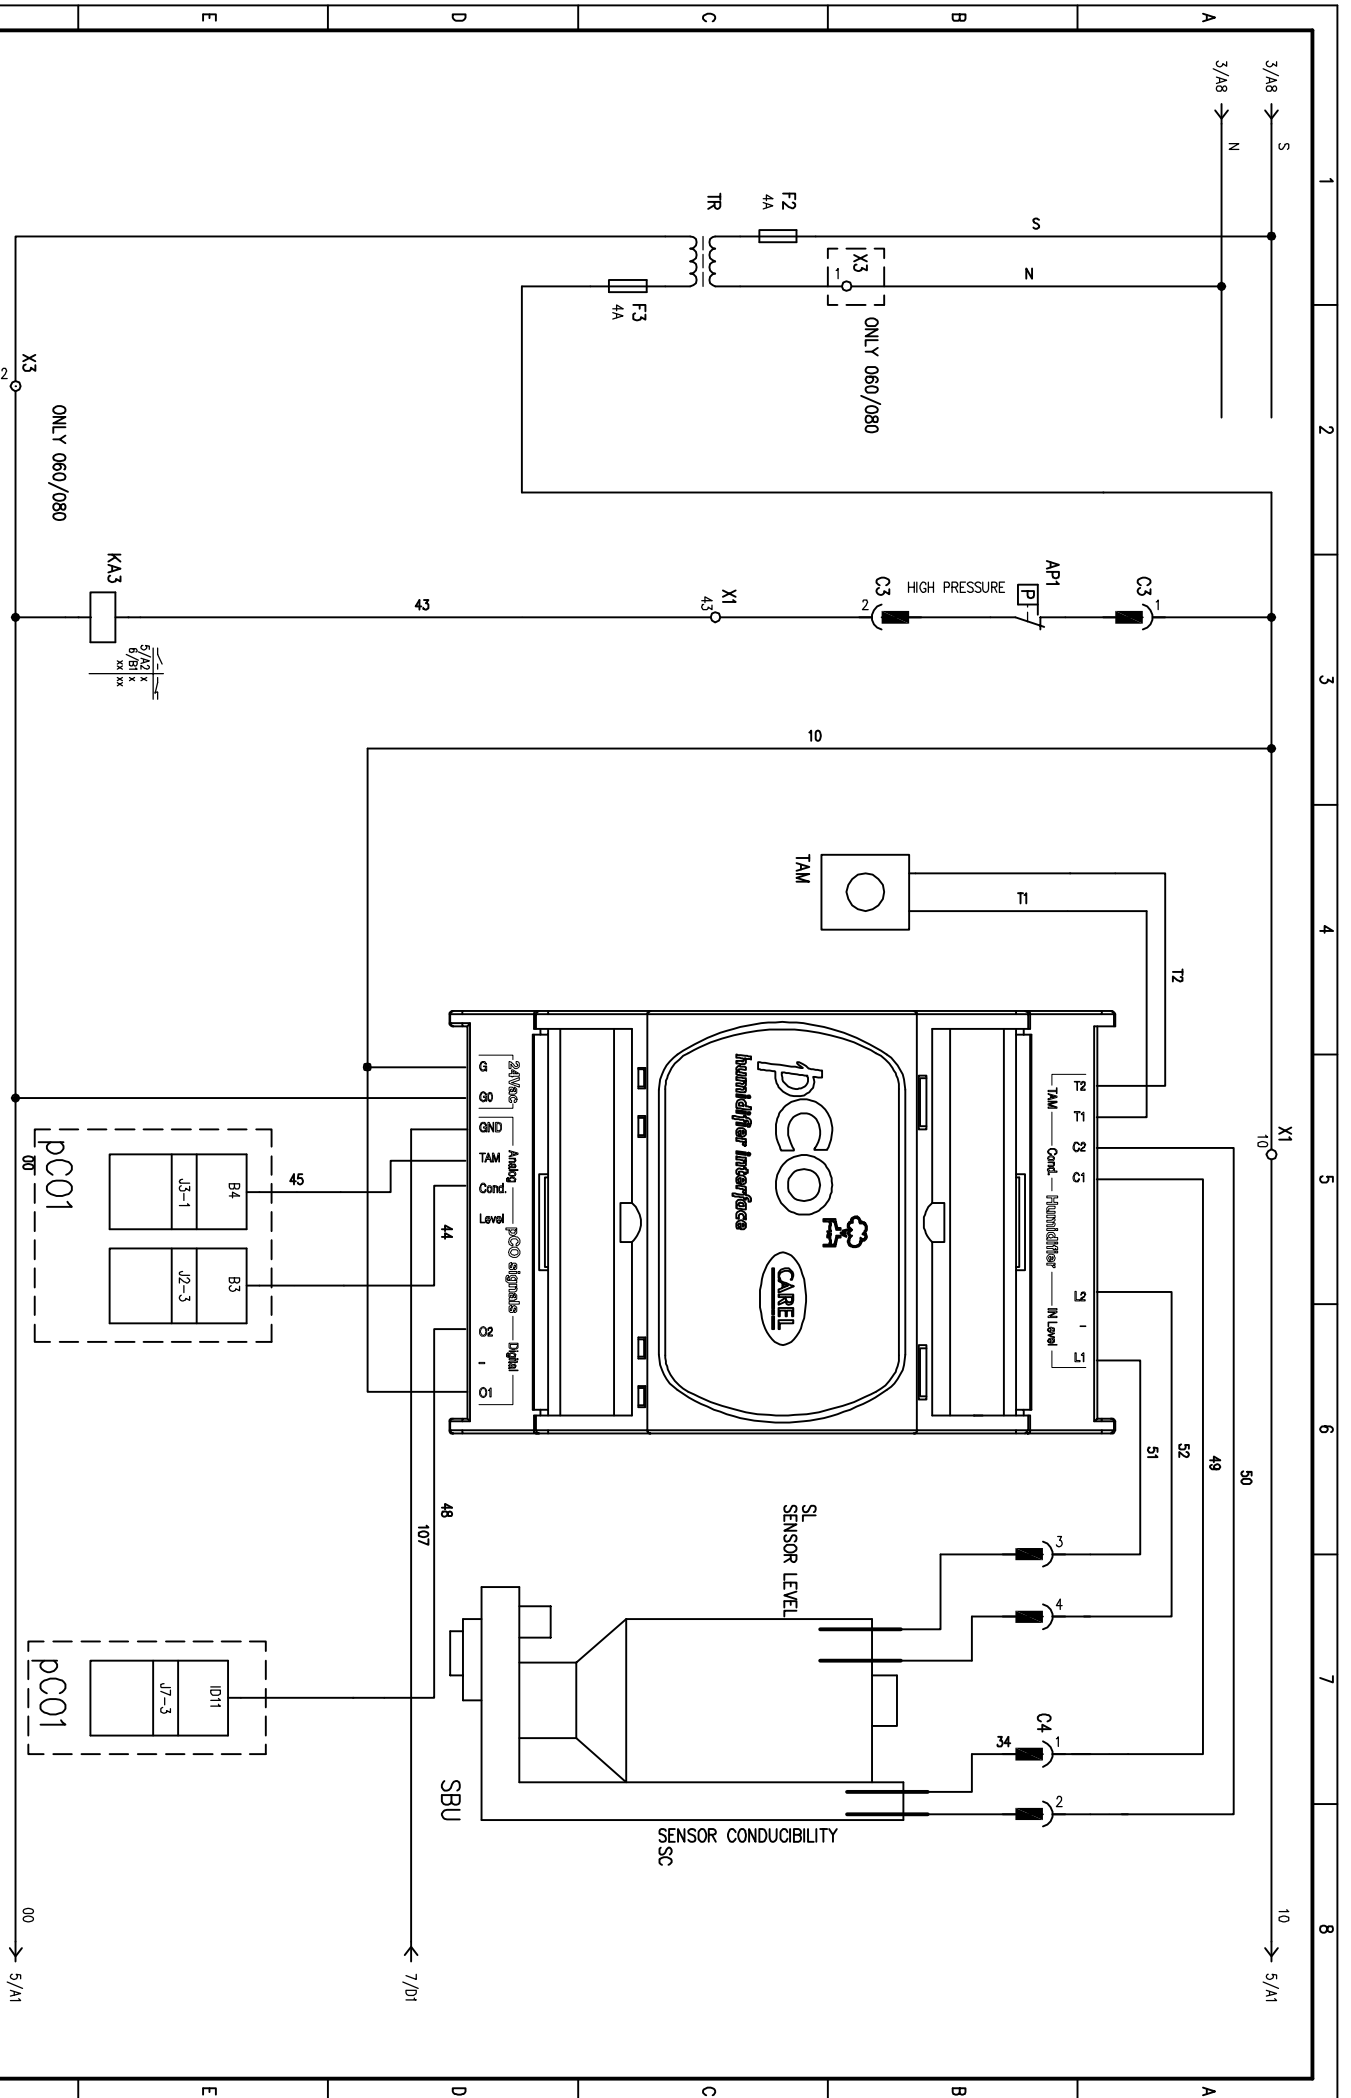

REV.	MODIFICATIONS	DATE	SIGN.	DATE	DRAWN	POLUDO	CHECK	POLUDO	APPR.	POLUDO	REPLACE	REPLACE	ORIGIN:	LENNOX	HF620C0225	SHEET	4 OF 18
1																	
2																	
3																	
4																	
5																	
6																	
7																	
8																	

PC01 DIGITAL OUTPUTS

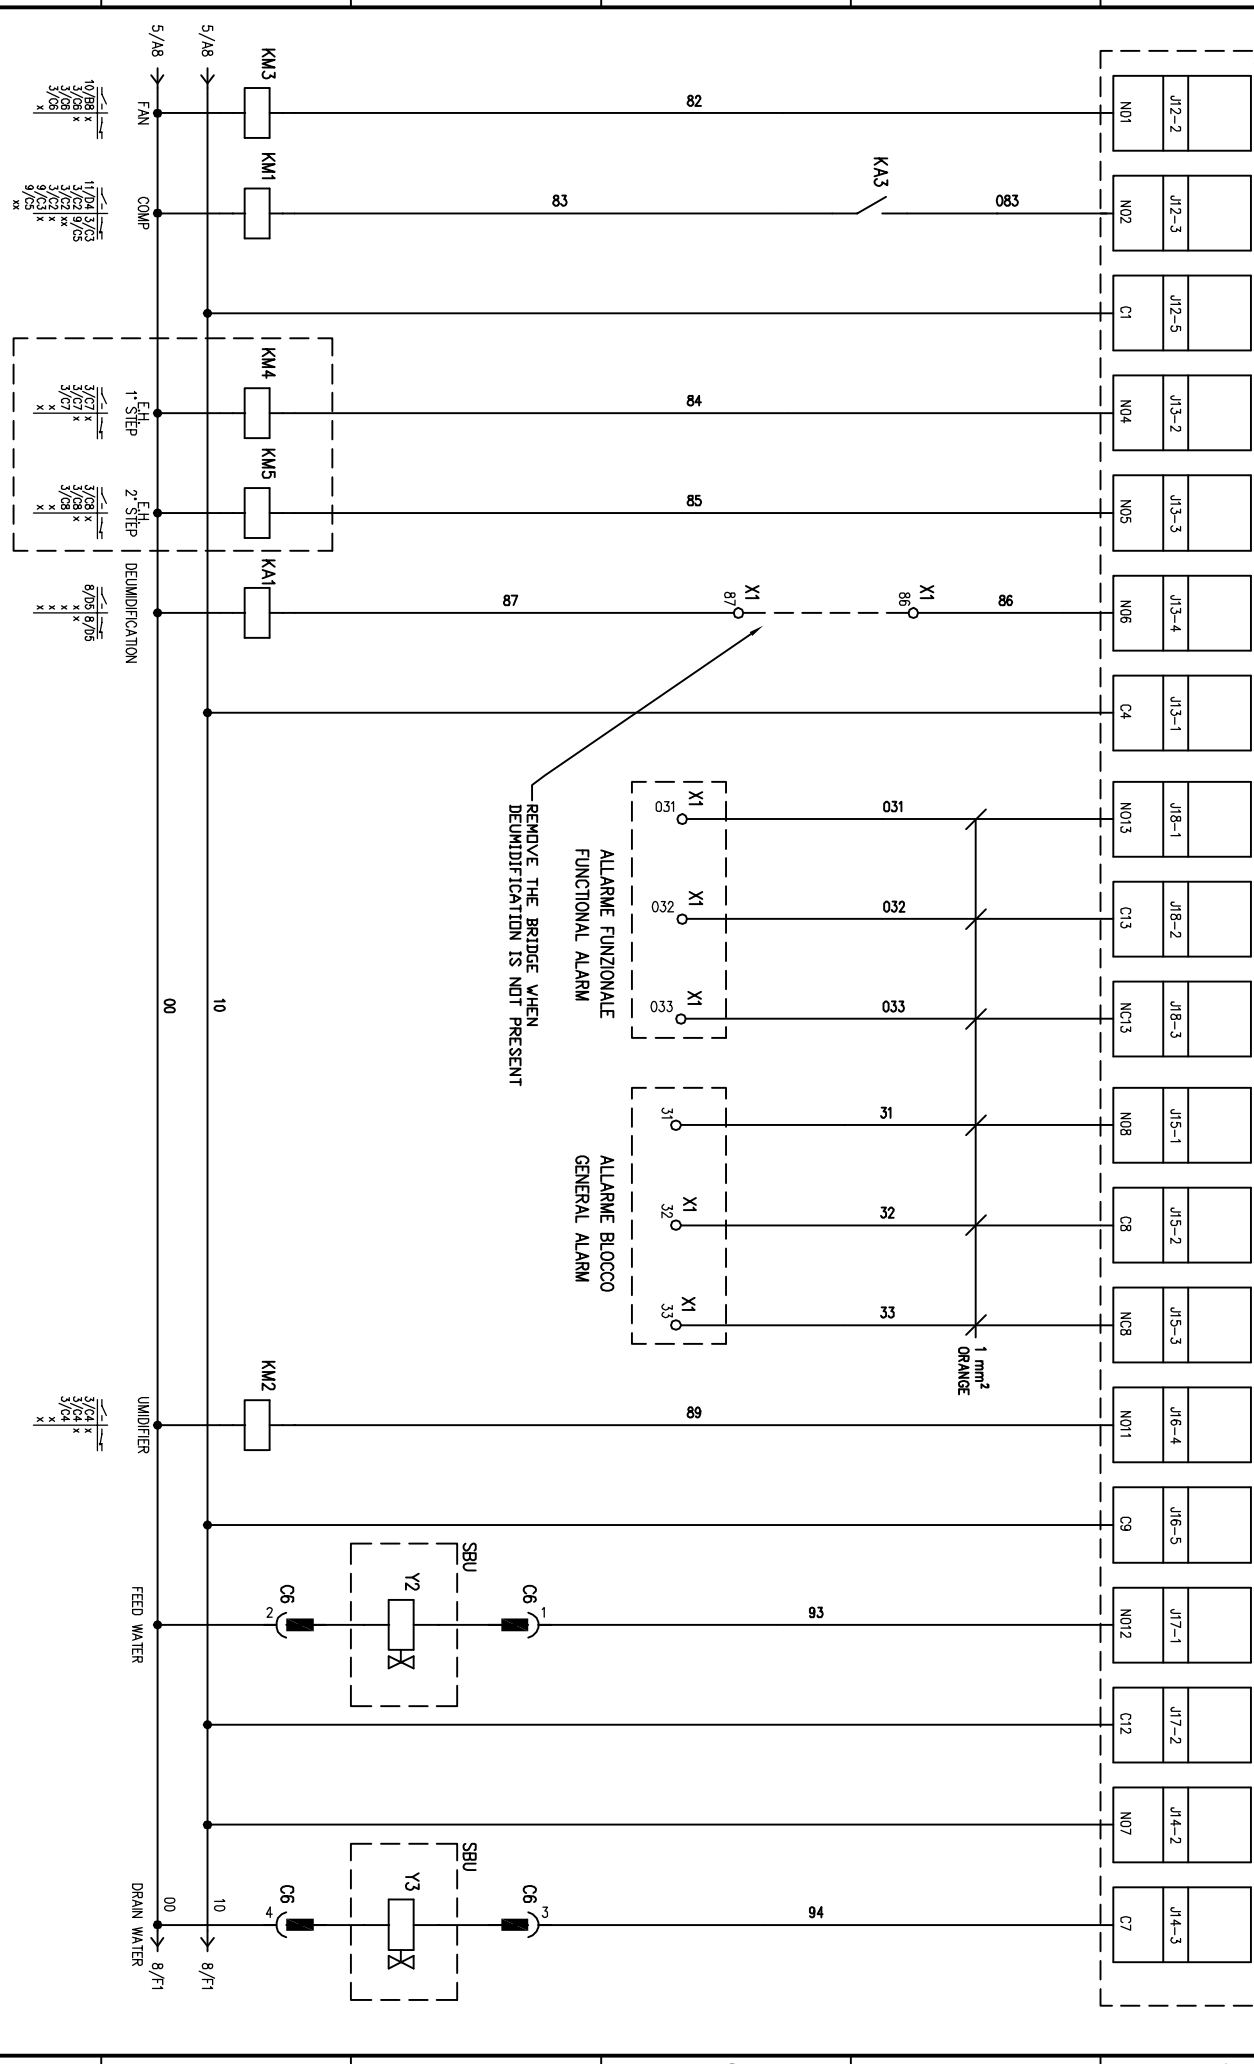

REMOVE THE BRIDGE WHEN DEUMIDIFICATION IS NOT PRESENT

ALLARME FUNZIONALE
FUNCTIONAL ALARM

ALLARME BLOCCO
GENERAL ALARM

1 mm²
ORANGE

REV.	MODIFICATIONS	DATE	SIGN.	APPR.	POLUDO	REPLACE	REPLACE	ORIGIN	DATE	DATE	DATE
1											
2											
3											
4											
5											
6											
7											
8											




HF620C0225

LAYOUT SCHEDA ELECTRONIC BOARD LAYOUT

CONNETTORI PHOENIX A SPINA COMBICON CON PASSO 5.08 mm. COLORE
VERDE TIPO M5TB 2.5 :

STG.	PDLI	TIPD	CODICE	STG.	PDLI	TIPD	CODICE
J1	2	2,5/2-ST	17 57 01 9	J11	3	2,5/3-ST	17 57 02 2
J2	5	2,5/5-ST	17 57 04 8	J12	5	2,5/5-ST	17 57 04 8
J3	4	2,5/4-ST	17 57 03 5	J13	5	2,5/5-ST	17 57 04*8
J4	6	2,5/6-ST	17 57 05 1	J14	3	2,5/3-ST	17 57 02 2
J5	9	2,5/9-ST	17 57 08 0	J15	3	2,5/3-ST	17 57 02 2
J6	4	2,5/4-ST	17 57 03 5	J16	5	2,5/5-ST	17 57 04 8
J7	5	2,5/5-ST	17 57 04 8	J17	3	2,5/3-ST	17 57 02 2
J8	5	2,5/5-ST	17 57 04 8	J18	3	2,5/3-ST	17 57 02 2
J9	3	2,5/3-ST	17 57 02 2				PCBOARD

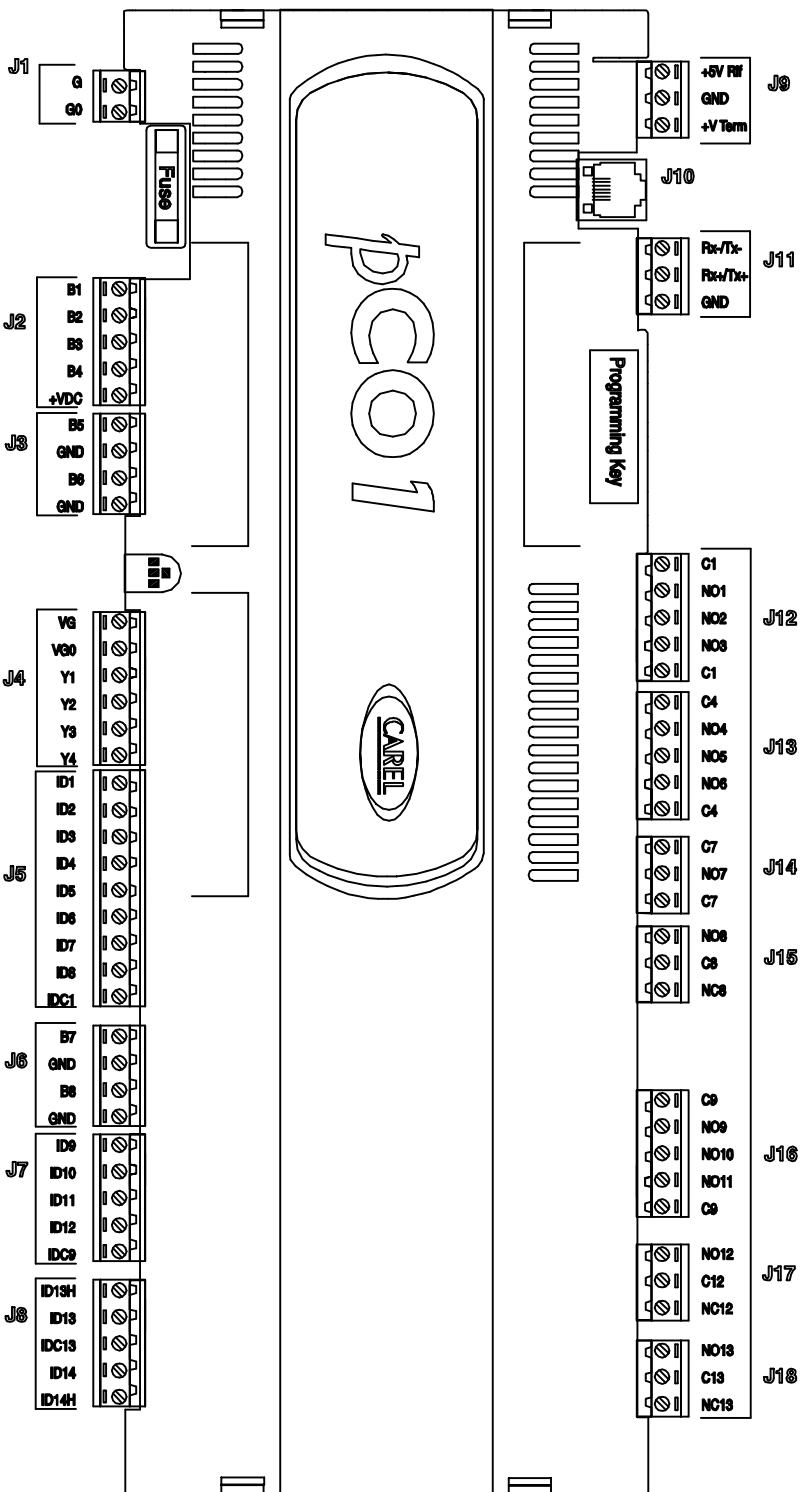

REV.	MODIFICATIONS	DATE	SIGN.	APPR.	POLUDO	REPLACE	REPLACE	ORIGIN:	HF620C0225	SHEET	OF
1										13	18
2										14	14




CONTINUE

LAYOUT 205

PIASTRA FI FONDD NS. COD. HF17000879

COPRIRE QUESTA PARTE CON LASTRA DI POLICARBONATO
ALTEZZA UTILE FILD MANDVRA B/P H=140max

COPRIRE CON LASTRA DI PLEXIGLASS
NS. COD. HF55000040

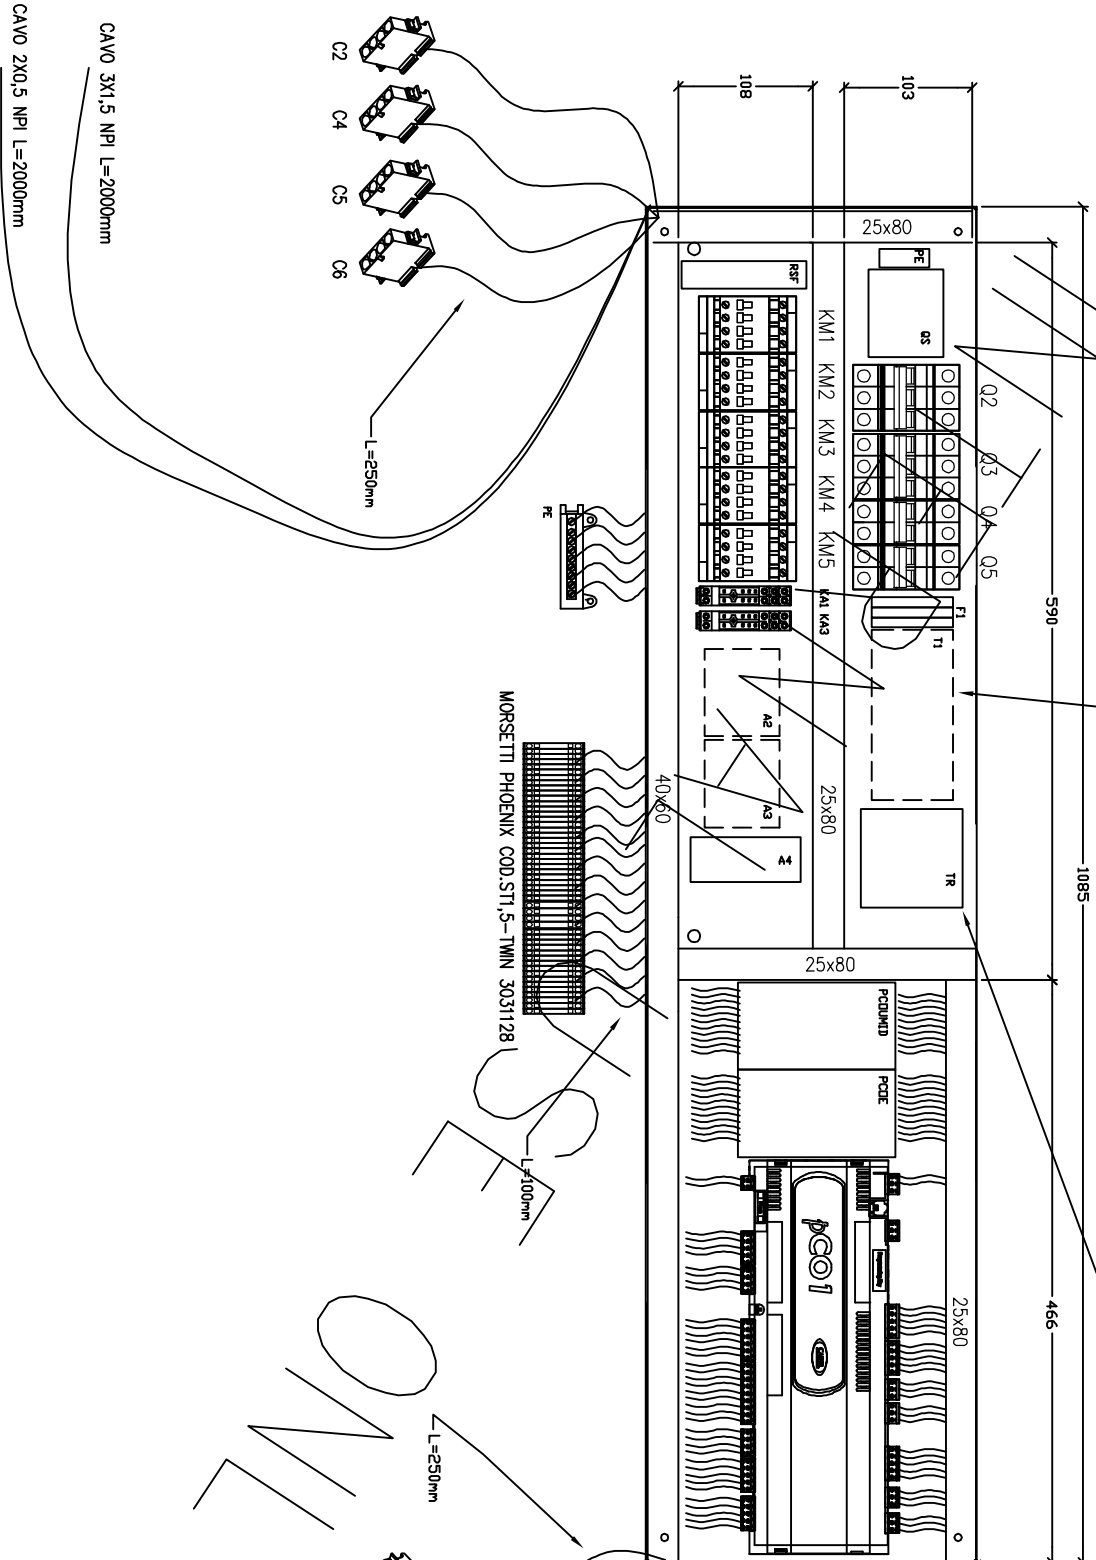

FI=USARE MORSETTI PORTAFUBILI PHOENIX
UK5-HESI
INTERBLOCATI

GUAINA SPIRALATA L=1500mm
FORCINE FS1 FS2


CAVO 3X1,5 NPI L=2000mm




MORSETTI PHOENIX COD.STI,5-TMIN 3031128



L=250mm

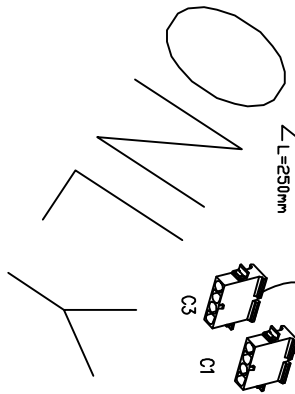


CANALINA

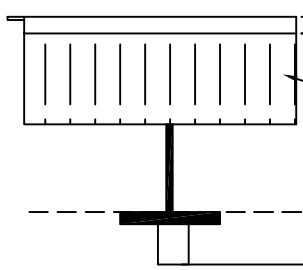


REV.	MODIFICATIONS	DATE	SIGN.	APPR.	POLUDO
1		2			

DATE	POLUDO
DRAW	POLUDO
CHECK	POLUDO
REPLACE	REPLACE

 


HF620C0225

LAN CONNECTIONS

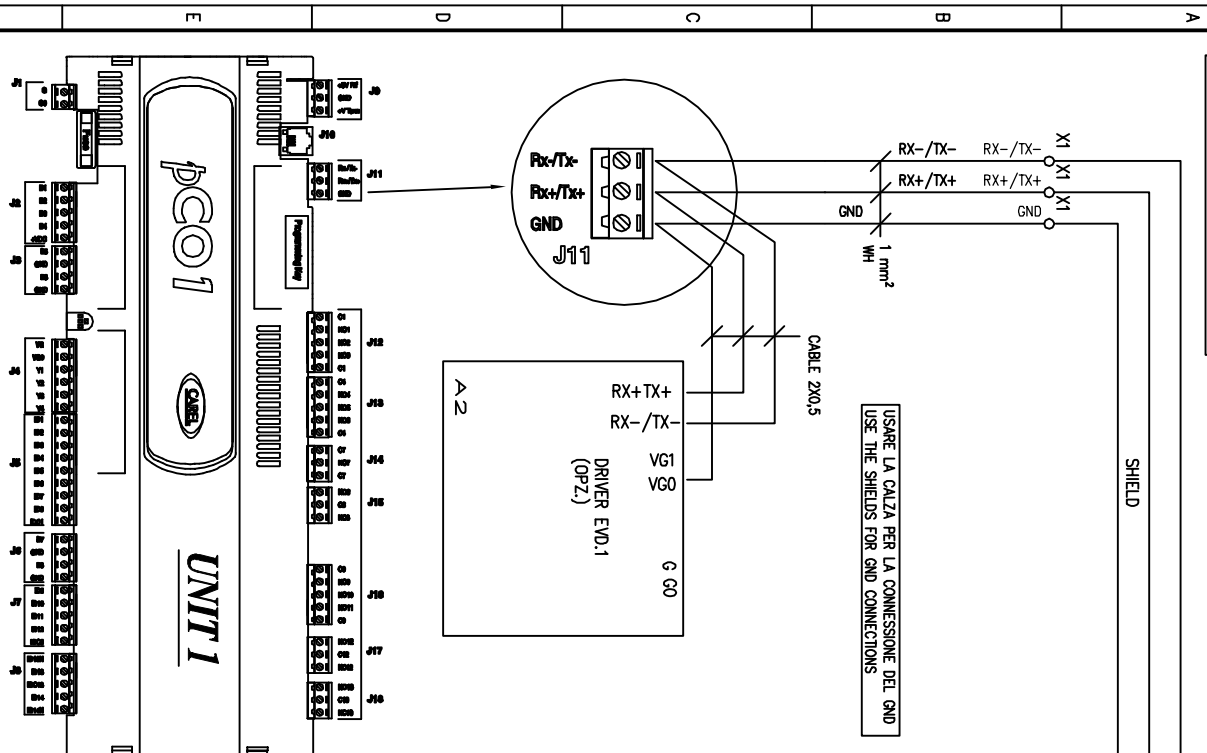

USARE LA CALZA PER LA CONNESSIONE DEL GND
USE THE SHIELDS FOR GND CONNECTIONS

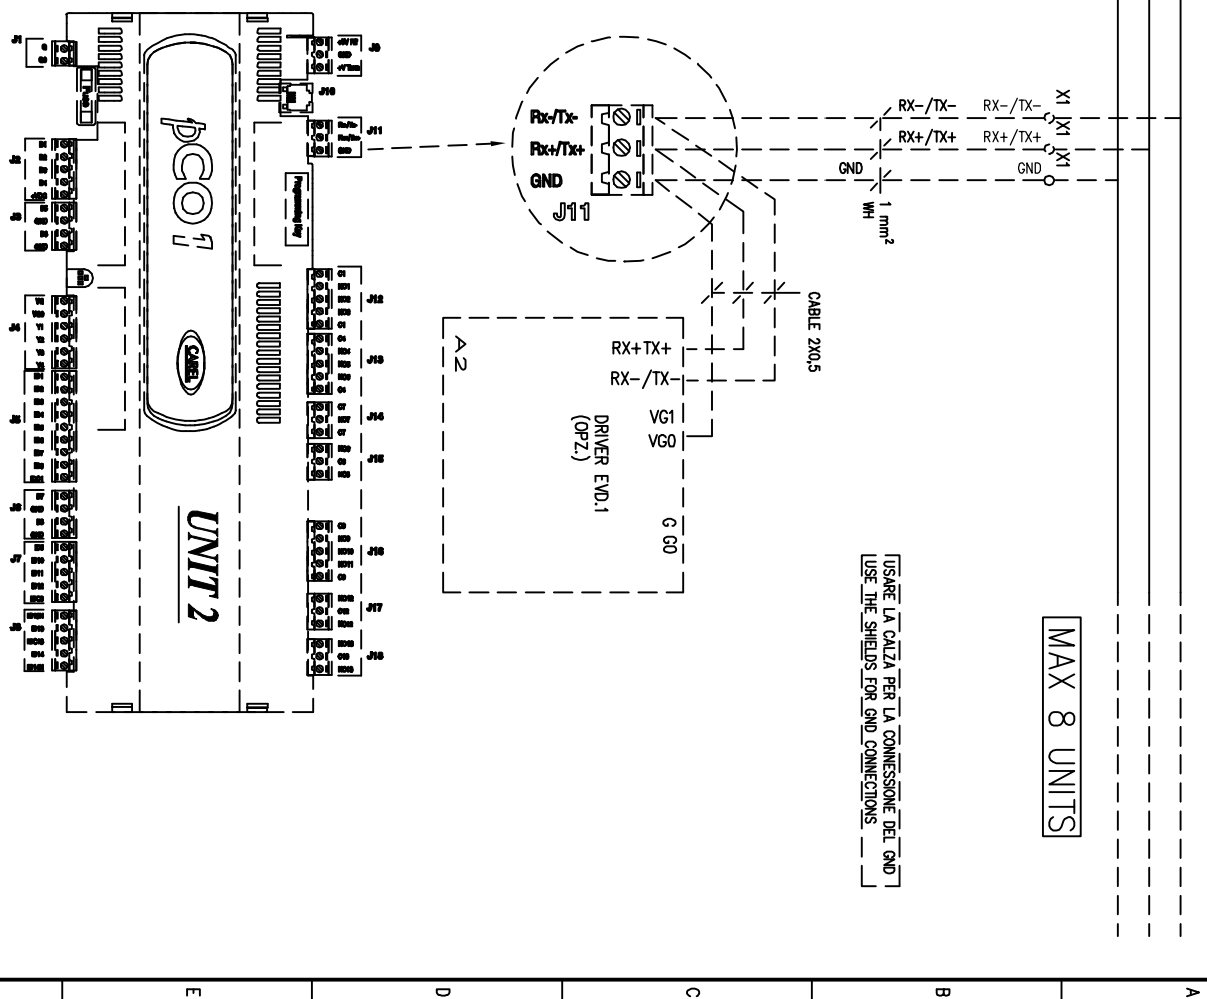

USARE LA CALZA PER LA CONNESSIONE DEL GND
USE THE SHIELDS FOR GND CONNECTIONS

MAX 8 UNITS

REV.	MODIFICATIONS	DATE	SIGN.	APPR.	POLUDO	REPLACE	REPLACE	ORIGIN:	LENNOX	HF620C0225	SHEET 15 OF 18
1		2				4					CONTINUE 16

