



Nota1: Eliminar puente cuando se instale el opcional  
 Note1: Remove jumper when installing the optional  
 Note1: Enlevez le pont en cas d'installer optional  
 Notiz1: Entfernen sie die jumper falls optional angebrochen ist

Elemento Opcional  
 Optional Element  
 A Realizar por el Instalador  
 To Wire by the Installer

Fusibles	F1 - F2	F3-F4-F5
Fuses size	LVCK 48D LVCK 56D	
	230/3/50 2x 3 x 40A 2x 3 x 40A 3x 3 x 16A	
	400/3/50 2x 3 x 20A 2x 3 x 25A 3x 3 x 10A	

Lennox Refoc S.A.  
 ESQUEMA ELECTRICO  
 ELECTRIC DIAGRAM

LVCK (LECK+KVCK) 48D-56D

32-33-893-154 08E  
 3N 400V 50HZ + PE  
 3 ~ 230V 50HZ + PE

VERSION VFC / VFC VERSION