

HP	Presostato Alta	High Pressure Pressostat	K	Contactor o rel?	Contactor
LP	Presostato Baja	Low Pressure Pressostat	F	Protecci?n T?rmica	Thermal Protection
TS	Sonda de Temperatura	Temperature Sensor	CH	Calentador de Carter	Crank Case Heater
FSC	Control de Condensaci?n	Fan Speed Control	CFM	Motor Ventilador Exterior	Condenser Fan Motor
HPR	Presostato c.condensacion	Condensing pressostat	CM	Motor Compresor	Compressor Motor

bk negro black  
bl azul blue  
br marr?n brown

\* Con FSC quitar HPR y poner puente  
With FSC remove HPR y add wire

