

User manual **SWING**



- • • Providing indoor climate comfort

 


CONTENT

Parts names	2
Operation attention	3
Remote Controller	4
Remote Controller Specification	5
Performance Feature.....	5
Introduction of Function Button on the Remote Controller.....	5
Names and Fuctions of Indicator on Remote Controller	6
Usage of the Remote Controller.....	7
Warning	8
Maintenance.....	11
Troubles and cause.....	13

PARTS NAMES

The air conditioner consists of the indoor unit, the outdoor unit, the connecting pipe and the remote controller.

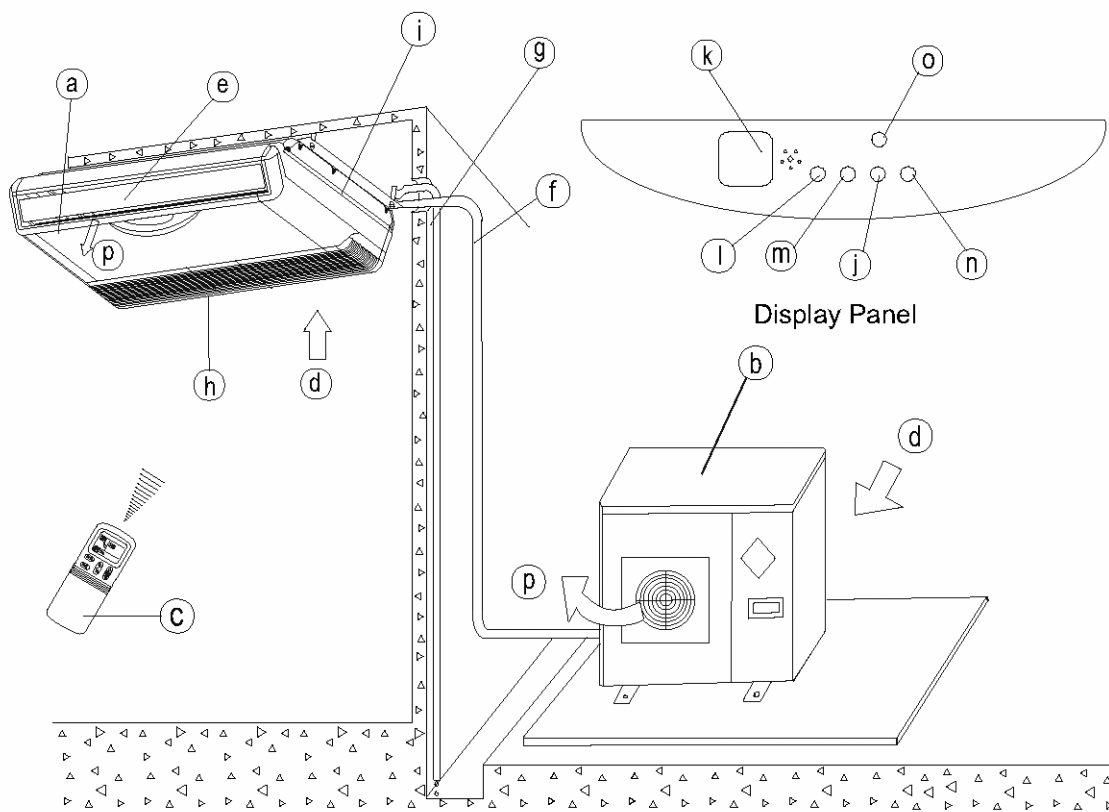

NOTICE!

The chart is based on model 24 type. So, a little differences may exist on the outlook and functions from yours.

NAMES AND FUNCTIONS

a	indoor unit	b	outdoor unit	c	remote controller	
d	air-in	e	air flow louver (at air outlet)	f	connecting pipe	
g	drain hose	h	air inlet (with air filter in it)			
i	installation part	j	FAN/DEF indicator (For cooling and heating type, it's DEF., for cooling only type, it's FAN)			
k	infrared signal receiver	l	operation lamp			
m	timer indicator	n	alarm indicator			
o	temporary button	P	air-out			

OPERATION ATTENTION

Read the owner manual book seriously before operating and mastering the mastering the main points. Please consult the local dealer in difficulty.

The air conditioner is designed to supply comfortable room circumstance. It is only used for the purpose according to the manual book.

1. Check before operating

- Check if the ground wire is broken or not connected.
- Check if the air filter is attached well.
- If the unit has not been used for a long time, it is recommended to clean the air filter before you using the unit. For continuous use, clean the air filter at least once every two weeks.

2. Safety caution


- Do not humidify the indoor unit and remote controller.
- Otherwise, it will cause electric shock or fire.
- Do not use or place flammable gas or liquid such as fixative, paint or benzene near the air conditioner.
- Do not touch the louver when it runs.
- Otherwise, your finger will be clamped or the drive parts will be broken.
- When the fuse blows, do not replace it with the unsuitable fuse or other wire.
- If the fuse is replaced with brass or iron wire, it will cause air conditioner damaged or fire.
- Do not insert any stick into the outlet or inlet.
- When the wheel runs in high speed, it is very dangerous that fan hits anything else.
- Do not remove the fan cover of outdoor unit.
- It will be dangerous that the fan runs in high speed without the cover.
- Do not turn on / off the air conditioner by main power switch, please control the air conditioner by the on / off button on the remote controller.
- Do not let the kid play the units.
- Do not service the air conditioner yourself.
- Please commit service operation to the specified service person.
- Switch off the main power before cleaning filter net and machine body. Although it will not cause electric shock when replacing and cleaning the filter net, cleaning the machine body with dry cloth normally with the double protection from accident electric shock, for the absolute safety of users, routine maintenance should be carried on after switching off the power.

Air conditioner operating conditions

For proper performance, run the air conditioner under the following temperature conditions:


Cooling operation	Outdoor temperature: 18 to 43 °C
	Room temperature: above 17 °C
	CAUTION Room relative humidity less than 80%. If the air conditioner operates in excess of this figure, the surface of the air conditioner may attract condensation.
Heating operating (cooling only type without)	Outdoor temperature: -7 to 24 °C
	Room temperature: under 30 °C
Dry operation	Outdoor temperature: 11 to 43 °C
	Room temperature: 17 to 32 °C

 If air conditioner is used beyond the above conditions, safety protection features may come into operation.

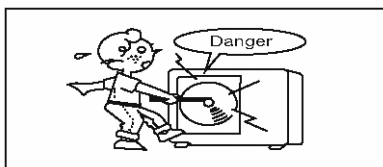


CAUTION

 Do not attempt to install this unit by yourself. This unit requires installation by qualified persons.

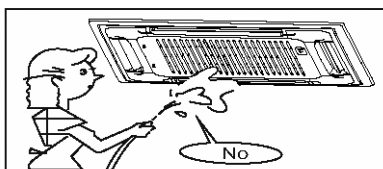


DANGER

 Do not attempt to service the unit yourself. This unit has no user serviceable components. Opening or removing the cover will expose you to dangerous voltage. Turning off the power supply will not prevent potential electric shock.

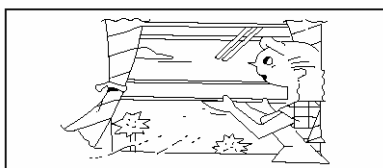

DANGER

 Never put hands or objects into the Air Outlet of indoor or outdoor units. These units are installed with a fan running at high speed. To touch the moving fan will cause serious injury.

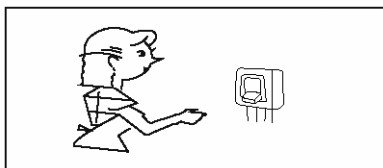


DANGER

To avoid the risk of serious electrical shock, Never sprinkle or spill water or liquids on unit.

WARNING

 Ventilate the room regularly while the air conditioner is in use, especially if there is also a gas appliance in use in this room, Failure to follow these directions may result in a loss of oxygen in the room.

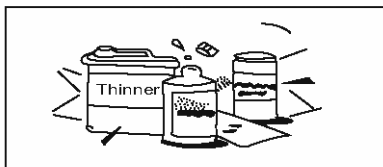


WARNING

To prevent electric shock, turn off the power or disconnect the power supply plug before beginning any cleaning or other routine maintenance. Follow the directions for cleaning in the Owner's Manual.

WARNING

 Do not use liquid cleaners or aerosol cleaners, use a soft and dry cloth for cleaning the unit. To avoid electric shock, never attempt to clean the units by sprinkling water.

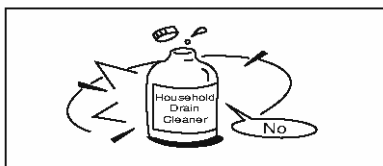

CAUTION

Do not use caustic household drain cleaners in the unit. Drain cleaners can quickly destroy the unit components (drain pan and heat exchanger coil etc).

NOTE

For proper performance, operate the unit in temperature and humidity ranges indicated in this owner's manual. If the unit is operated beyond these conditions, it may cause malfunctions of the unit or dew dripping from the unit.

REMOTE CONTROLLER

Remote Controller Specifications

Rated Voltage	3.0V (Alkaline dry batteries LR03 X 2)
Lowest Voltage of CPU Emitting Signal	2.0V
Reaching Distance Signal Range	8 m (when using 3.0 voltage, it Gets 11 m)
Environment	-5 °C ~ 60 °C

Performance Feature

1. Operating Mod: COOL, HEAT, DRY, FAN and AUTO.
2. Timer Setting Function in 24 hours.
3. Indoor Setting Temperature Range: 17 °C - 30 °C.
4. LCD (Liquid Cristal Display) of all functions.

Introduction of Function Button on the Remote Controller

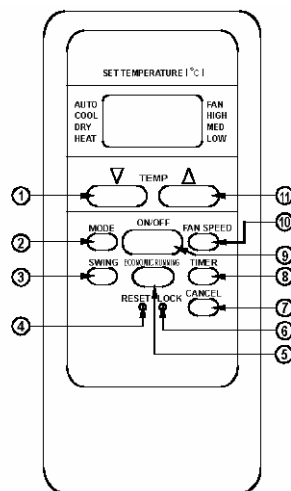 


Fig. 1

Set temperature °C

AUTO

COOL

DRY

HEAT

FAN

HIGH

MED

LOW

▼ TEMP. ▲

MODE

ON/OFF

FAN SPEED

SWING

ECONOMIC RUNNING

TIMER

RESET

LOCK

CANCEL

1. **TEMP Button ▼**: Push the button to make the indoor setting temperature decrease, or adjust the Timer in the anti-clockwise direction.
2. **MODE Select Button**: Each time you push the button, a mode is selected in a sequence that goes from AUTO, COOL, DRY, HEAT and FAN, as the following figure:

→ AUTO → COOL → DRY → HEAT → FAN →

NOTE: HEAT only for Heat Pump

3. **SWING Button:** Pushing Chis switch button to change the swing angle of louver.
4. **RESET Button:** When push the RESET button, all the current settings are cancelled and get into the condition of the beginning.
5. **ECONOMIC RUNNING Button:** Push Chis button, it is Energy-Saving operation mode.
6. **LOCK Button:** Push the button, lock all the current settings, and another push, cancel the LOCK function.
7. **CANCEL Button:** To cancel the TIMER settings.
8. **TIMER Button:** This button is used to preset the time ON (start to operate) and the time OFF (turn off the operation).
9. **ON/OFF Button:** Push Chis button to start operation, push the button again to stop operation.
10. **FAN SPEED Button:** This button is used for setting Fan Speed in the sequence t h t goes from AUTO, LOW , MED to HIGH, then back to Auto.
11. **TEMP Button:** Push the button to make the indoor setting temperature increase, or adjust the Timer in the clockwise direction.

▲ NOTE: *VENTILATION Button: push this button to set the ventilating mode, each time when pushed, the ventilating mode operate as the following sequence:*

→ Continuous → Auto → Off →

Ventilation Function is optional, only available for the Fresh Star Series.

Names and Functions of indicators on Remote Controller

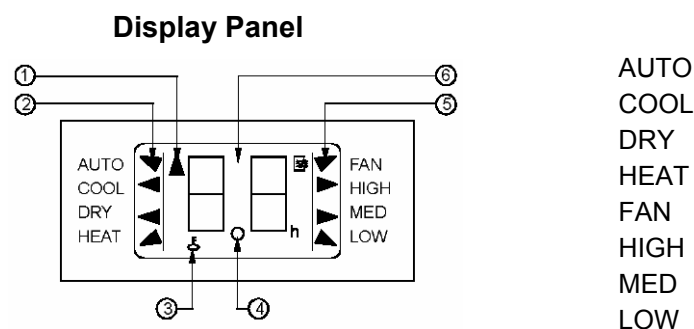 


Fig. 2

1. **TRANSMISSION Indicator:** This indicator lights when remote controller transmits signals to indoor unit.
2. **MODE Display:** Show the current operation mode, includes AUTO, COOL DRY and HEAT.
3. **ONLY FOR HEAT PUMP LOCK Display Displayed:** By pushing the LOCK button push the LOCK button again to disappear.
4. **TIMER Display:** This display area show the settings of TIMER that is if only set the starting time of operation it will display the TIMER ON, if only set the turning off time of operation it will display the TIMER OFF, if set both it will show TIMER ON OFF, which indicate you have chosen to set the starting and off the operation of TIMER.
5. **FAN Display:** Push the FAN button Chis signal indicator lights.
6. **Digital Display:** Area as a rule Chis area will show the setting temperature and if on the TIMER condition it show the ON and OFF settings of TIMER.

▲ NOTE: *All items are shown in the Fig.2 for the purpose of clear presenta tion But during the actual operation only the relative functional items are shown on the display panel.*

Usage of the Remote Controller

Replacing Batteries

The Remote Controller uses two alkaline dry batteries (R03/Lr03X2).

1. For the first time of using Slide the back cover of the battery compartment, according the Direction (+and -)shown on the surface inserí a couple new batters.
2. To replace the old batteries in the same way as the mentioned aboye.

NOTE

1. *When replacing batteries do not use old batteries or different type batteries. Such using may cause the remoce controller to malfunction.*
2. *If you do not use the remoce controller for severa/ weeks remove the batteries. Otherwise battery leakage may damage the remoce controller.*
3. *The average battery life in the normal using way is about 6 months.*
4. *Replace the batteries when there is no receiving beep from the indoor unit or if the transmission indicator on the remoce controller fail/s to light.*

AUTOMATIC OPERATION

When the Air Conditioner is ready to be operated. Switch on the power and the OPERATION in dicator lamp on the display panel of the indoor unit starts flashing.

1. Mode select button MODE select AUTO.
2. Push the TEMP button to set the desired the temperature normally. The most comfortable, setting temperature is from 21 °C to 28°C.
3. Push the ON/OFF button to start the air conditioner. The OPERATION lamp on the display panel of the indoor unit lights. The operating mode is AUTO FAN SPEED is automatically set and there is no indicators shown on the display panel of the remoce controller.
4. Push the ON/OFF button again to stop the operation of air to conditioner.

NOTE

1. *On the Mode of AUTO the air conditioner can make a logic judgement to choose the mode of COOL, FAN, HEAT and DRY for cool only type according to difference between the actual indoor temperature and the setting temperature.*
2. *If the AUTO mode is not comfortable for you then select the desired mode manually.*

COOLING HEAT and FAN ONLY Operation

1. Push the MODE button select COOL, HEAT cooling only type without or FAN ONLY.
2. Push the TEMP button to set the desired temperature when cooling the better settings is 21 °C or aboye when heating the better settings is 28°C or below.
3. Push the FAN SPEED to select the FAN mode of AUTO, HIGH, MED or LOW.
4. Push the ON/OFF button, the operation lamp lights and the air conditioner start to operate as your settings. Push the ON/OFF button again to stop it.

NOTE

The FAN ONLY mode can not be used to control temperature. Therefore perform only steps of No.1. 3 and 4 to select Chis mode.

DRY Operation

1. Push the MODE button to select DRY.
2. Push the TEMP button to set the desired temperature from 21 °C to 28°C.
3. Push the ON/OFF button, the operation lamp lights and the air conditioner start to operate DRY. Push the ON/OFF button again to stop it.

NOTE

In light of the difference of the setting temperature and indoor temperature, Air Conditioner in DRY mode will automatically operate many times without running the COOL and FAN mode.

TIMER Operation

PUSH TIMER button to set the TIMER on time and TIMER off time.

1. Only set the starting time.

- 1.1 Please push the CANCEL button to cancel the former settings if there is.
- 1.2 Push the TIMER button, then the remote controller show the TIMER and the signal "h" was shown on the display panel. It is ready to readjust the TIMER ON to start the operation.
- 1.3 Push the TEMP button (▼ or ▲) to set desired time you want to start.
- 1.4 After finishing setting TIMER 0.5 second the remote controller will transmit the signal to the air conditioner. then after 2 seconds the digital area will show the temperature again.

2. Only set the stopping time.

- 2.1 Please press the CANCEL button to cancel the former settings if there is.
- 2.2 Push the TIMER button, then the remote controller shows the last setting of starting operation TIME and the signal "h" was shown on the display panel. It is ready to readjust the TIMER OFF to stop the operation.
- 2.3 Push the TEMP button to cancel the TIMER ON the digital area show "00".
- 2.4 Push the TIMER button and the remote controller show the las' setting time of stopping the operation and the signal "h" will be shown on the display panel, it is ready to readjust to set the time of stopping operation.
- 2.5 Push the TEMP button (▼ or ▲) to set the time you want to stop the operation.
- 2.6 After finishing setting TIMER 0.5 second, the Remote Controller will transmit the signal to the Air Conditioner. Then after 2 seconds, the Digital Area will show the number of temperature again.

3. Set the starting & stopping time

- 3.1 Please push the CANCEL button to cancel the former settings if there is.
- 3.2 Push the TIMER button, then the remote controller show the last setting starting operation TIME and the signal "h" was shown on the display panel it is ready to readjust the TIMER ON to start the operation.
- 3.3 Push the TEMP button (▼ or ▲) to set the time you want to start the operation.
- 3.4 Push the TIMER button and the remote controller show the last setting time of stopping the operation and the signal "h" will be shown on the display panel. It is ready to readjust the Time of stopping operation.
- 3.5 Push the TEMP button (▼ or ▲) to set the time you want to stop the operation.
- 3.6 After finishing setting TIMER 0.5 second the remote controller will transmit the signal to the air conditioner. then after 2 seconds the digital area will show the of temperature again.

NOTE

1. Please reset the TIMER after canceling the former time settings.
2. The setting time is relative time that is the time you set is the delay of the current time.

Warning

 
1. Be sure there are no barriers between the remote controller and the receiver of indoor unit otherwise the air conditioner will not work.
2. Avoid any liquid or soaking the Remote Controller.
3. Keep the remote controller from the high temperature and radiation areas.
4. The receiver of the indoor unit can't not be uncovered under the direct sunlight. Otherwise the air conditioner will not work normally.
5. If there is EMI (Electro-Magnetic Interference) from other home appliances please remove the those appliances or contact with the local dealer.

ADJUSTING AIR FLOW DIRECTION

Adjust the air direction up and down

Auto-swing

Press SWING button, the louver will swing up and down automatically.

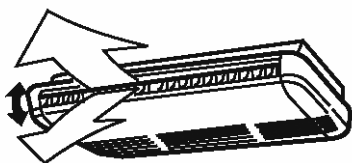


Manual Swing

Adjust the louver to achieve better cooling/ heating effects when cooling/heating.


When cooling

 Adjust the louver horizontally.

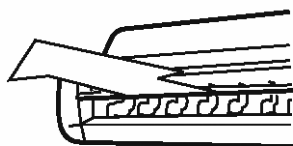


When heating

 Adjust the louver downwards (vertically).

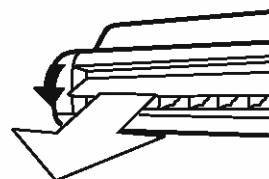

Adjust the Air Flow Direction Left and Right

 Adjust the vertical blade inside of the air outlet louver to the expected direction.

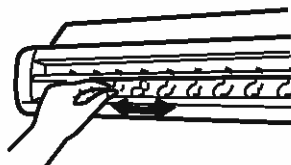

MAINTENANCE

WARNING

Before you clean the air conditioner, be sure to disconnect the power supply plug.

Cleaning the indoor unit and remote controller

CAUTIONS

- Use a dry cloth to wipe the indoor unit and remote controller. A cloth dampened with cold water may be used on the indoor unit if it is very dirty. Never use a damp cloth on the remote controller.
- Do not use a themically-treted duster for wiping or leave such material on the unit for long, because it may damage or fade the surface of the unit.
- Do not use benzine, thinner, polishing powder, or similar solvents for cleaning. These may cause the plastic surface to crack or deform.

If you do not plan to use the unit for at least 1 month.

- (1) Operate the fan for about half a day to dry the inside of the unit.
- (2) Stop the air conditioner and disconnect power.
- (3) Remove the batteries from the remote controller.

Checks before operation

CAUTIONS

- Check that the wiring is not broken off or disconnected.
- Check that the air filter is installed. (Some air-conditioners haven't air filters.)
- Check that the outdoor unit air outlet or inlet is not blocked

 
Before you clean the air conditioner, be sure to disconnect the power supply plug.

Cleaning the air filter

- The air filter can prevent the dust or other particulate from going inside .In case of blockage of the filter, the working efficiency of the air conditioner may greatly decrease. Therefore, the filter must be cleaned once two weeks during long time usage.
- If the air conditioner is positioned in a dust place, the cleaning frequency of the air filter must be increased.
- If the accumulated dust is too heavy to be cleaned, please replace the filter with a new one(replaceable air filter is an optional fitting).

1. Open the air-in grill

Push the grill switthes towards the middle simultaneously as indicated in sketch A. Then pull down the air-in grill.

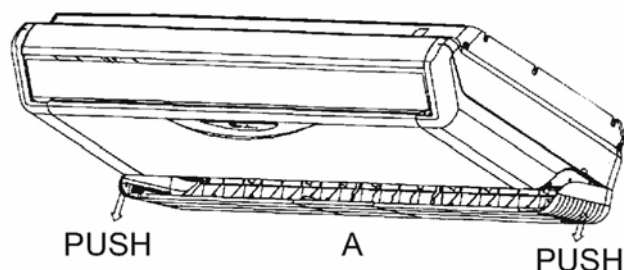

2. Take out the air-in grill.

3. Dismantle the air filter

4. Clean the air filter (Vacuum cleaner or pure water may be used to clean the air filter. If the dust accumulation is too heavy , please use soft brush and mild detergent to clean it and dry out in cool place) .

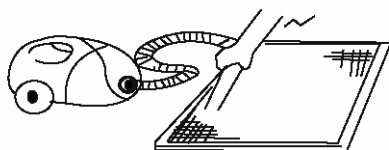 


Fig. 1

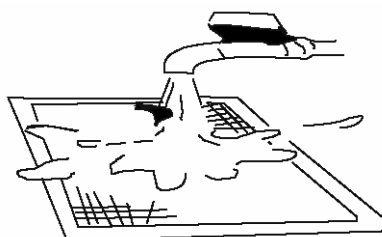 


Fig. 2

- The air-in side should face up when using vacuum cleaner. (See Fig. 1)
- The air-in side should face down when using water. (See Fig. 2)

Cautions : Do not dry out the air filter under direct sunshine or with fire.

5. Re-install the air filter

6. Install and close the air-in grill in the reverse order of step 1 and 2 and connect the control box cables to the corresponding terminators of the main body.

TROUBLES AND CAUSES

Before you ask for servicing or repairs, Check the following points.

ReCheck

Inoperative

- The power fuse is blown or the circuit breaker has been tripped.
- The batteries in the remote controller are exhausted.
- The timer is set.

Does not cool or heat well.

- The air inlet or outlet of the outdoor unit is blocked.
- Doors or windows are open.
- The air filter is clogged with dust.
- The louver is not at the correct position.
- The fan speed is set to low.
- The temperature setting is too high or too low.

These are not failures

Room air is smelly.

A bad odor comes from the air conditioner.

- Smells impregnated in the wall, carpet, furniture, clothing, or furs, are coming out. A white mist of chilled air or water is generated from the outdoor unit.

CAUTIONS

If any of the following conditions occur, stop the air conditioner immediately, set to off the power switch, and contact the dealer:

- The indicator lamps flash rapidly (five times per second), you disconnect the unit with the power and then connect the unit with the power again after two or three minutes but the lamps still flash.
- Switch operations are erratic.
- The fuse is blown frequently or the circuit breaker is tripped frequently.
- Foreign matter or water has fallen inside the air conditioner.
- Any other unusual condition is observed.

TROUBLES AND CAUSES (REMOTE CONTROLLER)

Before you ask for servicing or repairs, Check the following points.

Setting Change is Impossible		
Symptoms	Causes	Reason and Disposal
The fan speed can not be changed.	• Check whether the MODE indicated on the display is "AUTO"	When the automatic mode is selected, the air conditioner automatically selects the fan speed.
	• Check whether the MODE indicated on the display is "DRY"	When dry operation is selected, the air conditioner automatically select the fan speed. The fanspeed can be selected during "COOL" and "FAN ONLY", and "HEAT"

The Transmission Indicator "▲" Never Comes On		
Symptoms	Causes	Reason and Disposal
The remote control signal is not transmitted even when the ON/OFF button is pushed.	• Check whether the batteries in the remote controller are exhausted.	• The remote control signal is not transmitted, because the power supply is off.

The Display Never Comes On		
Symptoms	Causes	Reason
The TEMP. indicator does not come on.	• Check whether the MODE indicated on the display is "FAN ONLY". FAN ONLY	The temperature cannot be set during fan only operation.

The Display Goes Off		
Symptoms	Causes	Reason
The indication on the display disappears after a lapse of time.	• Check whether the timer operation has come to an end when the OFF TIMER is indicated on the display.	The air conditioner operation stops since the set time elapsed.
The ON TIMER indicators go off after a lapse of certain time.	• Check whether the timer operation is started when the ON TIMER is indicated on the display.	When the time set to start the air conditioner is reached, the air conditioner will automatically start and the appropriate indicator will go off.

The Signal Receiving Tone does Not Sound		
Symptoms	Causes	Disposal
No receiving tone sounds from the indoor unit even when the ON/OFF button is pushed.	• Check whether the signal transmitter of the remote controller is properly directed to the receiver of the indoor unit when the ON/OFF button is pushed.	Direct the signal transmitter of the remote controller to the receiver of the indoor unit, and then repeatedly push the ON/ OFF button twice.
Buttons on the remote controller don't work.		Press Reset button.



www.lennox europe.com

BELGIUM, LUXEMBOURG
www.lennoxbelgium.com

CZECH REPUBLIC
www.lennox czech.com

FRANCE
www.lennoxfrance.com

GERMANY
www.lennox deutschland.com

NETHERLANDS
www.lennox nederland.com

POLAND
www.lennox polska.com

PORTUGAL
www.lennoxportugal.com

RUSSIA
www.lennoxrussia.com

SLOVAKIA
www.lennox distribution.com

SPAIN
www.lennoxspain.com

UKRAINE
www.lennoxukraine.com

UNITED KINGDOM AND IRELAND
www.lennoxuk.com

OTHER COUNTRIES
www.lennox distribution.com

Due to Lennox's ongoing commitment to quality, the Specifications, Ratings and Dimensions are subject to change without notice and without incurring liability.

Improper installation, adjustment, alteration, service or maintenance can cause property damage or personal injury.

Installation and service must be performed by a qualified installer and servicing agency.



SWING-OWN-1205-E