



website <http://biz.LGservice.com>

e-mail <http://www.LGservice.com/techsup.html>

Room Air Conditioner

SERVICE MANUAL

CAUTION

-BEFORE SERVICING THE UNIT, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

-ONLY FOR AUTHORIZED SERVICE PERSONNEL.

MODEL : LS-J0967HR / LS-L1267HR

LS-K186GHR / LS-K246GHR


LS-J0766ML

LS-J0965ML / FR

LS-L1265ML / FR

LS-K1865ML / FR

LS-K2465ML / FR

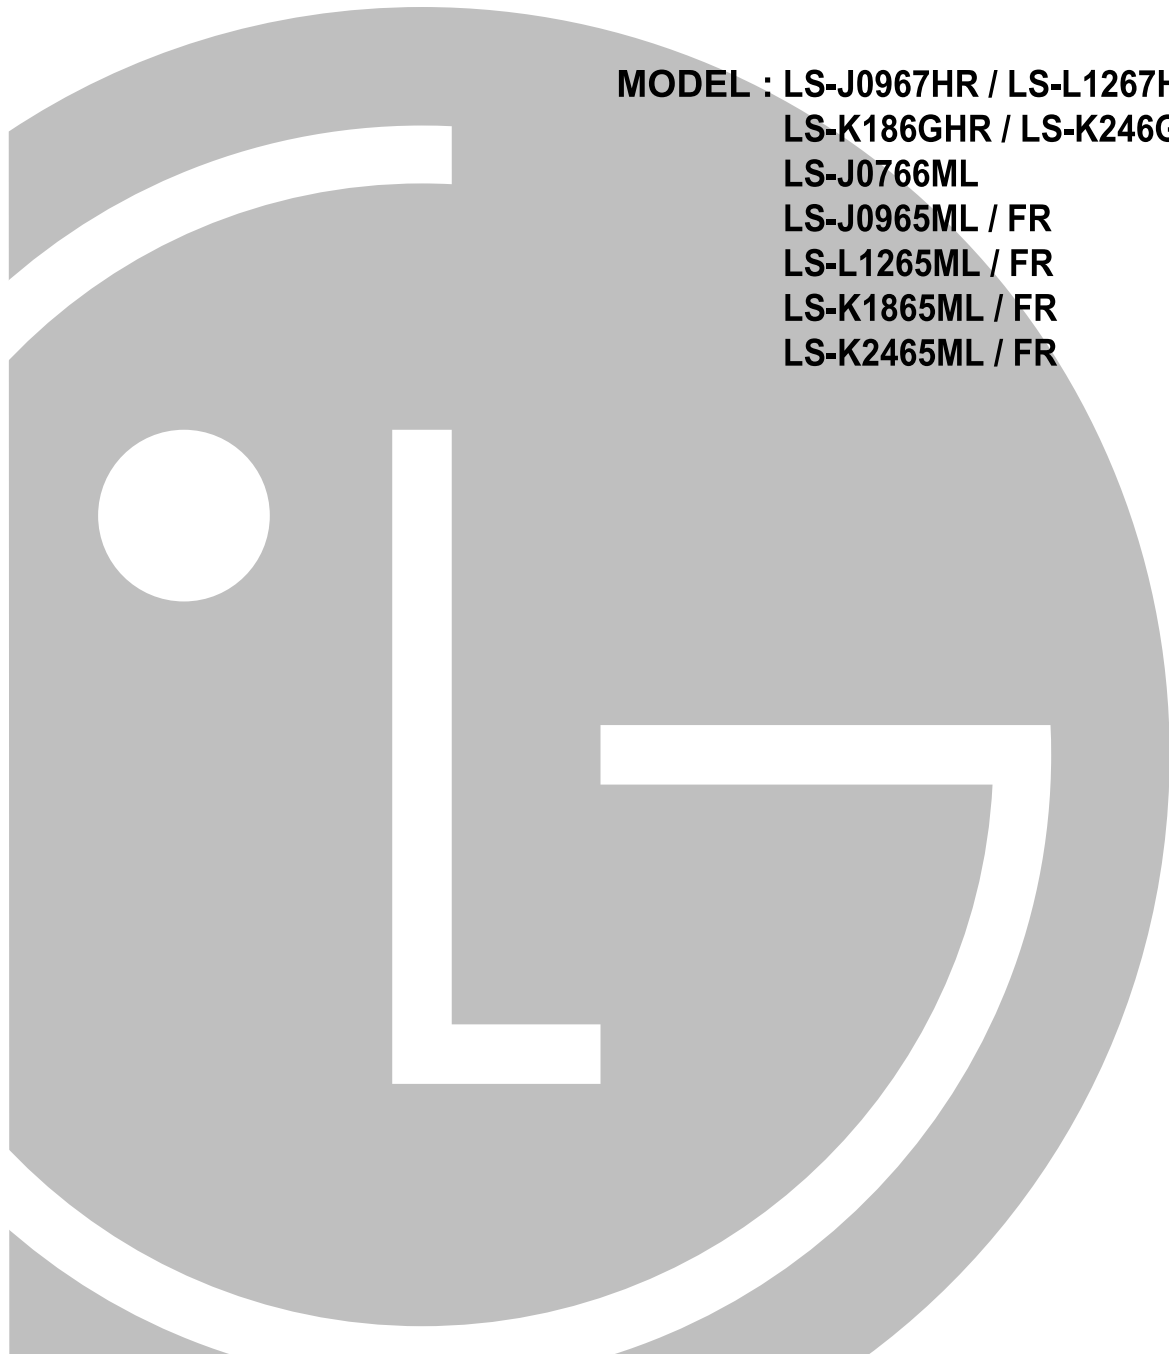

Contents

Functions	3
Product Specifications	5
Dimensions	7
Refrigeration Cycle Diagram	10
Wiring Diagram	11
Operation Details	13
Display Function	20
Self-diagnosis Function	20
Installation	21
Operation	37
Disassembly of the parts (Indoor Unit)	39
2-way, 3-way Valve	45
Cycle Troubleshooting Guide	52
Electronic Parts Troubleshooting Guide	53
Electronic Control Device	60
Schematic Diagram	62
Exploded View and Replacement Parts List	64

Functions

Indoor Unit

Operation ON/OFF by Remote controller

Sensing the Room Temperature

- Room temperature sensor. (THERMISTOR)

Room temperature control

- Maintains the room temperature in accordance with the Setting Temp.

Starting Current Control

- Indoor fan is delayed for 5 sec at the starting.

Time Delay Safety Control

- Restarting is inhibited for approx. 3 minutes.

Indoor Fan Speed Control

- High, Med, Low, CHAOS

Operation indication Lamps (LED)

- ⓪ --- Lights up in operation
- ☆ --- Lights up in Sleep Mode
- ⌚ --- Lights up in Timer Mode
- * --- Lights up in Defrost Mode (for Heating Model)

OUTDOOR --- Lights up in compressor operation (for Cooling Model)

Soft Dry Operation Mode

- Intermittent operation of fan at low speed.

Sleep Mode Auto Control

- The fan is switched to low(Cooling), med(Heating) speed.
- The unit will be stopped after 1, 2, 3, 4, 5, 6, 7 hours.

Natural Air Control by CHAOS Logic

- The fan is switched to intermittent or irregular operation
- The fan speed is automatically switched from high to low speed.

Airflow Direction Control

- The louver can be set at the desired position or swing up and down automatically.

Defrost(Deice) control (Heating)

- Both the indoor and outdoor fan stops during defrosting.

Hot-start Control (Heating)

- The indoor fan stops until the evaporator pipe temperature will be reached at 28°C.

Remote Control

Operation ON/OFF



Operation Mode Selection



(Cooling model only)



(Heating model only)

Cooling Operation Mode.(*)

Auto Operation Mode.(▲)

Healthy Dehumidification Operation Mode.(◊)

Heating Operation Mode.(☼)

Fan Speed Selection



(Low)

(Med)

(High)


(CHAOS)

Room, Temperature Display



: (High:39°C ← → Low:11°C)

Temperature Setting



Cooling — Down to 18°C
Up to 30°C

Heating — Down to 16°C
Up to 30°C


JET COOL



PLASMA(Optional)/NEGATIVE ION(Optional)



Setting the Time or Timer



Timer Selection



: OFF, ON, OFF ← → ON

Timer Setting



Timer Cancel



: Cancel Sleep Mode, Timer ON or Timer OFF

Sleep Operation



: 1, 2, 3, 4, 5, 6, 7, Off Timer

Airflow Direction Control



Fan Operation Mode



: Fan Operates without cooling or heating.

Horizontal Airflow Direction Control Button(Optional)



Reset

● RESET

Product Specifications

Item	Model Name		LS-J0760RL/RM/RN	LS-J0965ML/FR	LS-L1265ML/FR
	Unit				
Cooling Capacity	Btu/h		7,000	9,000	12,000
Heating Capacity			-	-	-
Moisture Removal	ℓ/h		1.0	1.2	1.5
Power Source	∅ , V, Hz		1∅ , 220-240V, 50Hz	1∅ , 220-240V, 50Hz	1∅ , 220-240V, 50Hz
Air Circulation	Indoor	m ³ /min	6.4	6.7	9.5
	Outdoor		18	25	25
Noise Level	Indoor	dB (A)±3	34	34	36
	Outdoor		46	46	46
Input	Cooling	W	750	930	1,200
	Heating		-	-	-
Running Current	Cooling	A	3.3	4.1	5.5
	Heating		-	-	-
E.E.R.	Cooling	Btu/hW	9.33	9.68	10.0
C.O.P	Heating		-	-	-
Motor Output	Indoor	W	7.5	7.5	13
	Outdoor		18	18	26
Dimensions (W H D)	Indoor	mm	802 X 262 X 165	802 X 262 X 165	888 x 287 x 170
	Outdoor		575 X 525 X 260	575 X 525 X 260	770 x 540 x 245
Net. Weight	Indoor	kg	7	7	9.5
	Outdoor		23	27	34
Refrigerant (R-410A)	g		750	860	800
Airflow Direction Control (Up & Down)			O	O	O
Remocon Type			L.C.D. Wireless	L.C.D. Wireless	L.C.D. Wireless
Service Valve	Liquid	inch(mm)	1/4" (6.35)	1/4" (6.35)	1/4" (6.35)
	Gas		3/8" (9.52)	3/8" (9.52)	3/8" (9.52)
Sleeping Operation			O	O	O
Drain Hose			O	O	O
Connecting Cable			1.0mm ²	1.0mm ²	1.0mm ²
Power Cord			1.0mm ²	1.0mm ²	1.0mm ²

Product Specifications





Item		Model Name		LS-J0967HR	LS-L1267HR	LS-K186GHR	LS-K246GHR
		Unit					
Cooling Capacity		Btu/h		9,000	12,000	18,000	24,000
Heating Capacity				9,300	13,000	19,000	24,000
Moisture Removal		ℓ/h		1.2	1.5	2.5	3.0
Power Source		∅ , V, Hz	1∅ , 220-240V, 50Hz				
Air Circulation	Indoor	m ³ /min		6.7	9.5	12	14
	Outdoor			25	25	42	45
Noise Level	Indoor	dB (A)±3		33	36	39	44
	Outdoor			46	46	53	54
Input	Cooling	W		900	1,280	1,860	2,670
	Heating			870	1,150	1,870	2,610
Running Current	Cooling	A		3.9	5.8	8.7	12.6
	Heating			3.8	5.2	8.7	12.2
E.E.R.	Cooling	Btu/hW		10.0	9.4	9.68	9.00
C.O.P	Heating			3.13	3.31	2.98	2.69
Motor Output	Indoor	W		5.7	13	20	21
	Outdoor			14.5	26	62	65
Dimensions (W xH xD)	Indoor	mm		802 x 262 x 165	888 x 287 x 170	1,080 x 314 x 181	1,080 x 314 x 181
	Outdoor			770 x 540 x 245	770 x 540 x 245	870 x 655 x 320	870 x 655 x 320
Net. Weight	Indoor	kg		7.0	9	12	12
	Outdoor			33	35	61	63
Refrigerant (R22)		g		590	810	1,320	1,520
Airflow Direction Control (Up & Down)				O	O	O	O
Remocon Type				L.C.D Wireless	L.C.D Wireless	L.C.D Wireless	L.C.D Wireless
Service Valve	Liquid	inch(mm)		1/4" (6.35)	1/4" (6.35)	1/4" (6.35)	3/8" (9.52)
	Gas			3/8" (9.52)	1/2" (12.7)	1/2" (12.7)	5/8" (15.88)
Sleeping Operation				O	O	O	O
Drain Hose				O	O	O	O
Connecting Cable				1.0mm ²	1.0mm ²	1.5mm ²	2.5mm ²
Power Cord				1.0mm ²	1.0mm ²	1.5mm ²	2.5mm ²

Product Specifications

Item		Model Name		LS-K1865ML/HL	LS-K1865ML/FR	LS-K2465ML/FR
		Unit				
Cooling Capacity		Btu/h		18,000	18,000	24,000
Heating Capacity				-	-	-
Moisture Removal		l/h		2.5	2.5	2.5
Power Source		∅ , V, Hz		1∅ , 220-240V, 50Hz	1∅ , 220-240V, 50Hz	1∅ , 220-240V, 50Hz
Air Circulation	Indoor	m ³ /min		12	14	16
	Outdoor			42	42	42
Noise Level	Indoor	dB (A)±3		39	38	46
	Outdoor			53	51	58
Input	Cooling	W		1,900	1,900	2,400
	Heating			-	-	-
Running Current	Cooling	A		8.5	8.5	11.0
	Heating			-	-	-
E.E.R.	Cooling	Btu/hW		9.47	9.5	10.0
C.O.P	Heating			-	-	-
Motor Output	Indoor	W		20	22	35
	Outdoor			62	61	83
Dimensions (W x H x D)	Indoor	mm		1,080 x 314 x 181	1,080 x 314 x 181	1,080 x 314 x 181
	Outdoor			870 x 655 x 320	870 x 655 x 320	870 x 655 x 320
Net. Weight	Indoor	kg		12	12	12
	Outdoor			57	57	65
Refrigerant (R-410A)		g		1,220	1,220	1,400
Airflow Direction Control (Up & Down)				0	0	0
Remocon Type				L.C.D Wireless	L.C.D Wireless	L.C.D Wireless
Service Valve	Liquid	inch(mm)		1/4" (6.35)	3/8" (9.52)	3/8" (9.52)
	Gas			1/2" (12.7)	1/2" (12.7)	1/2" (12.7)
Sleeping Operation				0	0	0
Drain Hose				0	0	0
Connecting Cable				1.5mm ²	2.5mm ²	2.5mm ²
Power Cord				1.5mm ²	2.5mm ²	2.5mm ²




Dimensions

(1) Indoor Unit

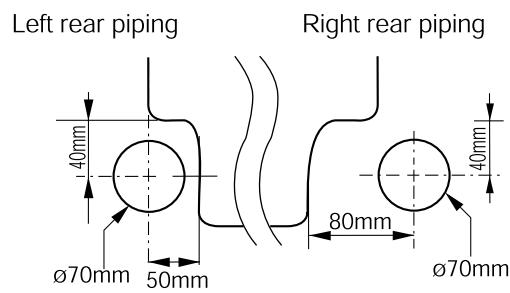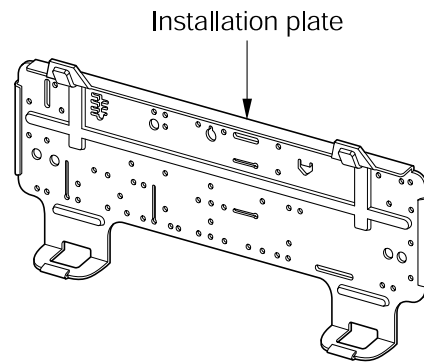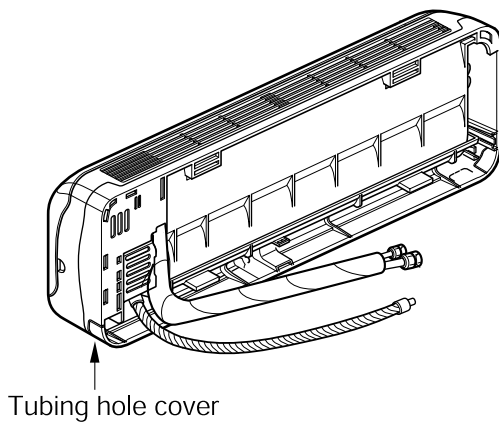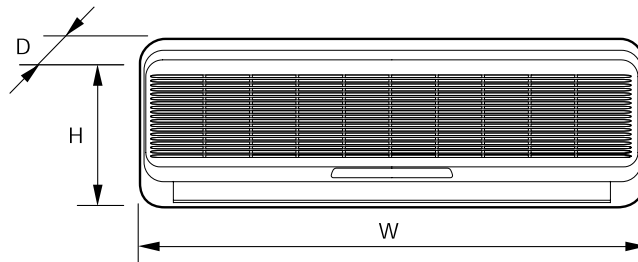




DIM	MODEL		7K Btu 9K Btu	12K Btu	18K Btu 24K Btu
	Unit				
W	mm		802	888	1,080
H	mm		262	287	314
D	mm		165	170	181

(2) Outdoor Unit

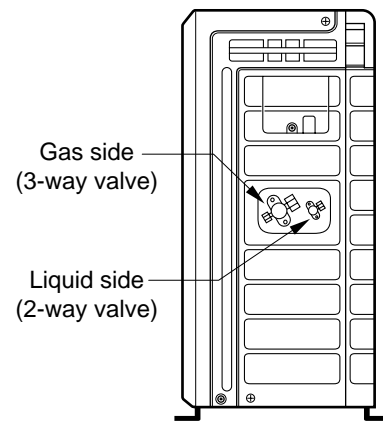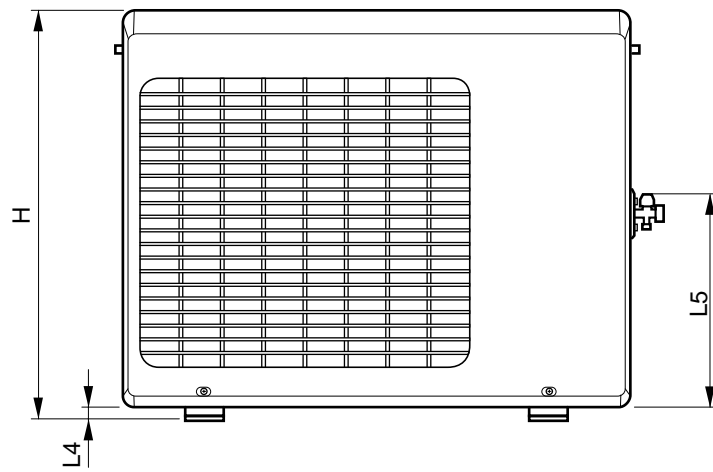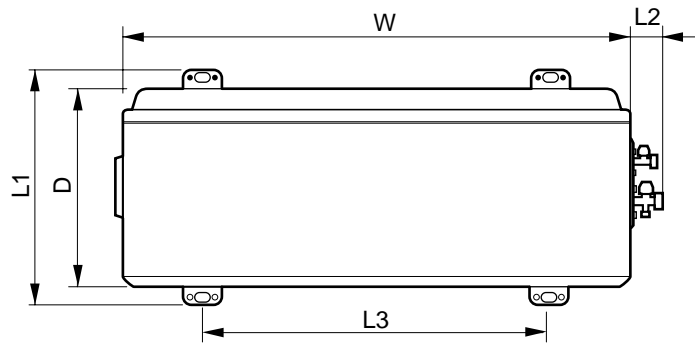




MODEL		7K Btu
		8K Btu
DIM	unit	9K Btu(Cooling Only)
W	mm	564
H	mm	525
D	mm	265
L1	mm	294
L2	mm	66
L3	mm	374
L4	mm	17
L5	mm	270

(3) Outdoor Unit (9K Btu Heat Pump)

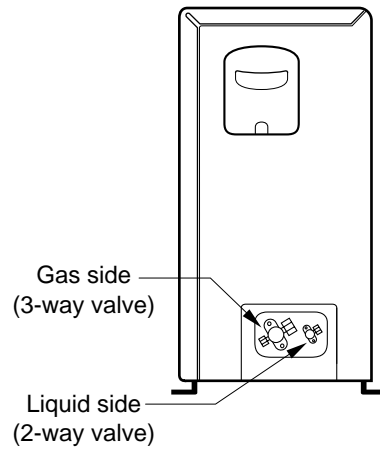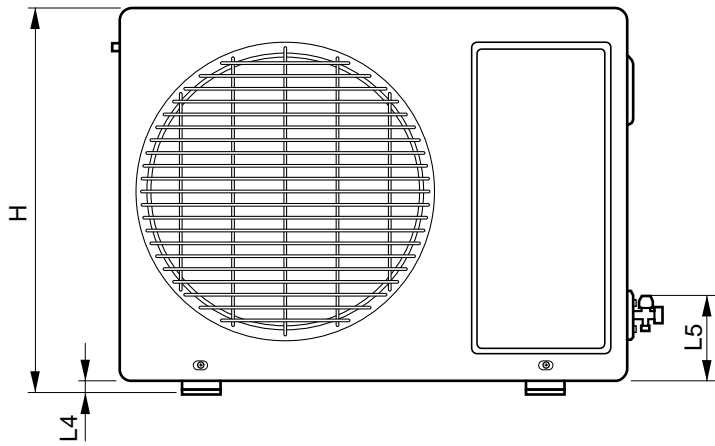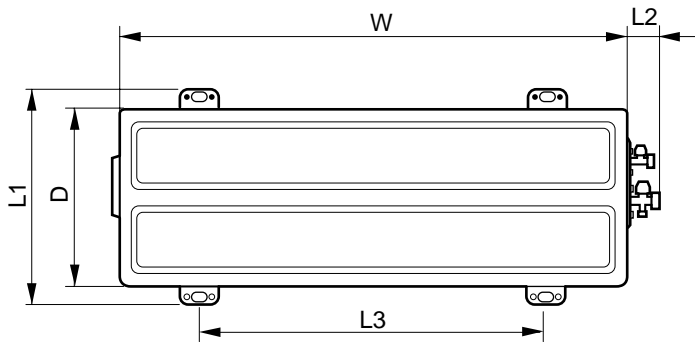


DIM	MODEL	
	unit	9K Btu Heat Pump
W	mm	770
H	mm	540
D	mm	245
L1	mm	285
L2	mm	65
L3	mm	518
L4	mm	10
L5	mm	100

(2) Outdoor Unit

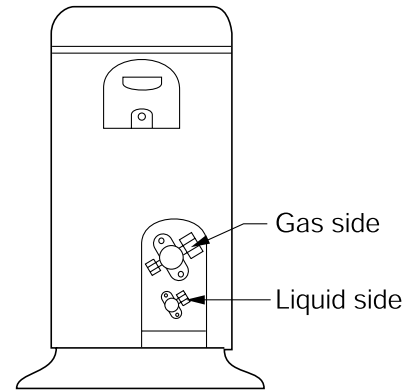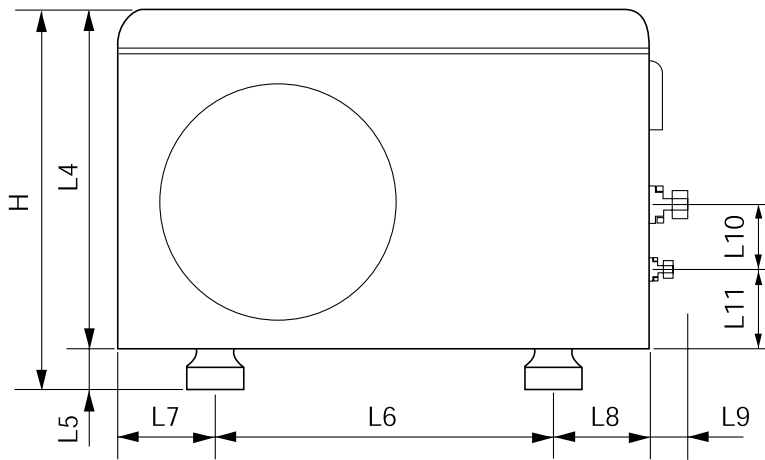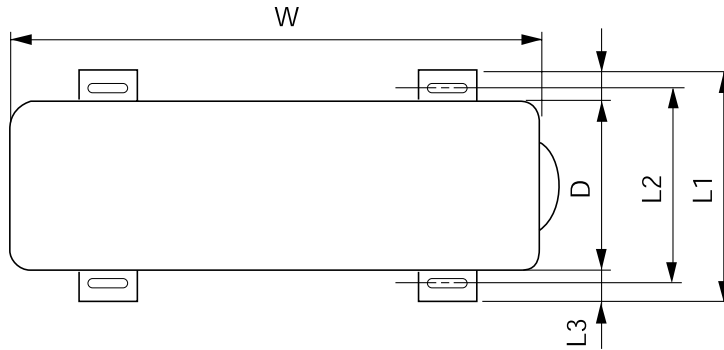

MODEL		18K Btu	24K Btu
DIM			
W	mm		870
H	mm		655
D	mm		320
L1	mm		370
L2	mm		340
L3	mm		25
L4	mm		630
L5	mm		25
L6	mm		546
L7	mm		162
L8	mm		162
L9	mm		54
L10	mm		74.5
L11	mm		79

Refrigeration Cycle Diagram

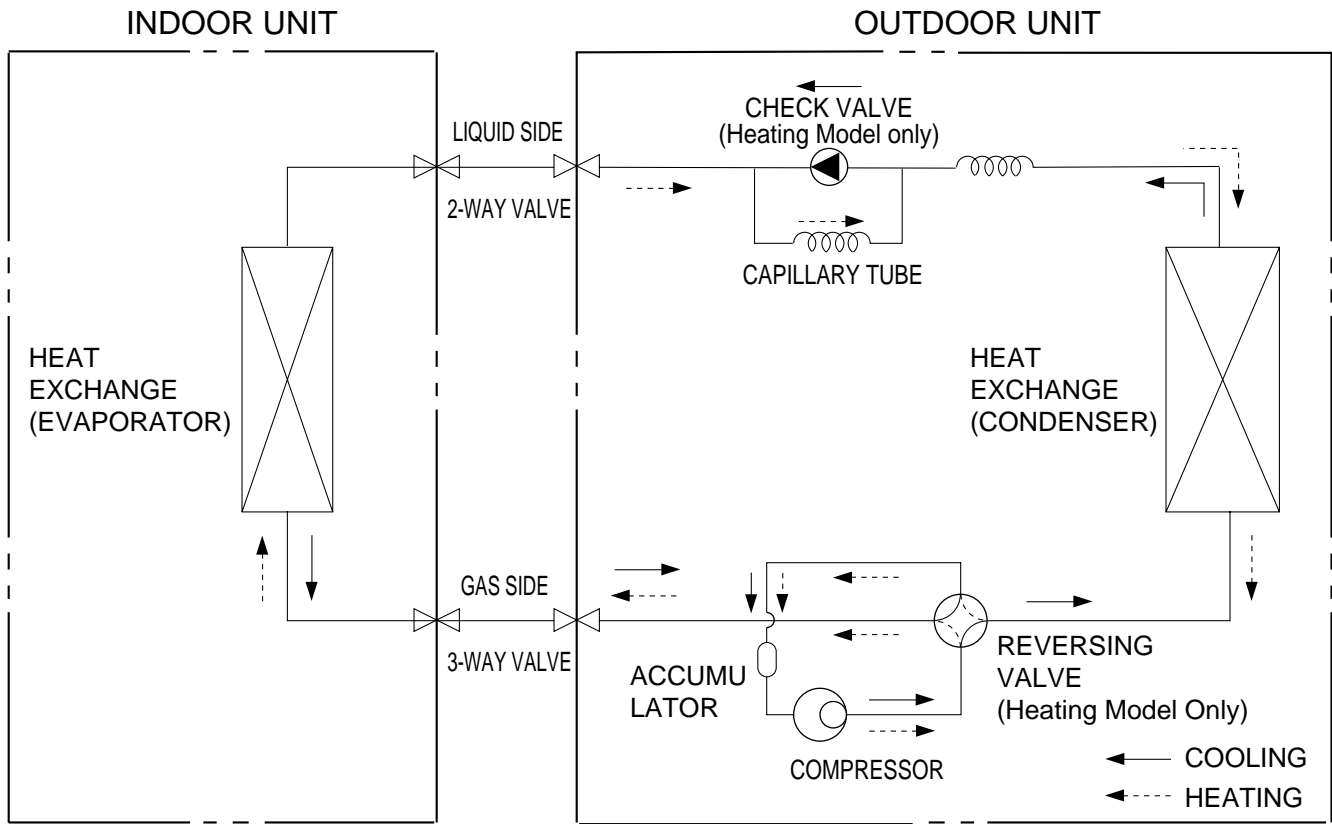


MODEL	Pipe size(Diameter:Ø)		MAX. Piping length (m)	Max Elevation (m)
	Gas(inch)	Liquid(inch)		
7K, 8K, 9K Btu SERIES	3/8"	1/4"	15	7

Wiring Diagram


(1) 7K, 8K, 9K Btu Cooling Only

① Indoor Unit

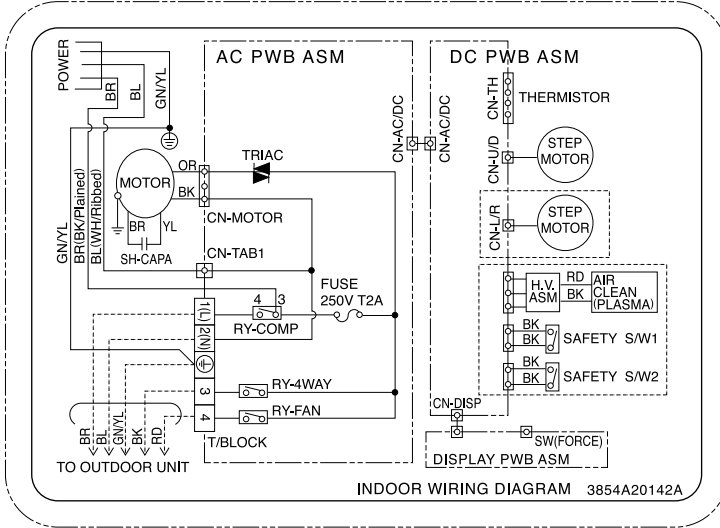


Indoor unit	Model	Outdoor unit
①	LS-J0967HR	②
	LS-L1267HR	③
	LS-K186GHR	③
	LS-K246GHR	

② Outdoor Unit

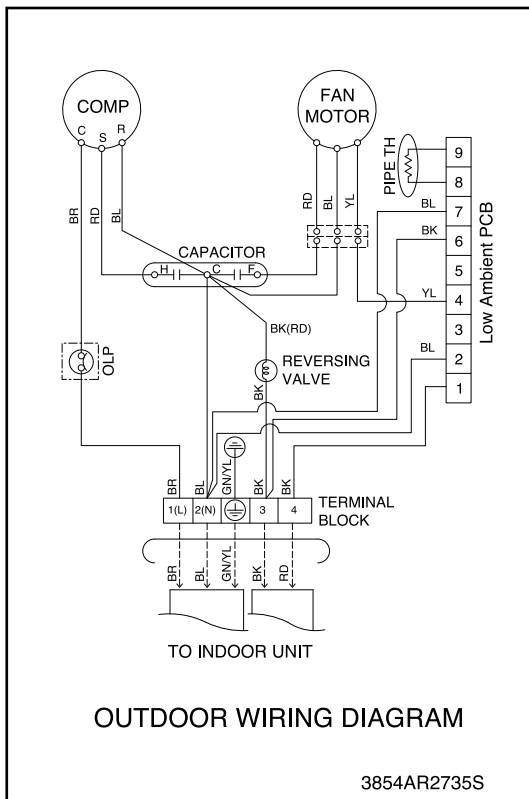

③ Outdoor Unit

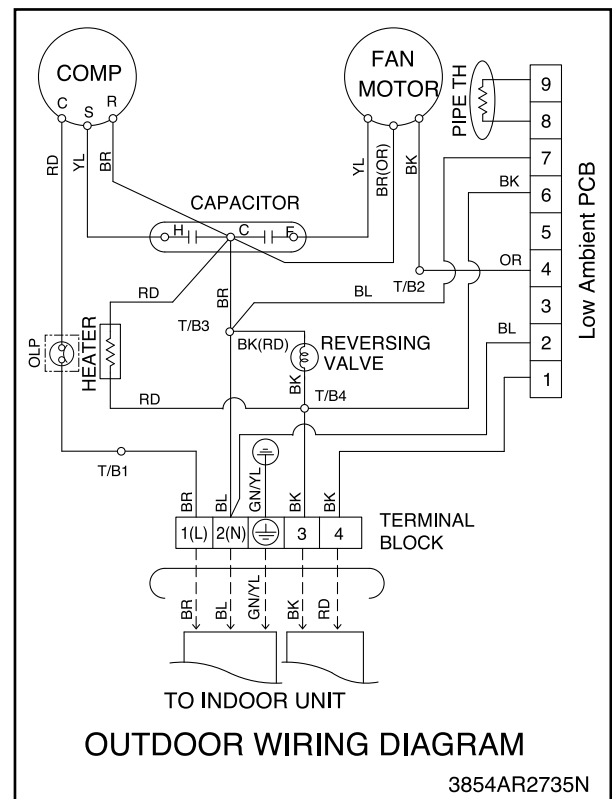

Operation Details

1. MAIN UNIT FUNCTION

• DISPLAY

1) C/O Model

Operation Indicator

- On while in appliance operation, off while in appliance pause
- Flashing while in disconnection or short in Thermistor (3 sec off / 0.5 sec on)

Sleep Timer Indicator

- On while in sleep timer mode, off when sleep timer cancel or appliance operation pause

Timer Indicator

- On while in timer mode (on/off), off when timer mode is completed or canceled.

Comp. Running Indicator

- While in appliance operation, on while in outdoor unit compressor running, off while in compressor off

2) H/P Model

Operation Indicator

- On while in appliance operation, off while in appliance pause
- Flashing while in disconnection or short in Thermistor (3 sec off / 0.5 sec on)

Sleep Timer Indicator

- On while in sleep timer mode, off when sleep timer cancel or appliance operation pause

Timer Indicator

- On while in timer mode (on/off), off when timer mode is completed or canceled

Defrost Indicator

- Off except when hot start during heating mode operation or while in defrost control

■ Cooling Mode Operation

- When the intake air temperature reaches 0.5°C below the setting temp, the compressor and the outdoor fan stop.
- When it reaches 0.5°C above the setting temp, they start to operate again.
 - Compressor ON Temp ▶ Setting Temp+0.5°C
 - Compressor OFF Temp ▶ Setting Temp-0.5°C
- While in compressor running, operating with the airflow speed set by the remote control. While in compressor not running, operating with the low airflow speed regardless of the setting.

■ Healthy Dehumidification Mode

- When the dehumidification operation input by the remote control is received, the intake air temperature is detected and the setting temp is automatically set according to the intake air temperature.
 - 26°C ≤ Intake Air Temp ▶ 25°C
 - 24°C ≤ Intake Intake Air Temp < 26°C ▶ Intake Air Temp-1°C
 - 18°C ≤ Intake Intake Air Temp < 24°C ▶ Intake Air Temp-0.5°C
 - Intake Air Temp < 18°C ▶ 18°C

- While in compressor off, the indoor fan repeats low airflow speed and pause.
- While the intake air temp is between compressor on temp. and compressor off temp., 10-min dehumidification operation and 4-min compressor off repeat.
Compressor ON Temp. ▶ Setting Temp+0.5°C
Compressor OFF Temp. ▶ Setting Temp-0.5°C
- In 10-min dehumidification operation, the indoor fan operates with the low airflow speed.

■ Heating Mode Operation

- When the intake air temp reaches +3°...above the setting temp, the compressor is turned off. When below the setting temp, the compressor is turned on.
Compressor ON Temp. ▶ Setting Temp.
Compressor OFF Temp. ▶ Setting Temp.+3°C
- While in compressor on, the indoor fan is off when the indoor pipe temp. is below 20°C, when above 28°C , it operates with the low or setting airflow speed. When the indoor pipe temp is between 20°C and 28°C, it operates with Super-Low(while in sleep mode, with the medium airflow speed).
- While in compressor off, the indoor fan is off when the indoor pipe temp is below 33°C, when above 35°C , it operates with the low airflow speed.
- If overloaded while in heating mode operation, in order to prevent the compressor from OLP operation, the outdoor fan is turned on/off according to the indoor pipe temp.
- While in defrost control, both of the indoor and outdoor fans are turned off.

■ Defrost Control

- While in heating mode operation in order to protect the evaporator pipe of the outdoor unit from freezing, reversed to cooling cycle to defrost the evaporator pipe of the outdoor unit.
- Defrost control is available 60 min. later since heating mode operation started, and it will not prolong over 12 min.
- Defrost control is carried out according to the following priority order while in heating mode operation.
 - 1st priority: Defrost control is carried out according to the indoor pipe temp 60 min. later since heating mode operation started.
 - 2nd priority : The temp differences between the indoor pipe temp and the intake air temp 25 min. later ($\Delta T1$) and 60 min. later ($\Delta T2$) since heating mode operation started are measured, then defrost control is carried out according to the difference ($\Delta T = \Delta T1 - \Delta T2$).
 - 3rd priority : Defrost control is carried out according to the temp difference ($\Delta TE = TE1 - TE2$) between the indoor pipe temperatures of 25 min later ($TE1$) and 60 min later ($TE2$) after heating mode operation started.
- When the indoor pipe temp is 41°C or above, defrost control is not carried out even if the condition is one of the defrost conditions above.
- While in defrost control, the compressor is on and the indoor fan, the outdoor fan, and the 4 way valve are off.

■ Fuzzy Operation (C/O Model)

- According to the temperature set by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
Compressor ON Temp ◀ Setting Temp + 0.5°C
Compressor OFF Temp ◀ Setting Temp + 0.5°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
26°C ≤ Intake Air Temp ◀ 25°C
24°C ≤ Intake Air Temp < 26°C ◀ Intake Air Temp + 1°C
22°C ≤ Intake Air Temp < 24°C ◀ Intake Air Temp + 0.5°C
18°C ≤ Intake Air Temp < 22°C ◀ Intake Air Temp
Intake Air Temp < 18°C ◀ 18°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature.

■ Fuzzy Operation (H/P Model)

- When any of operation mode is not selected like the moment of the power on or when 3 hrs has passed since the operation off, the operation mode is selected.
- When determining the operation mode, the compressor, the outdoor fan, and the 4 way valve are off and only the indoor fan is operated for 15 seconds. Then an operation mode is selected according to the intake air temp at that moment as follows.
24°C ≤ Intake Air Temp ◀ Fuzzy Operation for Cooling
21°C ≤ Intake Air Temp < 24°C ◀ Fuzzy Operation for Dehumidification
Intake Air Temp < 21°C ◀ Fuzzy Operation for Heating
- If any of the operation modes among cooling / dehumidification / heating mode operations is carried out for 10 sec or longer before Fuzzy operation, the mode before Fuzzy operation is operated.

1) Fuzzy Operation for Cooling

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
Compressor ON Temp ◀ Setting Temp + 0.5°C
Compressor OFF Temp ◀ Setting Temp + 0.5°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
26°C ≤ Intake Air Temp ◀ 25°C
24°C ≤ Intake Air Temp < 26°C ◀ Intake Air Temp + 1°C
22°C ≤ Intake Air Temp < 24°C ◀ Intake Air Temp + 0.5°C
18°C ≤ Intake Air Temp < 22°C ◀ Intake Air Temp
Intake Air Temp < 18°C ◀ 18°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is automatically selected according to the temperature.

2) Fuzzy Operation for Dehumidification

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 0.5°C or more below the setting temp, the compressor is turned off. When 0.5°C or more above the setting temp, the compressor is turned on.
 - Compressor ON Temp ◀ Setting Temp + 0.5°C
 - Compressor OFF Temp ◀ Setting Temp+0.5°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
 - 26°C ≤ Intake Air Temp ◀ 25°C
 - 24°C ≤ Intake Air Temp < 26°C ◀ Intake Air Temp+1°C
 - 22°C ≤ Intake Air Temp < 24°C ◀ Intake Air Temp+0.5°C
 - 18°C ≤ Intake Air Temp < 22°C ◀ Intake Air Temp
 - Intake Air Temp < 18°C ◀ 18°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan repeats the low airflow speed or pause as in dehumidification operation.

3) Fuzzy Operation for Heating

- According to the setting temperature selected by Fuzzy rule, when the intake air temp is 3°C or more above the setting temp, the compressor is turned off. When below the setting temp, the compressor is turned on.
 - Compressor ON Temp ◀ Setting Temp
 - Compressor OFF Temp ◀ Setting Temp + 3°C
- At the beginning of Fuzzy mode operation, the setting temperature is automatically selected according to the intake air temp at that time.
 - 20°C ≤ Intake Air Temp ◀ Intake Air Temp + 0.5°C
 - Intake Air Temp < 20°C ◀ 20°C
- When the Fuzzy key (Temperature Control key) is input after the initial setting temperature is selected, the Fuzzy key value and the intake air temperature at that time are compared to select the setting temperature automatically according to the Fuzzy rule.
- While in Fuzzy operation, the airflow speed of the indoor fan is set to the high or the medium according to the intake air temperature and the setting temperature.

■ Airflow Speed Selection

- The airflow speed of the indoor fan is set to high, medium, low, or chaos (auto) by the input of the airflow speed selection key on the remote control.

■ On-Timer Operation

- When the set time is reached after the time is input by the remote control, the appliance starts to operate.
- The timer LED is on when the on-timer is input. It is off when the time set by the timer is reached.
- If the appliance is operating at the time set by the timer, the operation continues.

■ Off-Timer Operation

- When the set time is reached after the time is input by the remote control, the appliance stops operating.
- The timer LED is on when the off-timer is input. It is off when the time set by the timer is reached.
- If the appliance is on pause at the time set by the timer, the pause continues.

■ Off-Timer \Leftrightarrow On-Timer Operation



- When the set time is reached after the on/off time is input by the remote control, the on/off-timer operation is carried out according to the set time.

■ Sleep Timer Operation

- When the sleep time is reached after <1,2,3,4,5,6,7,0(cancel) hr> is input by the remote control while in appliance operation, the operation of the appliance stops.
- While the appliance is on pause, the sleep timer mode cannot be input.
- While in cooling mode operation, 30 min later since the start of the sleep timer, the setting temperature increases by 1°C. After another 30 min elapse, it increases by 1°C again.
- When the sleep timer mode is input while in cooling cycle mode, the airflow speed of the indoor fan is set to the low.
- When the sleep timer mode is input while in heating cycle mode, the airflow speed of the indoor fan is set to the medium.

■ Chaos Swing Mode

- By the Chaos Swing key input, the upper/lower vane automatically operates with the Chaos Swing or they are fixed to the desired direction.
- While in Chaos Swing mode, the angles of cooling and heating cycle operations are different.

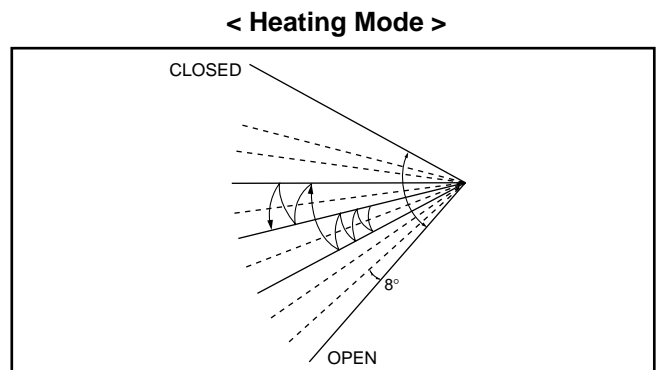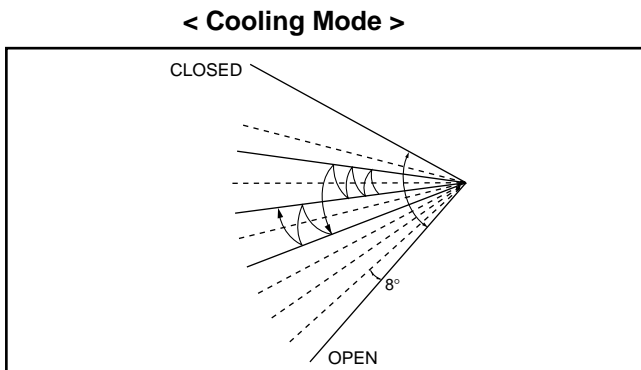

■ Chaos Natural Wind Mode

- When the Chaos Natural Wind mode is selected and then operated, the high, medium, or low speed of the airflow mode is operated for 2~15 sec. randomly by the Chaos Simulation.

■ Jet Cool Mode Operation (C/O Model)


- If the Jet Cool key is input at any operation mode while in appliance operation, the Jet Cool mode operates.
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- When the Jet Cool key is input, the upper/lower vanes are reset to those of the initial cooling mode and then operated in order that the air outflow could reach further.

■ Jet Cool Mode Operation (H/P Model)

- While in heating mode or Fuzzy operation, the Jet Cool key cannot be input. When it is input while in the other mode operation (cooling, dehumidification, ventilation), the Jet Cool mode is operated.
- In the Jet Cool mode, the indoor fan is operated at super-high speed for 30 min at cooling mode operation.
- In the Jet Cool mode operation, the room temperature is controlled to the setting temperature, 18°C.
- When the sleep timer mode is input while in the Jet Cool mode operation, the Jet Cool mode has the priority.
- When the Jet Cool key is input, the upper/lower vanes are reset to those of the initial cooling mode and then operated in order that the air outflow could reach further.

■ Auto Restarting Operation

- When the power is restored after a sudden power failure while in appliance operation, the mode before the power failure is kept on the memory and the appliance automatically operates in the mode on the memory.
- The slide switch on the main unit of the appliance should be on the Auto Restarting position in order that the Auto Restarting operation is available.
- Operation Mode that is kept on the memory
 - State of Operation ON/OFF
 - Operation Mode/Setting Temp/Selected Airflow Speed
 - Sleep Timer Mode/Remaining Time of Sleep Timer (unit of hour)
- If no input by the remote control or no switching of the slide switch within 7 hr after the appliance operates by the Auto Restarting operation, the appliance is forced to stop at the moment of 7-hr elapse.

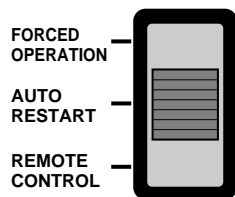

Slide Switch

■ Forced Operation (C/O Model)

- To operate the appliance by force in case that the remote control is lost, the forced operation selection switch is on the main unit of the appliance to operate the appliance in the standard conditions.
- When the power is supplied while the slide switch is on the forced operation position, or when the slide switch position is switched to the Auto Restarting position (or test operation) or switched from the remote control position to the forced operation position while the power is on, the forced operation is carried out.
- When the slide switch position is switched from the forced operation position to the Auto Restarting position or the remote control position, the forced operation is canceled and the appliance stops operating.
- The forced operation is carried out in cooling mode with the setting temperature 22°C and the high speed of airflow.
- While in forced operation, the key input by the remote control has no effect and the buzzer sounds 10 times to indicate the forced operation.

■ Forced Operation (H/P Model)

- To operate the appliance by force in case that the remote control is lost, the forced operation selection switch is on the main unit of the appliance to operate the appliance in the standard conditions.
- When the power is supplied while the slide switch is on the forced operation position, or when the slide switch position is switched to the Auto Restarting (or test operation) position or switched from the remote control position to the forced operation position while the power is on, the forced operation is carried out.
- When the slide switch position is switched from the forced operation position to the Auto Restarting position or the remote control position, the forced operation is canceled and the appliance stops operating.
- The forced operation is carried out in cooling mode with the setting temperature 22°C and the high speed of airflow.
- In the forced operation mode, the indoor fan is operated at low speed for around 15 sec and then the operation condition is set according to the intake air temperature as follows.
 - 24°C ≤ Intake Air Temp ◀ Cooling Mode Operation, 22°C, High Speed
 - 21°C ≤ Intake Air Temp < 24°C ◀ Dehumidification Operation, 23°C, High Speed
 - Intake Air Temp < 21°C ◀ Heating Mode Operation, 24°C, High Speed
- While in forced operation, the key input by the remote control has no effect and the buzzer sounds 10 times to indicate the forced operation.

■ Remote Control Operation Mode

- When the remote control is selected by the slide switch on the main unit, the appliance operates according to the input by the remote control.

■ Protection of the evaporator pipe from frosting

- If the indoor pipe temp is below 0°C in 7 min. after the compressor operates without any pause while in cooling cycle operation mode, the compressor and the outdoor fan are turned off in order to protect the indoor evaporator pipe from frosting.
- When the indoor pipe temp is 7°C or higher after 3 min. pause of the compressor, the compressor and the outdoor fan is turned on according to the condition of the room temperature.

■ Buzzer Sounding Operation


- When the appliance-operation key is input by the remote control, the short "beep-beep-" sounds.
- When the appliance-pause key is input by the remote control, the long "beep—" sounds.
- When a key is input by the remote control while the slide switch on the main unit of the appliance is on the forced operation position, the error sound "beep-beep-beep-beep-beep-" is made 10 times to indicate that the remote control signal cannot be received.

■ Air Cleaner Operation


- When an air cleaner function is selected during Air Conditioner operation
 - Plasma air cleaner function will be operated while in any operation mode with selecting the function.
 - The function is to be stopped while it is operating with selecting the function.
- When an air cleaner function is selected during operation off
 - The function will be only operated.
- When inlet grille of air conditioner is opened during plasma operation, High Voltage Generator(H.V.B) is to be stopped. When inlet grille of air conditioner is closed during plasma operation, High Voltage Generator(H.V.B) will be operated again.

Display Function

1. Heating Model

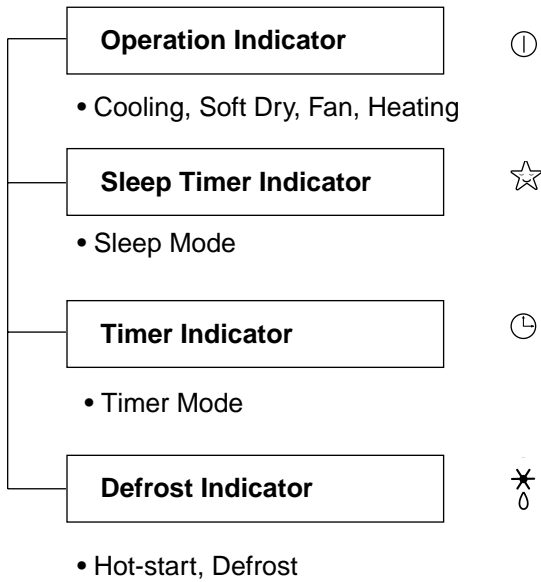

2. Cooling Model

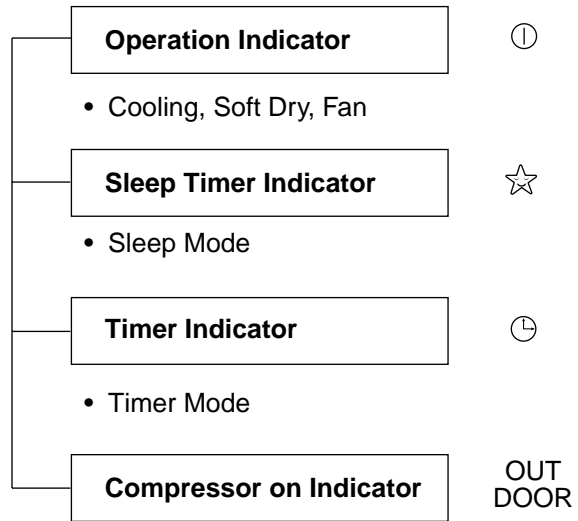

Self-diagnosis Function

■ Thermistor Error Indicator

- When the indoor pipe sensor or the room temperature sensor is open or is shorted, the error is indicated.
- To indicate the error, the operation LED (or the cooling LED) flashed at 3 sec interval.
- When the error is cleared, the LED stops flashing, the operation (or cooling) LED is on.
- While in appliance pause, the error is not indicated.


Installation

1. Installation of indoor, Outdoor unit

1) Selection of the best location

1. Indoor unit

- Do not have any heat or steam near the unit.
- Select a place where there are no obstacles in front of the unit.
- Make sure that condensation drainage can be conveniently routed away.
Do not install near a doorway.
- Ensure that the space around the left and right of the unit is more than "A". The unit should be installed as high on the wall as possible, allowing a minimum of "B" from ceiling.
- Use a stud finder to locate studs to prevent unnecessary damage to the wall.

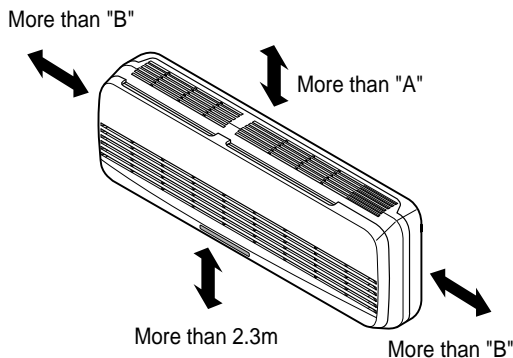

CAUTION


Install the indoor unit on the wall where the height from the floors more than 2.3 meters.

Grade	Clearance(cm)	
	A	B
7K~28K	10	5
30K~38K	30	12

2. Outdoor unit




- If an awning is built over the unit to prevent direct sunlight or rain exposure, make sure that heat radiation from the condenser is not restricted.
- Ensure that the space around the back and sides is more than 10cm. The front of the unit should have more than 70cm of space.
- Do not place animals and plants in the path of the warm air.
- Take the air conditioner weight into account and select a place where noise and vibration are minimum.

- Select a place so that the warm air and noise from the air conditioner do not disturb neighbors.

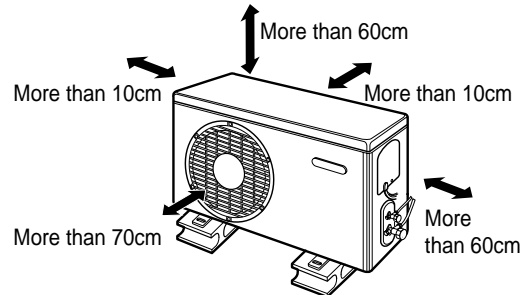

2) Piping length and elevation

Capacity (Btu/h)	Pipe Size		Standard Length (m)	Max. Elevation B (m)	Max. Length A (m)	Additional Refrigerant (g/m)
	GAS	LIQUID				
7k~14k	3/8"(Ø9.52)	1/4"(Ø6.35)	4 or 7.5	7	15	20
	1/2"(Ø12.7)	1/4"(Ø6.35)	4 or 7.5	7	15	20
18k~28k	1/2"(Ø12.7)	1/4"(Ø6.35)	4 or 7.5	15	30	20
	5/8"(Ø15.88)	3/8"(Ø9.52)	4 or 7.5	15	30	30
30k~38k	5/8"(Ø15.88)	3/8"(Ø9.52)	7.5	15	30	30
	3/4"(Ø19.05)	3/8"(Ø9.52)	7.5	15	30	50

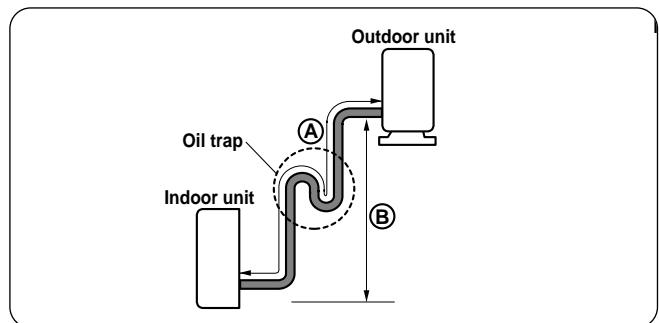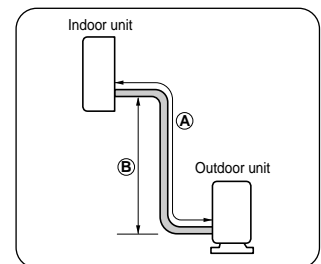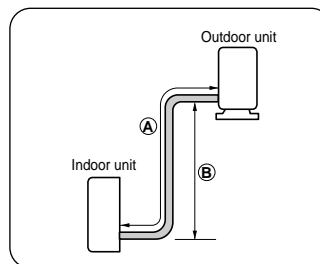

If case more than 5m

CAUTION


- Capacity is based on standard length and maximum allowance length is on the basis of reliability.
- Oil trap should be installed every 5~7 meters.

3) How to fix installation plate


The wall you select should be strong and solid enough to prevent vibration

1. Mount the installation plate on the wall with four type A screws. If mounting the unit on a concrete wall, use anchor bolts.


- Mount the installation plate horizontally by aligning the centerline using a level.

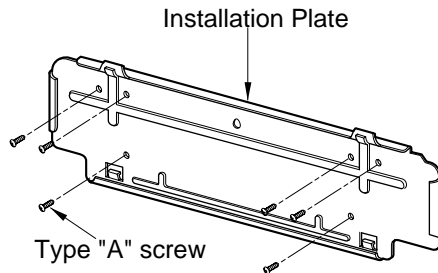

2. Measure the wall and mark the centerline. It is also important to use caution concerning the location of the installation plate-routing of the wiring to power outlets is through the walls typically. Drilling the hole through the wall for piping connections must be done safely.

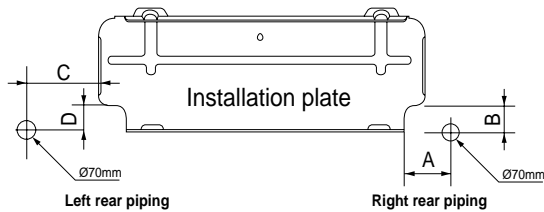


CHASSIS (Grade)	Distance (mm)			
	A	B	C	D
SJ	90	20	80	20
SL, SK	45	40	80	20
SQ	75	12	80	12
SR	0	40	20	40
ST	105	0	210	0

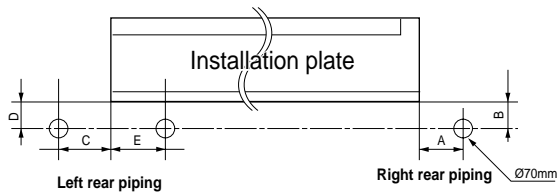

CHASSIS (Grade)	Distance (mm)				
	A	B	C	D	E
SM	180	115	-	115	50
SN	180	115	195	115	-

4) Drill a hole in the wall

- Drill the piping hole with a $\varnothing 70\text{mm}$ hole core drill. Drill the piping hole at either the right or the left with the hole slightly slanted to the outdoor side.

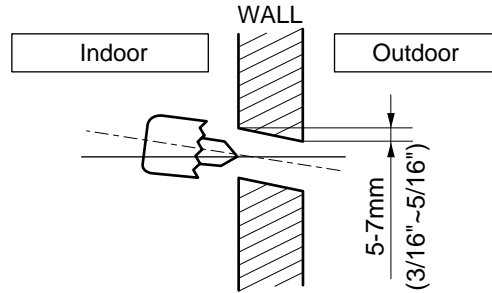


2. Flaring Work and Connection of Piping

1) Flaring work

Main cause for refrigerant leakage is due to defect in the flaring work. Carry out correct flaring work using the following procedure.


1. Cut the pipes and the cable.

- Use the piping kit accessory or pipes purchased locally.
- Measure the distance between the indoor and the outdoor unit.
- Cut the pipes a little longer than the measured distance.
- Cut the cable 1.5m longer than the pipe length.

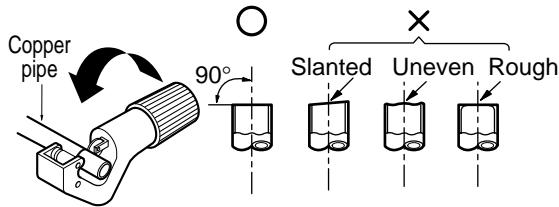


2. Burr removal

- Completely remove all burrs from the cut cross section of pipe/tube.
- Put the end of the copper tube/pipe in a downward direction as you remove burrs in order to avoid dropping burrs into the tubing.

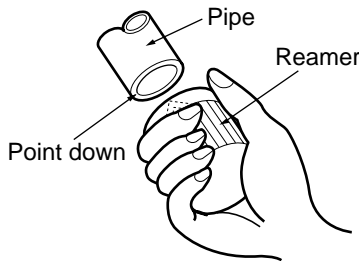


3. Putting nut on

- Remove flare nuts attached to indoor and outdoor unit, then put them on pipe/tube having completed burr removal.
- (not possible to put them on after flaring work)

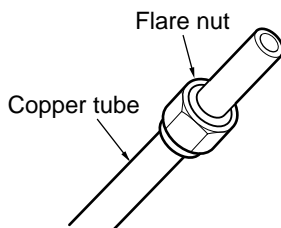

4. Flaring work

- Firmly hold copper pipe in a die in the dimension shown in the table above.

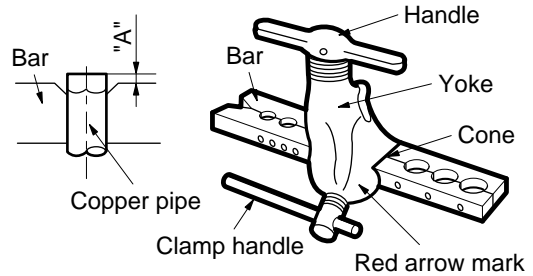


- Carry out flaring work using flaring tool as shown below.

Outside diameter		
mm	inch	mm
Ø6.35	1/4	0~0.5
Ø9.52	3/8	0~0.5
Ø12.7	1/2	0~0.5
Ø15.88	5/8	0~1.0
Ø19.05	3/4	1.0~1.3


5. Check

- Compare the flared work with figure below.
- If flare is noted to be defective, cut off the flared section and re-flare it.

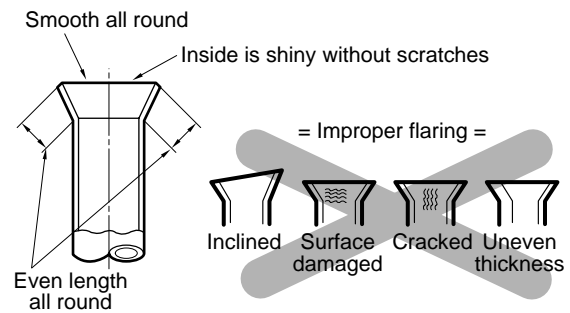


2) Connection of piping Indoor

- Preparing the indoor unit's piping and drain hose for installation through the wall.
- Remove the plastic tubing retainer(see illustration below) and pull the tubing and drain hose away from chassis.
- Replace the plastic tubing holder in the original position.

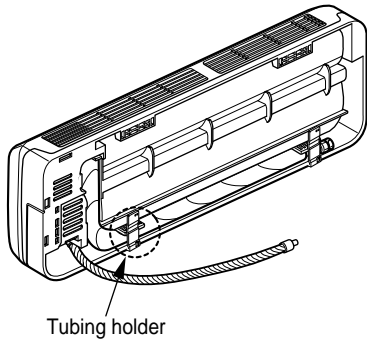


⚠ CAUTION

When install, make sure that the remaining parts must be removed clearly so as not to damage the piping and drain hose, especially power cord and connecting cable.

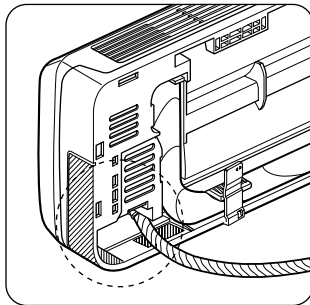

For right rear piping


1. Route the indoor tubing and the drain hose in the direction of rear right.

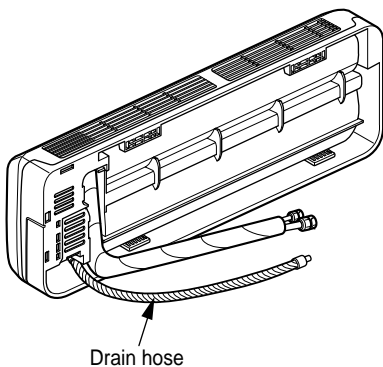

2. Insert the connecting cable into the indoor unit from the outdoor unit through the piping hole.

- Do not connect the cable to the indoor unit.
- Make a small loop with the cable for easy connection later.

3. Tape the tubing, drain hose, and the connecting cable. Be sure that the drain hose is located at the lowest side of the bundle. Locating at the upper side can cause drain pan to overflow inside the unit.

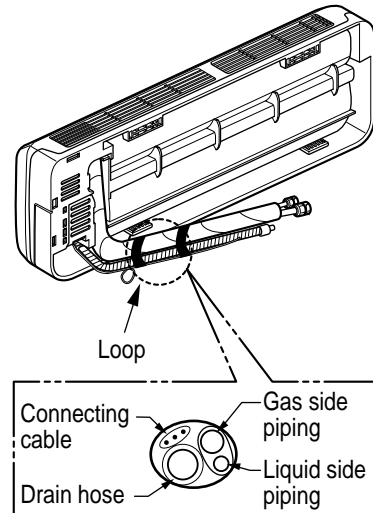


NOTE: If the drain hose is routed inside the room, insulate the hose with an insulation material* so that dripping from "sweating"(condensation) will not damage furniture or floors.

*Foamed polyethylene or equivalent is recommended.

4. Indoor unit installation


- Hook the indoor unit onto the upper portion of the installation plate.(Engage the two hooks of the rear top of the indoor unit with the upper edge of the installation plate.) Ensure that the hooks are properly seated on the installation plate by moving it left and right.

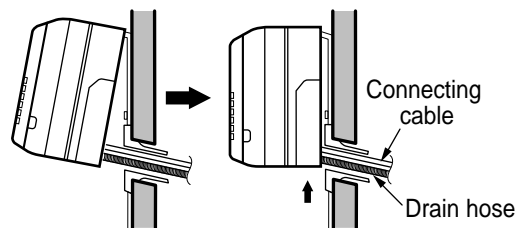


Press the lower left and right sides of the unit against the installation plate until the hooks engage into their slots(clicking sound).

4. Connecting the pipings to the indoor unit and drain hose to drain pipe.

- Align the center of the pipes and sufficiently tighten the flare nut by hand.

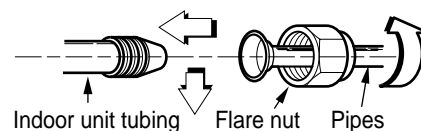


- Tighten the flare nut with a wrench.

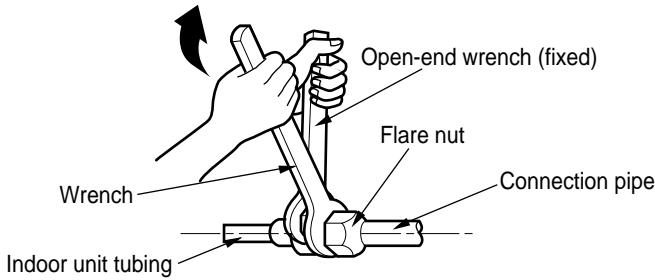


Outside diameter		Torque
mm	inch	kg-m
Ø6.35	1/4	1.8
Ø9.52	3/8	4.2
Ø12.7	1/2	5.5
Ø15.88	5/8	6.6
Ø19.05	3/4	6.6

- When extending the drain hose at the indoor unit, install the drain pipe.


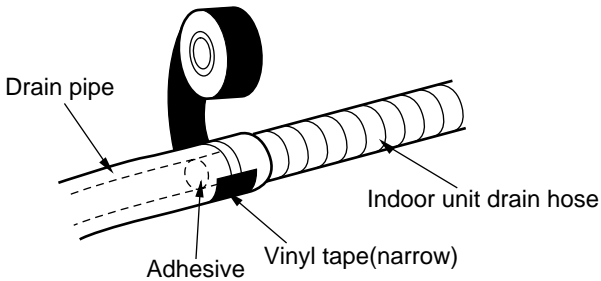


5. Wrap the insulation material around the connecting portion.


- Overlap the connection pipe insulation material and the indoor unit pipe insulation material. Bind them together with vinyl tape so that there is no gap.

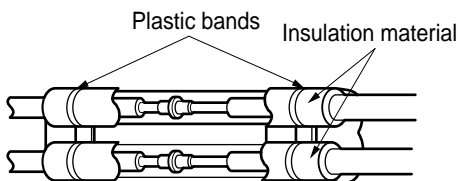

- Wrap the area which accommodates the rear piping housing section with vinyl tape.

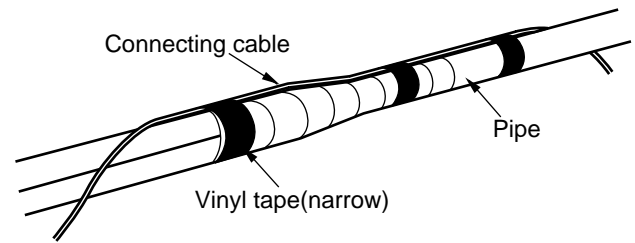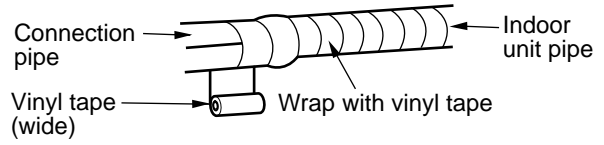


- Bundle the piping and drain hose together by wrapping them with vinyl tape for enough to cover where they fit into the rear piping housing section.

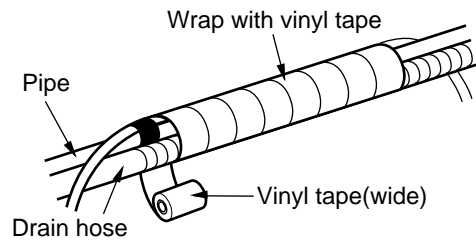


For left rear piping

1. Route the indoor tubing and the drain hose to the required piping hole position.

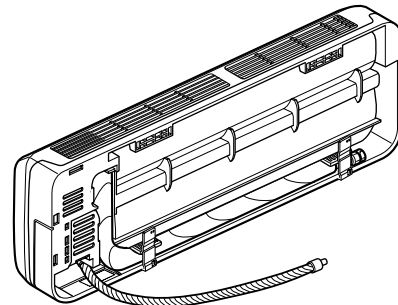

2. Insert the piping, drain hose, and the connecting cable into the piping hole.

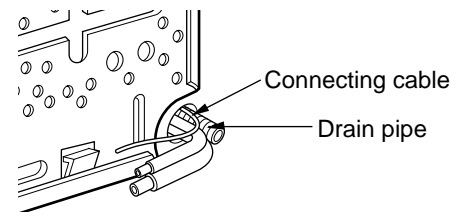


3. Insert the connecting cable into the indoor unit.

- Don't connect the cable to the indoor unit.
- Make a small loop with the cable for easy connection later.


4. Tape the drain hose and the connecting cable.

- Connecting cable

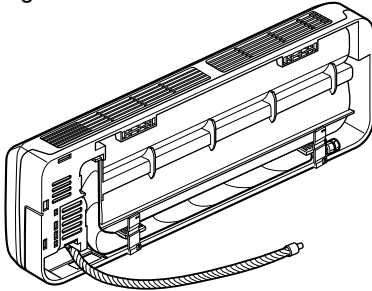


5. Indoor unit installation

- Hang the indoor unit from the hooks at the top of the installation plate.
- Insert the spacer etc. between the indoor unit and the installation plate and separate the bottom of the indoor unit from the wall.

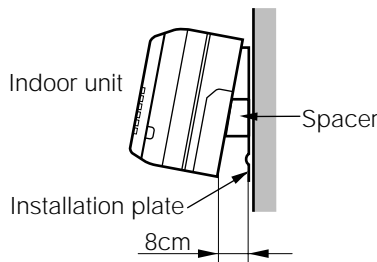


6. Connecting the pipings to the indoor unit and the drain hose to drain pipe.

- Align the center of the pipes and sufficiently tighten the flare nut by hand.

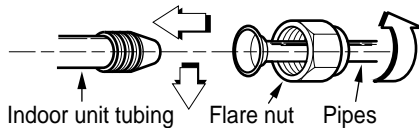


- Tighten the flare nut with a wrench.

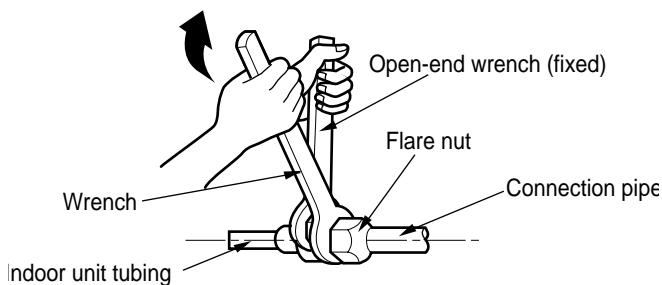


Outside diameter		Torque kg·m
mm	inch	
Ø6.35	1/4	1.8
Ø9.52	3/8	4.2
Ø12.7	1/2	5.5
Ø15.88	5/8	6.6
Ø19.05	3/4	6.6

- When extending the drain hose at the indoor unit, install the drain pipe.


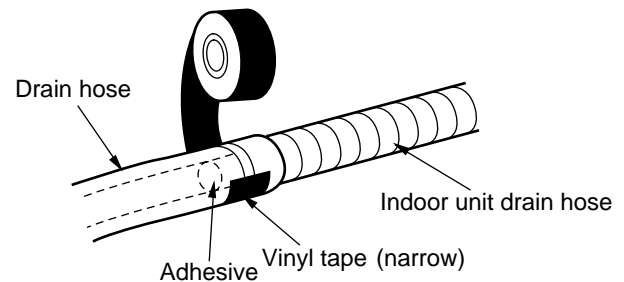


7. Wrap the insulation material around the connecting portion.


- Overlap the connection pipe heat insulation and the indoor unit pipe heat insulation material. Bind them together with vinyl tape so that there is no gap.

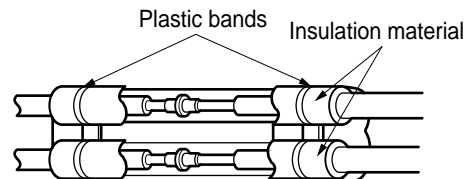


- Wrap the area which accommodates the rear piping housing section with vinyl tape.

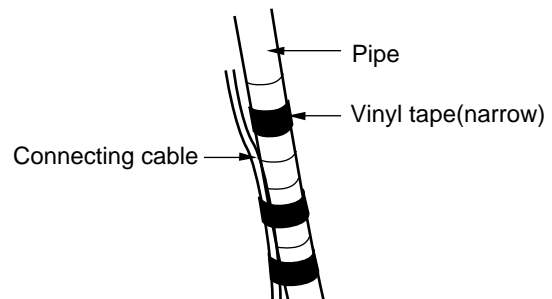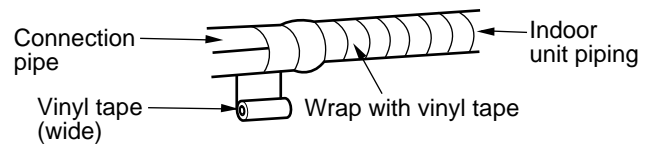

- Bundle the piping and drain hose together by wrapping them with cloth tape over the range within which they fit into the rear piping housing section.

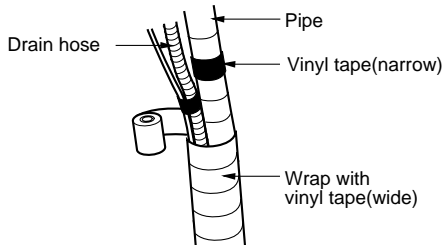


8. Reroute the pipings and the drain hose across the back of the chassis.

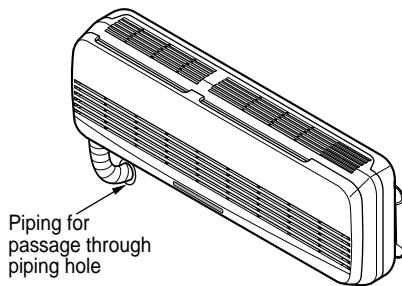


9. Set the pipings and the drain hose to the back of the chassis with the tubing holder.

- Hook the edge of tubing holder to tap on chassis and push the bottom of tubing holder to be engaged at the bottom of chassis.

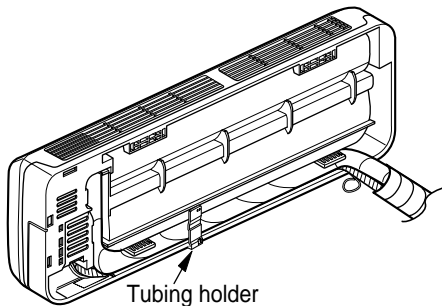

10. Indoor unit installation


- Remove the spacer.
- Ensure that the hooks are properly seated on the installation plate by moving it left and right.

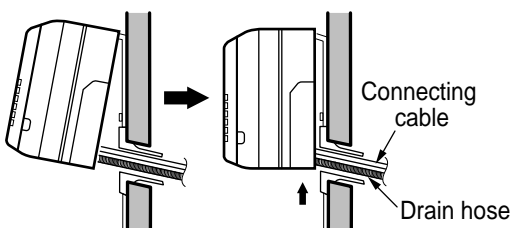

Press the lower left and right sides of the unit against the installation plate until the hooks engage into their slots (clicking sound).

3) Connection of the pipes-Outdoor

1. Align the center of the pipings and sufficiently tighten the flare nut by hand.

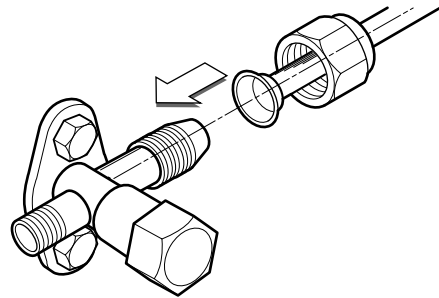


2. Finally, tighten the flare nut with torque wrench until the wrench clicks.

- When tightening the flare nut with torque wrench, ensure the direction for tightening follows the arrow on the wrench.

Outside diameter		Torque
mm	inch	kg-m
Ø6.35	1/4	1.8
Ø9.52	3/8	4.2
Ø12.7	1/2	5.5
Ø15.88	5/8	6.6
Ø19.05	3/4	6.6

Outdoor unit

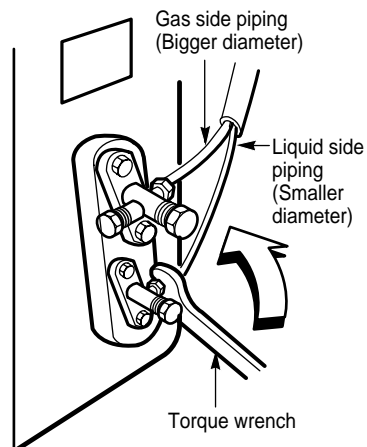

3. Connecting The Cable Between Indoor Unit and Outdoor Unit

1) Connect the cable to the Indoor unit.

- Connect the cable to the indoor unit by connecting the wires to the terminals on the control board in **dividually according to the outdoor unit connection.** (Ensure that the color of the wires of the outdoor unit and the terminal No. are the same as those of the indoor unit.)
The earth wire should be longer than the common wires.


- When installing, refer to the circuit diagram on the Control Box of Indoor Unit.
- When installing, refer to the wiring diagram on the Control Cover Inside Outdoor Unit.

CAUTION

- The above circuit diagram is subject to change without notice.
- Be sure to connect wires according to the wiring diagram.
- Connect the wires firmly, so that not to be pulled out easily.
- Connect the wires according to color codes by referring the wiring diagram.


CAUTION

If a power plug is not to be used, provide a circuit breaker between power source and the unit as shown below.

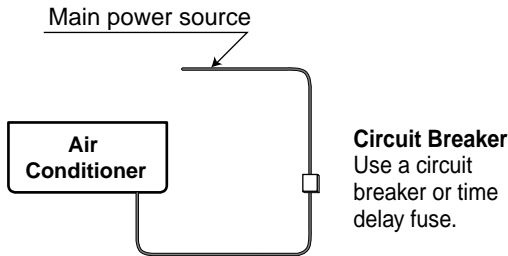

CAUTION


The power cord connected to the "A" unit should be complied with the following specifications (Type "B" approved by HAR or SAA).

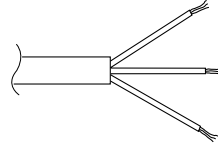

NORMAL CROSS-SECTIONAL AREA	Grade				
	7k~14k	18k	24k~28k	30k, 32k	36k, 38k
	1.0	1.5	2.5	2.5	5.5
Unit(A)	Indoor	Indoor	Indoor	Outdoor	Outdoor
Cable Type(B)	H05VV-F	H05VV-F	H05VV-F	H05RN-F	H05RN-F


(mm²)

The power connecting cable connected to the indoor and outdoor unit should be complied with the following specifications (Type "B" approved by HAR or SAA).

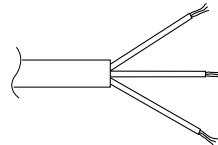


(mm²)

NORMAL CROSS-SECTIONAL AREA	Grade		
	7k~14k	18k	24k~28k
	1.0	1.5	2.5
Cable Type(B)	H07RN-F	H07RN-F	H07RN-F



NORMAL CROSS-SECTIONAL AREA 0.75mm²

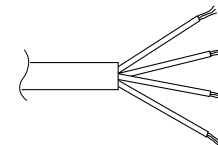


(mm²)

NORMAL CROSS-SECTIONAL AREA	Grade	
	30k, 32k	36k, 38k
	0.75	0.75
Cable Type(B)	H07RN-F	H07RN-F

2) Connect the cable to the outdoor unit

1. Remove the control cover from the unit by loosening the screw.
Connect the wires to the terminals on the control board individually.
2. Secure the cable onto the control board with the cord clamp.
3. Refix the control cover to the original position with the screw.
4. Use a recognized circuit breaker "A" between the power source and the unit.
A disconnecting device to adequately disconnect all supply lines must be fitted.

Circuit Breaker (A)	Grade				
	7k~14k	18k	24k~28k	30k, 32k	36k, 38k
	15	20	30	30	40

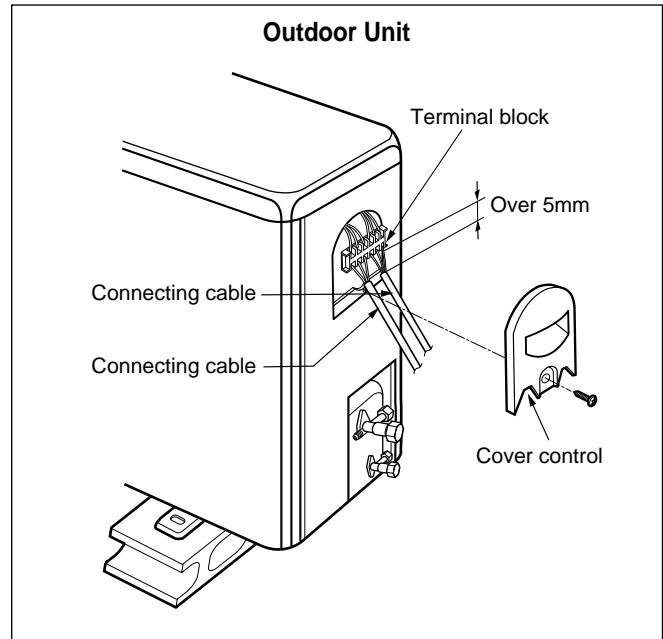

CAUTION

After the confirmation of the above conditions, prepare the wiring as follows:


- 1) Never fail to have an individual power circuit specifically for the air conditioner. As for the method of wiring, be guided by the circuit diagram posted on the inside of control cover.
- 2) The screw which fasten the wiring in the casing of electrical fittings are liable to come loose from vibrations to which the unit is subjected during the course of transportation. Check them and make sure that they are all tightly fastened. (If they are loose, it could cause burn-out of the wires.)
- 3) Specification of power source.
- 4) Confirm that electrical capacity is sufficient.
- 5) See to that the starting voltage is maintained at more than 90 percent of the rated voltage marked on the name plate.
- 6) Confirm that the cable thickness is as specified in the power source specification.
(Particularly note the relation between cable length and thickness. (Refer to page 25))
- 7) Always install an earth leakage circuit breaker in a wet or moist area.
- 8) The following would be caused by voltage drop.
 - Vibration of a magnetic switch, which will damage the contact point, fuse breaking, disturbance of the normal function of the overload.
- 9) The means for disconnection from a power supply shall be incorporated in the fixed wiring and have an air gap contact separation of at least 3mm in each active(phase) conductors.

4. Checking the Drainage and Forming the Pippings

1) Checking the drainage


1. To remove the front panel from the indoor unit.

- Set the air direction louvers up-and-down to the position(horizontally) by hand.
- Remove the securing screws that retain the front panel. Pull the lower left and right sides of the grille toward you and lift it off.

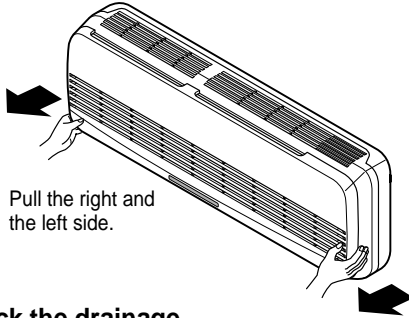


2. To check the drainage.

- Pour a glass of water on the evaporator.
- Ensure the water flows through the drain hose of the indoor unit without any leakage and goes out the drain exit.

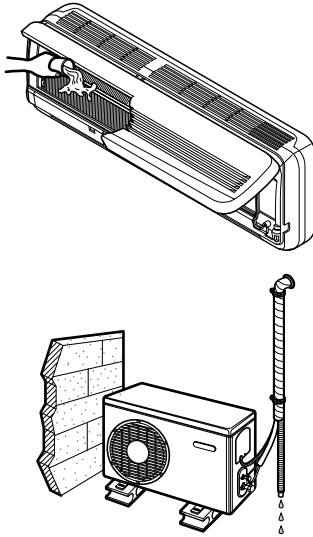


3. Drain piping

- The drain hose should point downward for easy drain flow.

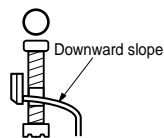

- Do not make drain piping.

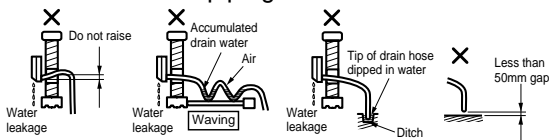


2) Form the piping

1. Form the piping by wrapping the connecting portion of the indoor unit with insulation material and secure it with two kinds of vinyl tapes.

- If you want to connect an additional drain hose, the end of the drain outlet should be routed above the ground. Secure the drain hose appropriately.


2. In cases where the outdoor unit is installed below the indoor unit perform the following.

- Tape the piping, drain hose and connecting cable from down to up.
- Secure the tapped piping along the exterior wall using saddle or equivalent.

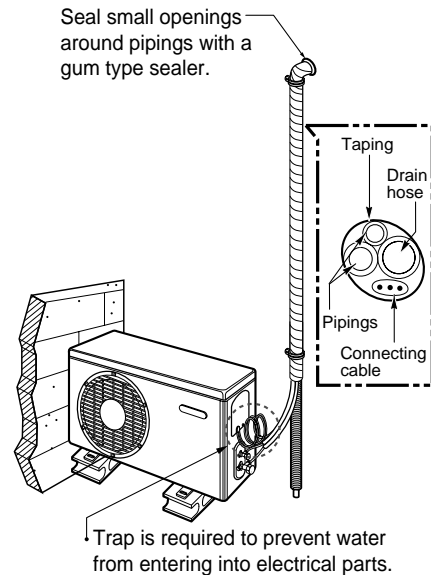

3. In cases where the Outdoor unit is installed above the Indoor unit perform the following.

- Tape the piping and connecting cable from down to up.
- Secure the taped piping along the exterior wall. Form a trap to prevent water entering the room.
- Fix the piping onto the wall by saddle or equivalent.

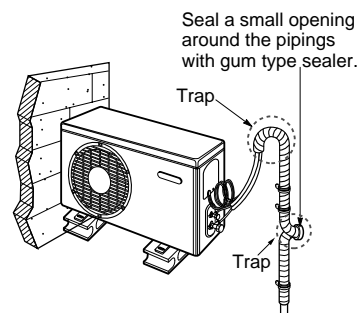


5. Test Running

1. Check that all tubing and wiring have been properly connected.
2. Check that the gas and liquid side service valves are fully open.

1. Prepare remote control

1. Remove the battery cover by pulling it according to the arrow direction.
2. Insert new batteries making sure that the (+) and (-) of battery are installed correctly.
3. Reattach the cover by pushing it back into position.

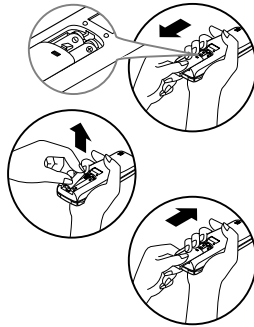


NOTE:

- Use 2 AAA(1.5volt) batteries. Do not use rechargeable batteries.
- Remove the batteries from the remote control if the system is not going to be used for a long time.

2. Settlement of outdoor unit


- Anchor the outdoor unit with a bolt and nut(ø10mm) tightly and horizontally on a concrete or rigid mount.
- When installing on the wall, roof or rooftop, anchor the mounting base securely with a nail or wire assuming the influence of wind and earthquake.
- In the case when the vibration of the unit is conveyed to the hose, secure the unit with an anti-vibration bushing.

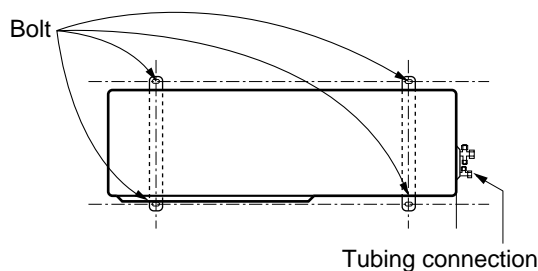

3. Evaluation of the performance

Operate unit for 15~20 minutes, then check the system refrigerant charge:

1. Measure the pressure of the gas side service valve.
2. Measure the temperature of the intake and discharge of air.
3. Ensure the difference between the intake temperature and the discharge is more than 8°C(46°F) (Cooling) or (Heating).

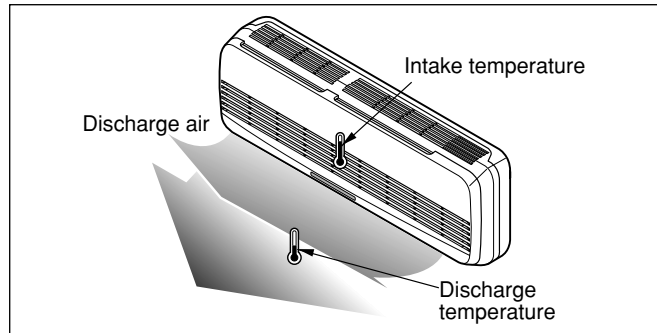

4. For reference; the gas side pressure of optimum condition is as below.(Cooling)

Refrigerant	Outside ambient TEMP.	The pressure of the gas side service valve.
R-22	35°C (95°F)	4~5kg/cm ² G(56.8~71.0 P.S.I.G.)
R-410A	35°C (95°F)	8.5~9.5kg/cm ² G(120~135 P.S.I.G.)

- NOTE:** If the actual pressure is higher than shown, the system is most likely over-charged, and charge should be removed. If the actual pressure are lower than shown, the system is most likely undercharged, and charge should be added.

The air conditioner is now ready for use.

PUMP DOWN

This is performed when the unit is to be relocated or the refrigerant circuit is serviced.

Pump Down means collecting all refrigerant in the outdoor unit without loss in refrigerant gas.

CAUTION:

Be sure to perform Pump Down procedure with the unit cooling mode.

Pump Down Procedure

1. Connect a low-pressure gauge manifold hose to the charge port on the gas side service valve.
2. Open the gas side service valve halfway and purge the air from the manifold hose using the refrigerant gas.
3. Close the liquid side service valve(all the way in).
4. Turn on the unit's operating switch and start the cooling operation.
5. When the low-pressure gauge reading becomes 1 to 0.5kg/cm² G(14.2 to 7.1 P.S.I.G.), fully close the gas side valve stem and then quickly turn off the unit. At that time, Pump Down has been completed and all refrigerant gas will have been collected in the outdoor unit.


Operation

■ Name and Function-Remote Control(C/O Model)

Remote Control

Signal transmitter

Transmits the signals to the room air conditioner.

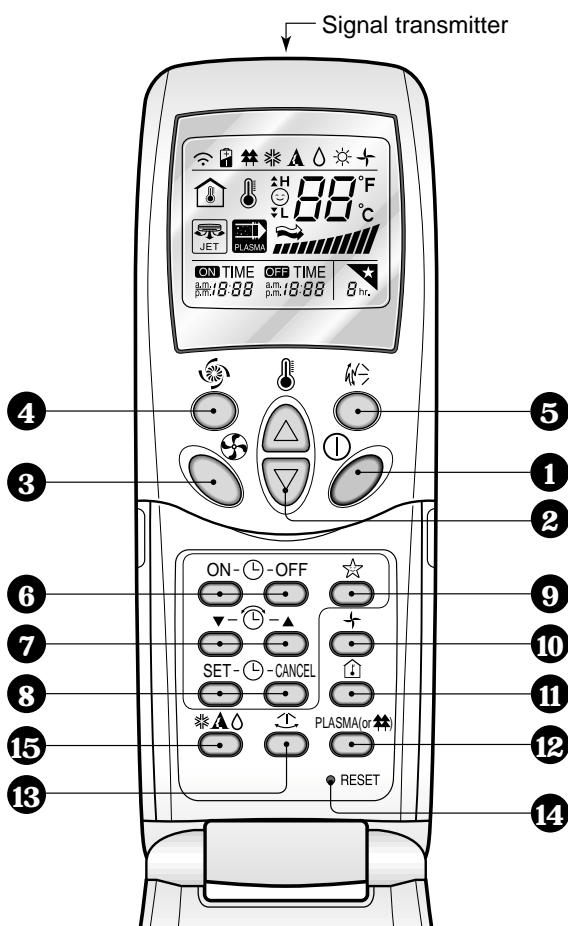


- 1 START/STOP BUTTON**
Operation starts when this button is pressed and stops when the button is pressed again.
- 2 ROOM TEMPERATURE SETTING BUTTONS**
Used to select the room temperature.
- 3 INDOOR FAN SPEED SELECTOR**
Used to select fan speed in four steps low, medium, high, or CHAOS.
- 4 JET COOL**
Used to start or stop the speed cooling. (Speed cooling operates super high fan speed in cooling mode.)
- 5 CHAOS SWING BUTTON**
Used to stop or start louver movement and set the desired up/down airflow direction.
- 6 ON/OFF TIMER BUTTONS**
Used to set the time of starting and stopping operation.
- 7 TIME SETTING BUTTONS**
Used to adjust the time.
- 8 TIMER SET/CANCEL BUTTONS**
Used to set the timer when the desired time is obtained and to cancel the Timer operation.
- 9 SLEEP MODE AUTO BUTTON**
Used to set Sleep Mode Auto operation.
- 10 AIR CIRCULATION BUTTON**
Used to circulate the room air without cooling or heating (turns indoor fan on/off).
- 11 ROOM TEMPERATURE CHECKING BUTTON**
Used to check the room temperature.
- 12 PLASMA(OPTIONAL)**
Used to start or stop the plasma-purification function.
NEGATIVE ION(OPTIONAL)
Used to generate negative ion.
- 13 HORIZONTAL AIRFLOW DIRECTION CONTROL BUTTON (NOT ON ALL MODELS)**
Used to set the desired horizontal airflow direction.
- 14 RESET BUTTON**
Used prior to resetting time or after replacing batteries.
- 15 OPERATION MODE SELECTION BUTTON**
Used to select the operation mode.

■ Name and Function-Remote Control(H/P Model)

Remote Control

Signal transmitter

Transmits the signals to the room air conditioner.

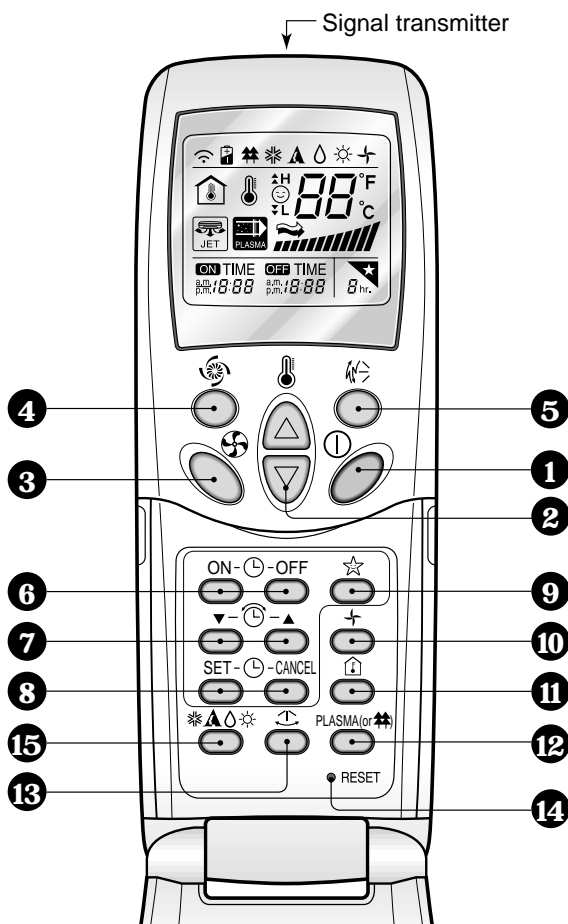

- 1 START/STOP BUTTON**
Operation starts when this button is pressed and stops when the button is pressed again.
 - 2 ROOM TEMPERATURE SETTING BUTTONS**
Used to select the room temperature.
 - 3 INDOOR FAN SPEED SELECTOR**
Used to select fan speed in four steps low, medium, high, or CHAOS.
 - 4 JET COOL**
Used to start or stop the speed cooling. (Speed cooling operates super high fan speed in cooling mode.)
 - 5 CHAOS SWING BUTTON**
Used to stop or start louver movement and set the desired up/down airflow direction.
 - 6 ON/OFF TIMER BUTTONS**
Used to set the time of starting and stopping operation.
 - 7 TIME SETTING BUTTONS**
Used to adjust the time.
 - 8 TIMER SET/CANCEL BUTTONS**
Used to set the timer when the desired time is obtained and to cancel the Timer operation.
 - 9 SLEEP MODE AUTO BUTTON**
Used to set Sleep Mode Auto operation.
 - 10 AIR CIRCULATION BUTTON**
Used to circulate the room air without cooling or heating (turns indoor fan on/off).
 - 11 ROOM TEMPERATURE CHECKING BUTTON**
Used to check the room temperature.
 - 12 PLASMA(OPTIONAL)**
Used to start or stop the plasma-purification function.
NEGATIVE ION(OPTIONAL)
Used to generate negative ion.
 - 13 HORIZONTAL AIRFLOW DIRECTION CONTROL BUTTON (NOT ON ALL MODELS)**
Used to set the desired horizontal airflow direction.
 - 14 RESET BUTTON**
Used prior to resetting time or after replacing batteries.
- OPERATION MODE SELECTION BUTTON**
Used to select the operation mode.

Disassembly of the parts (Indoor unit)


Warning :

Disconnect the unit from power supply before making any checks.


Be sure the power switch is set to "OFF".

To remove the Grille from the Chassis.

- Set the up-and-down air discharge louver to open position (horizontally) by finger pressure.
- Remove the securing screws.
- To remove the Grille, pull the lower left and right side of the grille toward you (slightly tilted) and lift it straight upward.

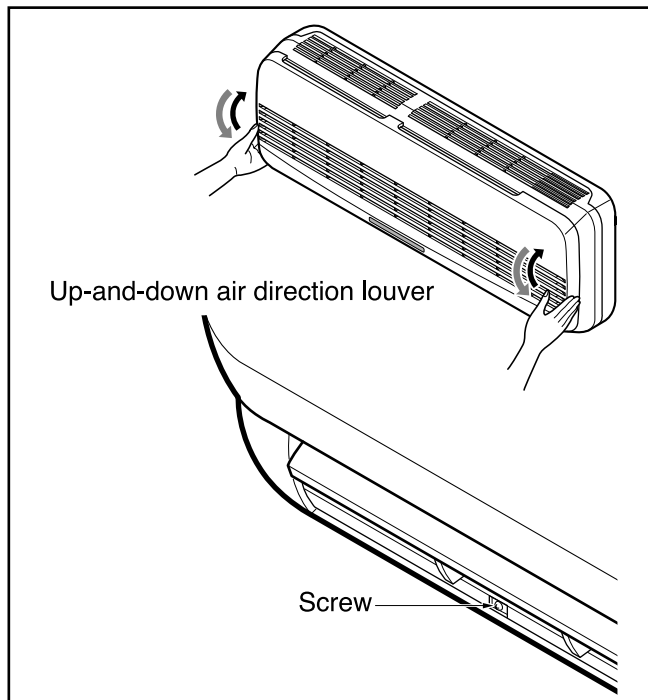


1. Before removing the control box, be sure to take out the wire screwed at the other end.

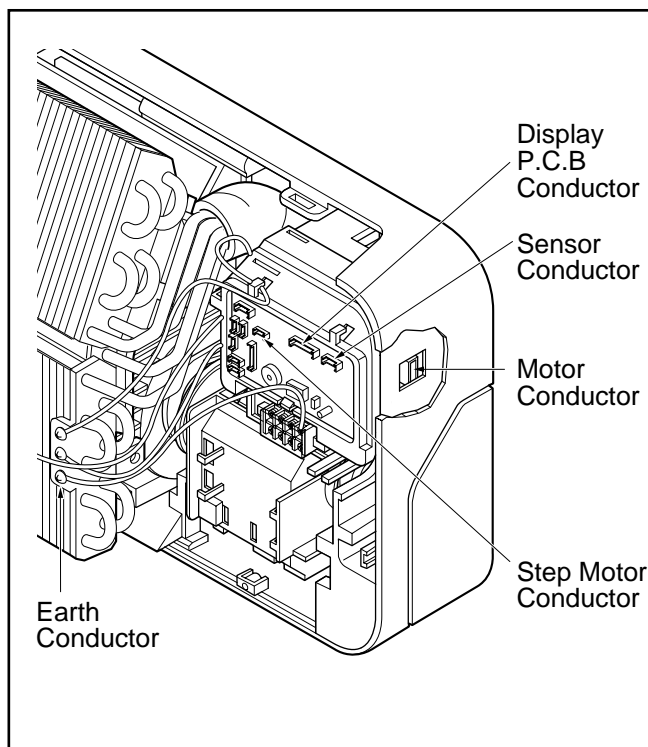


2. To remove the Control Box.

- Remove securing screws.
- Pull the control box out from the chassis carefully.

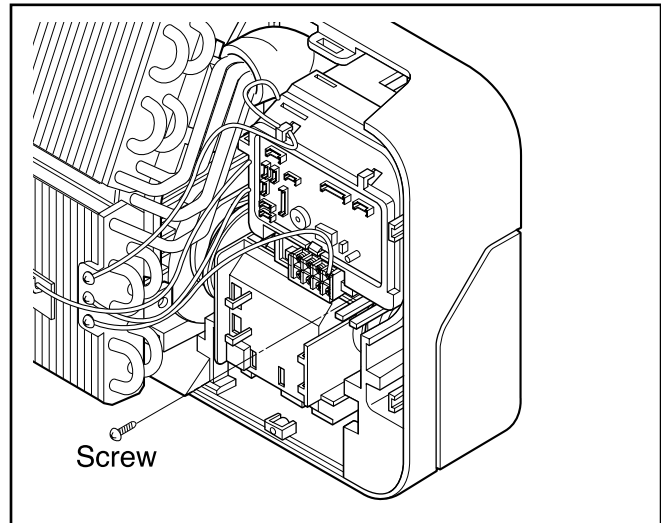


3. To remove the Discharge Grille.

- Unhook the discharge grille and pull the discharge grille out from the chassis carefully.

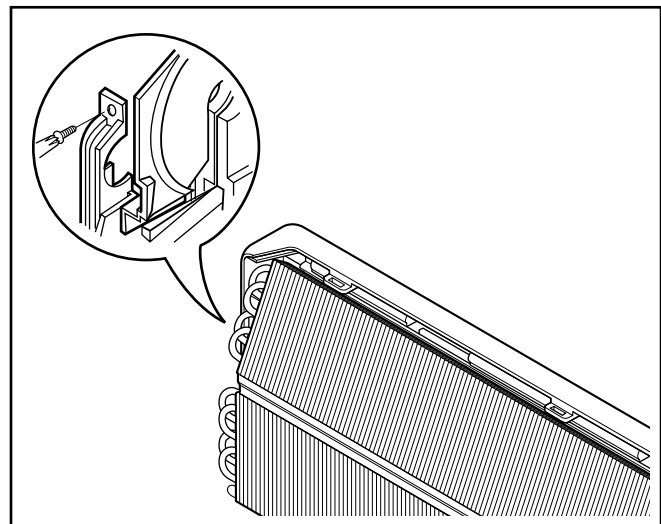


4. To remove the Evaporator.

- Remove 3 screws securing the evaporator(at the left 2EA in the Eva Holder, at the right 1EA).

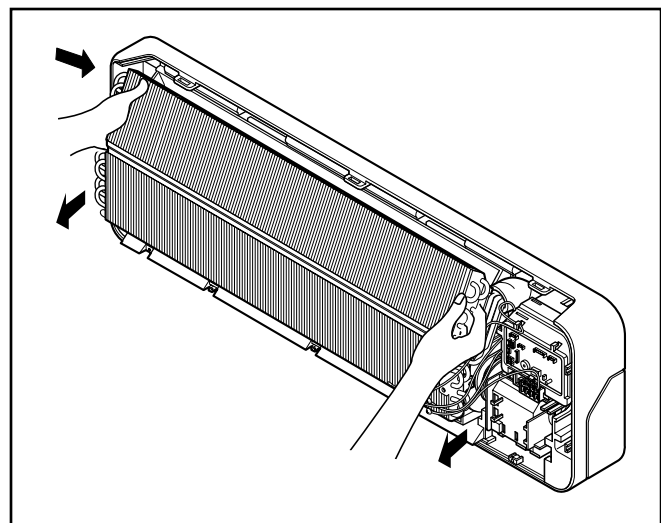


-
- Unhook the tab on the right inside of the chassis at the same time, slightly pull the evaporator toward you until the tab is clear of the slot.

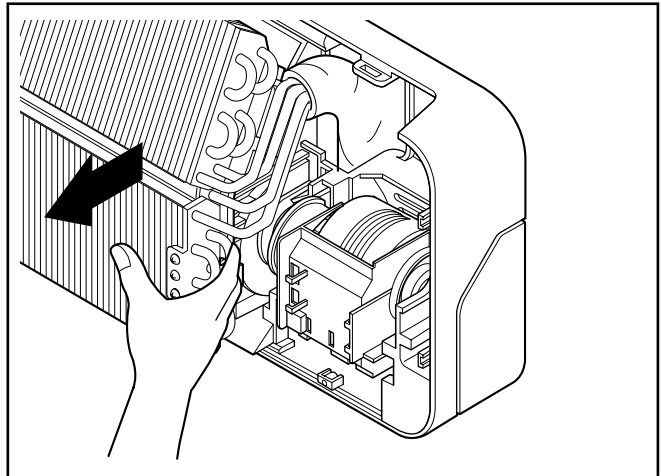


5. To remove the Motor Cover

- Remove 2 securing screw.
- Pull the motor cover out from the chassis carefully.

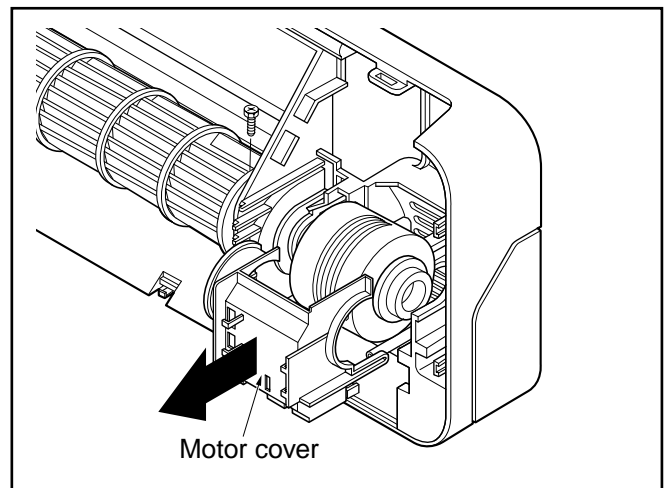

6. To remove the Cross-Flow Fan

- Loosen the screw securing the cross-flow fan to the fan motor (do not remove).
- Lift up the right side of the cross-flow fan and the fan motor, separate the fan motor from the cross-flow fan.

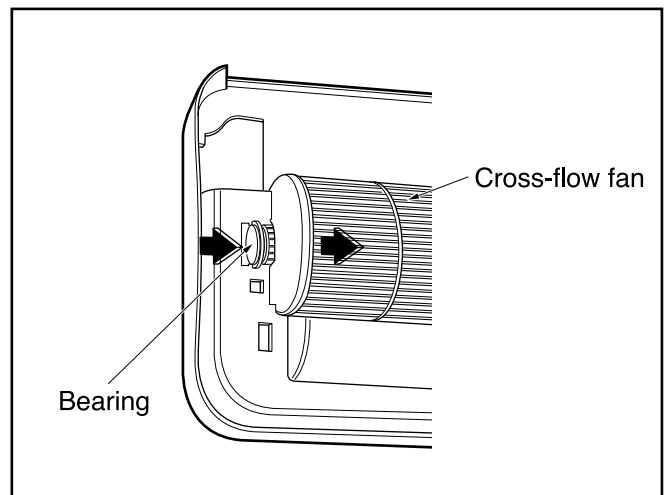

- Remove the left end of the cross-flow fan from the self-aligning bearing.

2-way, 3-way Valve

		2-way Valve (Liquid Side)	3-way Valve (Gas Side)	
Works		Shaft position	Shaft position	Service port
Shipping		Closed (with valve cap)	Closed (with valve cap)	Closed (with cap)
1.	Air purging (Installation)	Open (counter-clockwise)	Closed (clockwise)	Open (push-pin or with vacuum pump)
Operation		Open (with valve cap)	Open (with valve cap)	Closed (with cap)
2.	Pumping down (Transferring)	Closed (clockwise)	Open (counter-clockwise)	Open (connected manifold gauge)
3.	Evacuation (Servicing)	Open	Open	Open (with charging cylinder)
4.	Gas charging (Servicing)	Open	Open	Open (with charging cylinder)
5.	Pressure check (Servicing)	Open	Open	Open (with charging cylinder)
6.	Gas releasing (Servicing)	Open	Open	Open (with charging cylinder)


1. Air purging

Required tools : hexagonal wrench, adjustable wrench, torque wrenches, wrench to hold the joints, and gas leak detector.

The additional gas for air purging has been charged in the outdoor unit.

However, if the flare connections have not be done correctly and there gas leaks, a gas cylinder and the charge set will be needed.

The air in the indoor unit and in the piping must be purged. If air remains in the refrigeration pipes, it will affect the compressor, reduce to cooling capacity, and could lead to a malfunction.

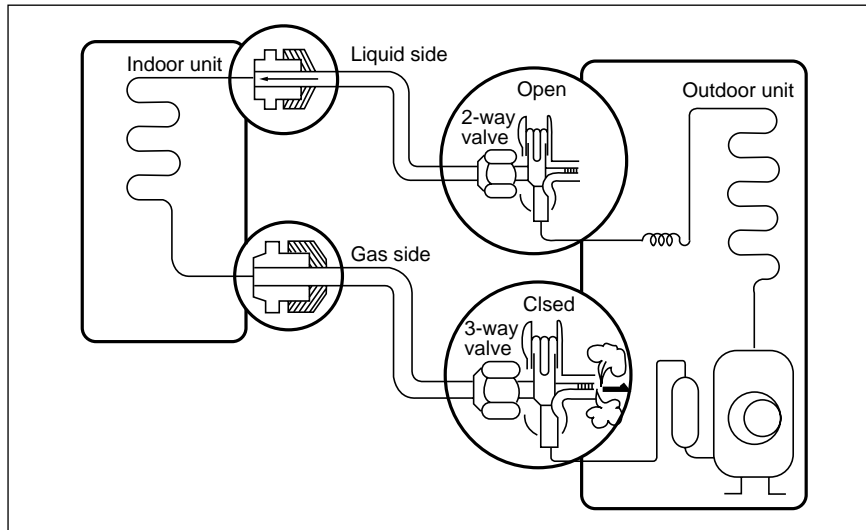

Service port nut:

Be sure, using a torque wrench to tighten the service port nut (after using the service port), so that it prevents the gas leakage from the refrigeration cycle.

* **⚠ CAUTION : Do not leak the gas in the air during Air purging.**

• Procedure


- (1) **Recheck the piping connections.**
- (2) **Open the valve stem of the 2-way valve counterclockwise approximately 90°, wait 10 seconds, and then set it to closed position.**
 - Be sure to use a hexagonal wrench to operate the valve stem.
- (3) **Check for gas leakage.**
 - Check the flare connections for gas leakage.
- (4) **Purge the air from the system.**
 - Set the 2-way valve to the open position and remove the cap from the 3-way valve's service port.
 - Using the hexagonal wrench to press the valve core pin, discharge for three seconds and then wait for one minute. Repeat this three times.
- (5) **Use torque wrench to tighten the service port nut to a torque of 1.8kg.cm.**
- (6) **Set the 3-way valve to the back seat.**
- (7) **Mount the valve stem nuts to the 2-way and 3-way valves.**
- (8) **Check for gas leakage.**
 - At this time, especially check for gas leakage from the 2-way and 3-way valve's stem nuts, and from the service port nut.

⚠ Caution

If gas leakage are discovered in step (3) above, take the following mesures :

If the gas leaks stop when the piping connections are tightened further, continue working from step (4).
If the gas leaks do not stop when the connections are retightened, repair the location of the leak, discharge all of the gas through the service port, and then recharge with the specified amount of gas from a gas cylinder.


2. Pumping down

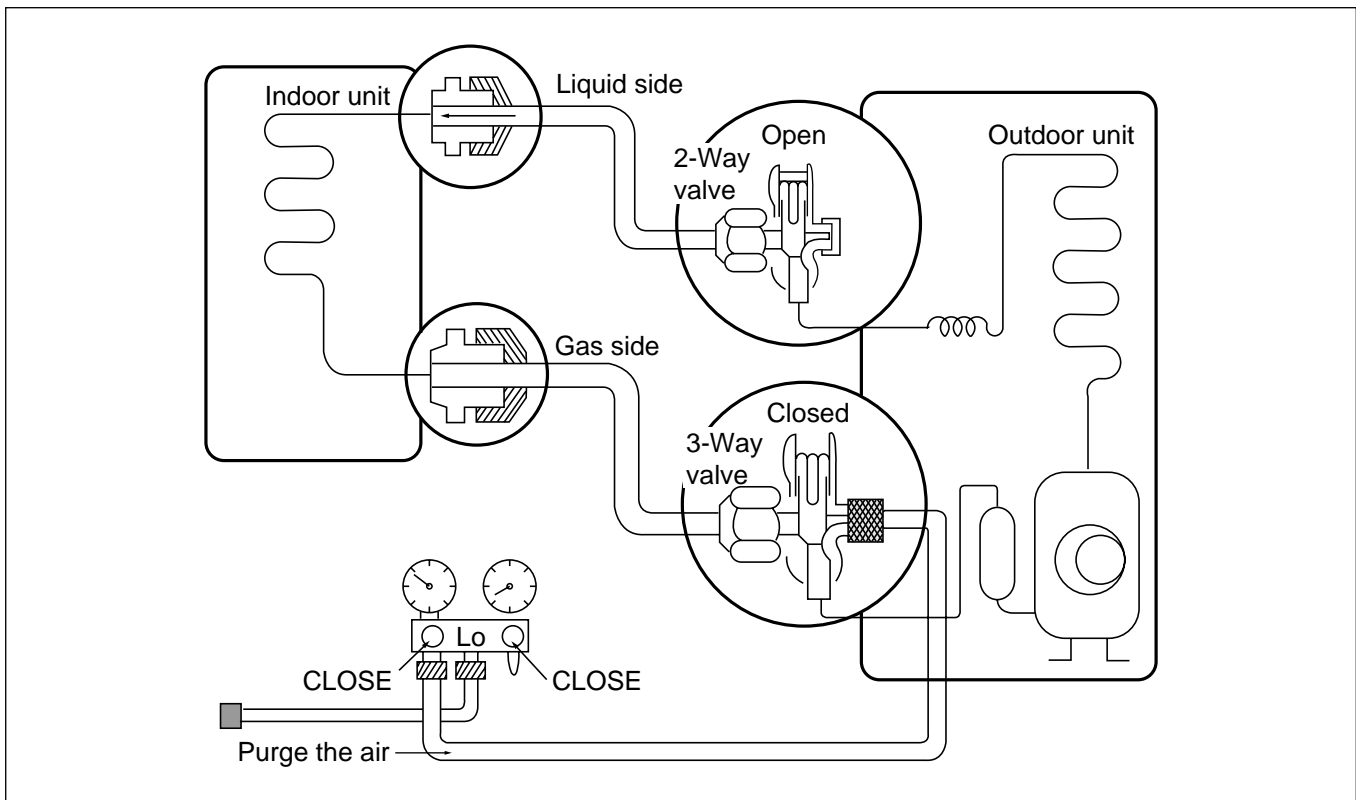

• Procedure

- (1) Confirm that both the 2-way and 3-way valves are set to the open position.**
 - Remove the valve stem caps and confirm that the valve stems are in the raised position.
 - Be sure to use a hexagonal wrench to operate the valve stems.
- (2) Operate the unit for 10 to 15 minutes.**
- (3) Stop operation and wait for 3 minutes, then connect the charge set to the service port of the 3-way valve.**
 - Connect the charge hose with the push pin to the service port.
- (4) Air purging of the charge hose.**
 - Open the low-pressure valve on the charge set slightly to air purge from the charge hose.
- (5) Set the 2-way valve to the closed position.**
- (6) Operate the air conditioner at the cooling cycle and stop it when the gauge indicates 1kg/cm²g.**
- (7) Immediately set the 3-way valve to the closed position.**
 - Do this quickly so that the gauge ends up indicating 3 to 5kg/cm²g.
- (8) Disconnect the charge set, and mount the 2-way and 3-way valve's stem nuts and the service port nut.**
 - Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
 - Be sure to check for gas leakage.

1) Re-air purging (Re-installation)

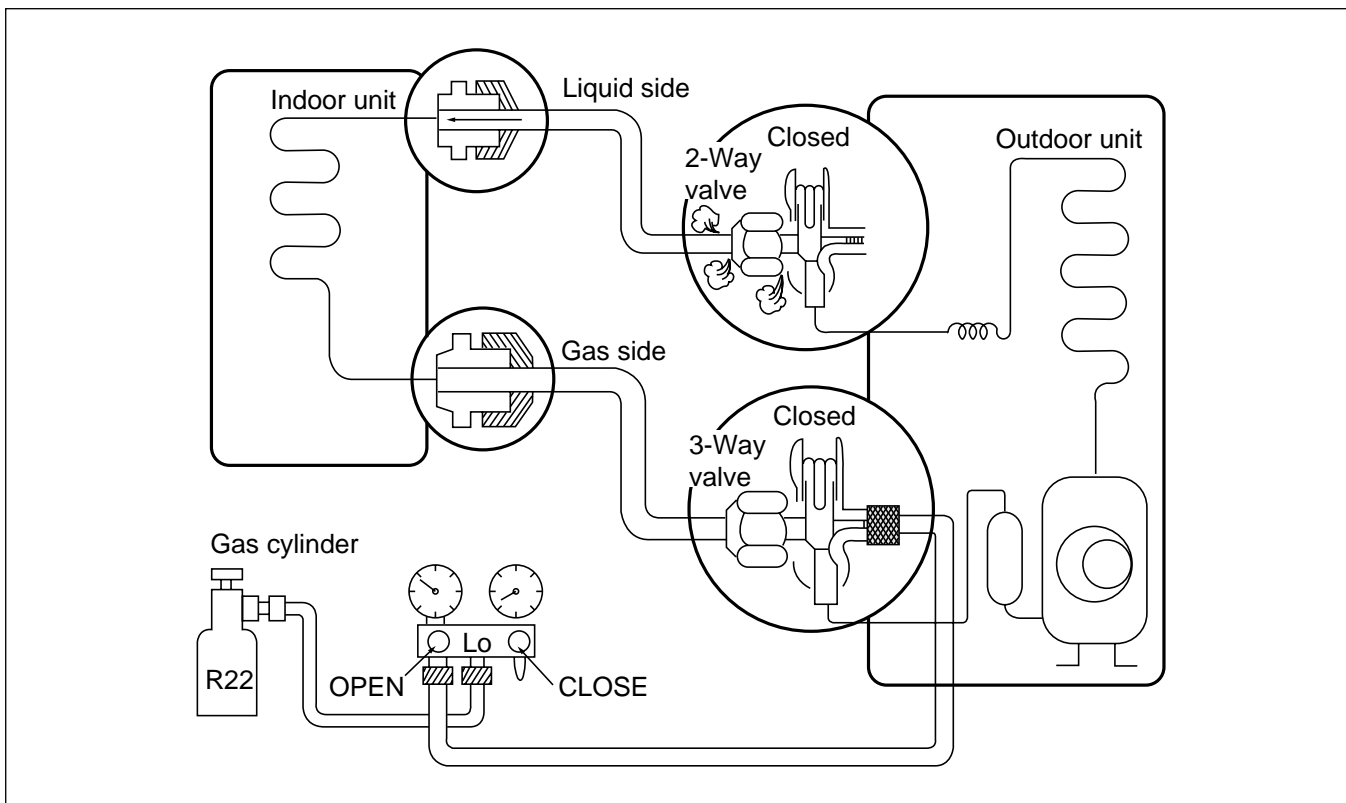


• Procedure

- (1) **Confirm that both the 2-way valve and the 3-way valve are set to the closed position.**
 - (2) **Connect the charge set and a gas cylinder to the service port of the 3-way valve.**
 - Leave the valve on the gas cylinder closed.
 - (3) **Air purging.**
 - Open the valves on the gas cylinder and the charge set. Purge the air by loosening the flare nut on the 2-way valve approximately 45° for 3 seconds then closing it for 1 minute; repeat 3 times.
 - After purging the air, use a torque wrench to tighten the flare nut on the 2-way valve.
 - (4) **Check for gas leakage.**
 - Check the flare connections for gas leakage.
 - (5) **Discharge the refrigerant.**
 - Close the valve on the gas cylinder and discharge the refrigerant until the gauge indicates 3 to 5 kg/cm²g.
 - (6) **Disconnect the charge set and the gas cylinder, and set the 2-way and 3-way valves to the open position.**
 - Be sure to use a hexagonal wrench to operate the valve stems.
 - (7) **Mount the valve stem nuts and the service port nut.**
 - Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
 - Be sure to check for gas leakage.
- * **⚠ CAUTION:**
Do not leak the gas in the air during Air Purging.

2) Balance refrigerant of the 2-way, 3-way valves

(Gas leakage)

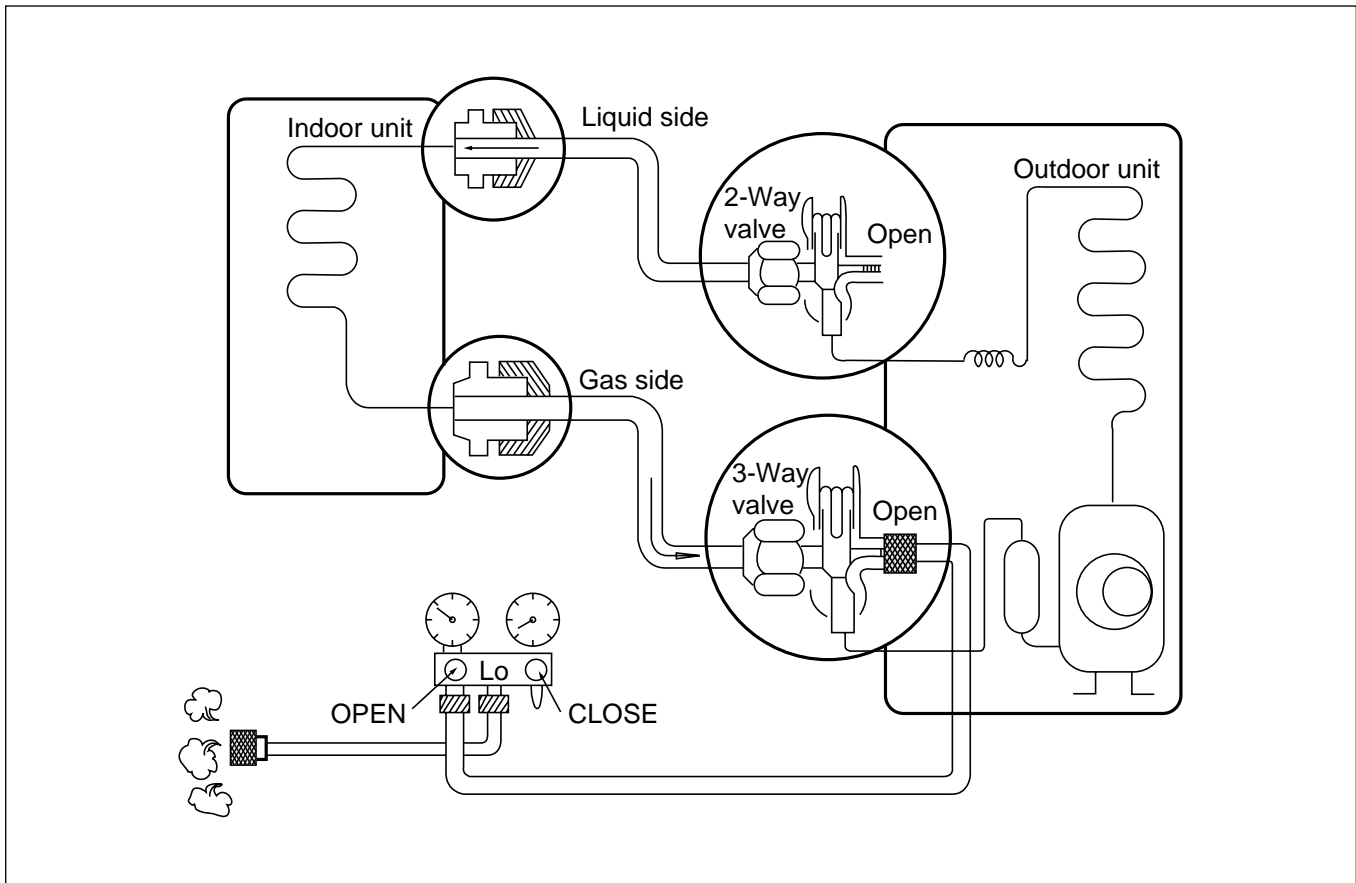

• Procedure

(1) Confirm that both the 2-way and 3-way valves are set to the back seat.

(2) Connect the charge set to the 3-way valve's port.


- Leave the valve on the charge set closed.
- Connect the charge hose with the push pin to the service port.

(3) Open the valve (Lo side) on the charge set and discharge the refrigerant until the gauge indicates 0 kg/cm²G.

- If there is no air in the refrigerant cycle (the pressure when the air conditioner is not running is higher than 1 kg/cm²G), discharge the refrigerant until the gauge indicates 0.5 to 1 kg/cm²G. If this is the case, it will not be necessary to apply a evacuation.
- Discharge the refrigerant gradually; if it is discharged too suddenly, the refrigeration oil will also be discharged.

3. Evacuation

(All amount of refrigerant leaked)

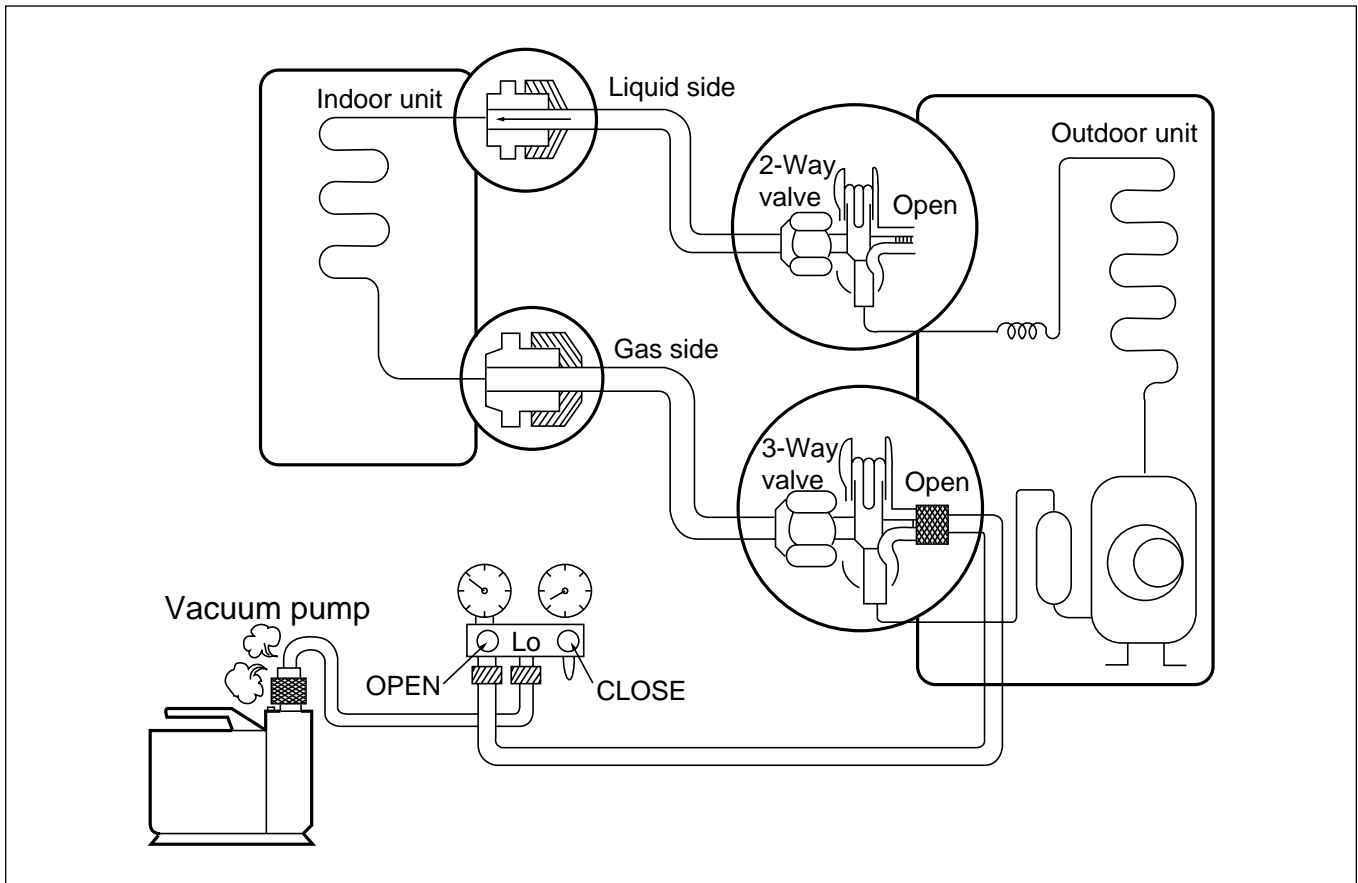

• Procedure

(1) Connect the vacuum pump to the charge set's center hose

(2) Evacuation for approximately one hour.

- Confirm that the gauge needle has moved toward -76 cmHg (vacuum of 4 mmHg or less).

(3) Close the valve (Lo side) on the charge set, turn off the vacuum pump, and confirm that the gauge needle does not move (approximately 5 minutes after turning off the vacuum pump).


(4) Disconnect the charge hose from the vacuum pump.

- Vacuum pump oil.

If the vacuum pump oil becomes dirty or depleted, replenish as needed.

4. Gas Charging

(After Evacuation)

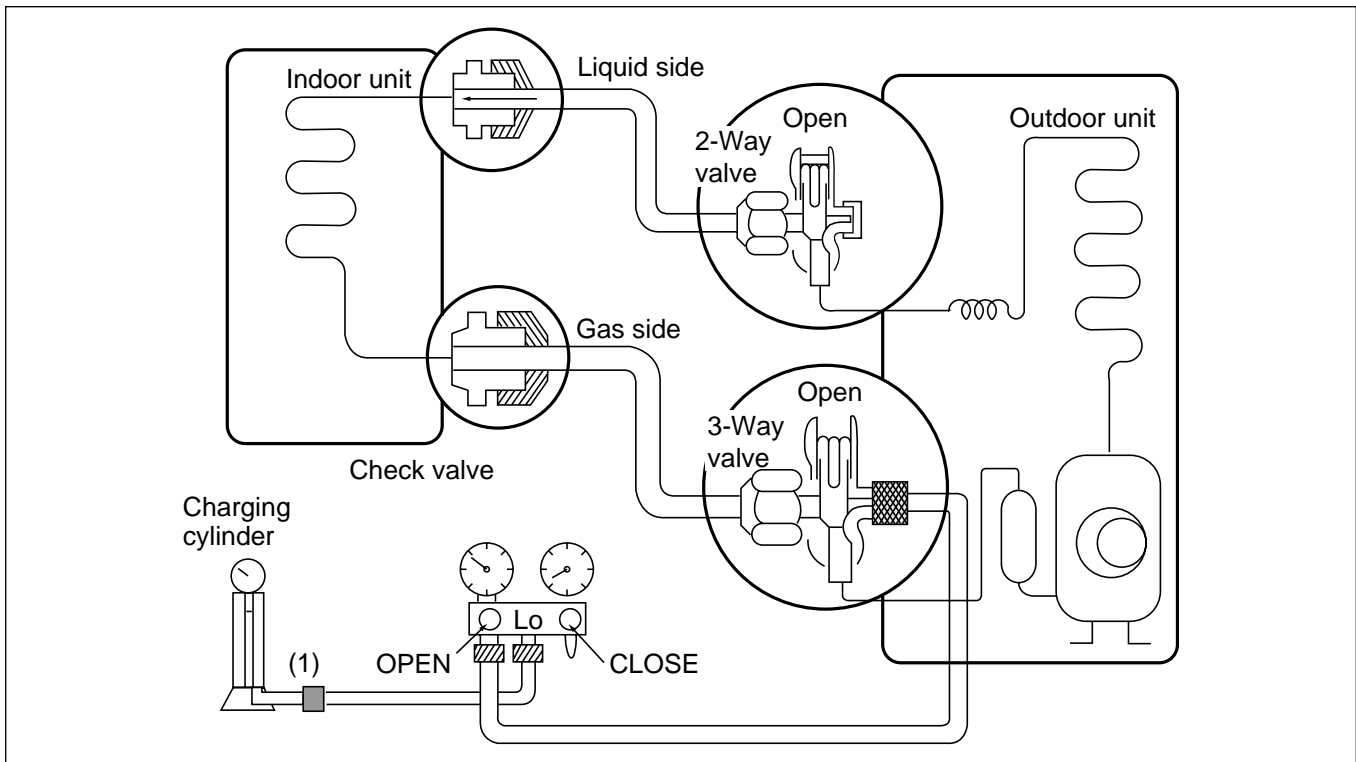

• Procedure

(1) Connect the charge hose to the charging cylinder.

- Connect the charge hose which you disconnected from the vacuum pump to the valve at the bottom of the cylinder.
- If you are using a gas cylinder, also use a scale and reverse the cylinder so that the system can be charged with liquid.

(2) Purge the air from the charge hose.

- Open the valve at the bottom of the cylinder and press the check valve on the charge set to purge the air. (Be careful of the liquid refrigerant). The procedure is the same if using a gas cylinder.

(3) Open the valve (Lo side on the charge set and charge the system with liquid refrigerant.

- If the system can not be charged with the specified amount of refrigerant, it can be charged with a little at a time (approximately 150g each time) while operating the air conditioner in the cooling cycle; however, one time is not sufficient, wait approximately 1 minute and then repeat the procedure (pumping down-pin).

This is different from previous procedures.

Because you are charging with liquid refrigerant from the gas side, absolutely do not attempt to charge with larger amounts of liquid refrigerant while operating the air conditioner.

(4) Immediately disconnect the charge hose from the 3-way valve's service port.

- Stopping partway will allow the gas to be discharged.
- If the system has been charged with liquid refrigerant while operating the air conditioner turn off the air conditioner before disconnecting the hose.


(5) Mount the valve stem nuts and the service port nut.

- Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
- Be sure to check for gas leakage.

Cycle Troubleshooting Guide

Trouble analysis

1. Check temperature difference between intake and discharge air and operating current.

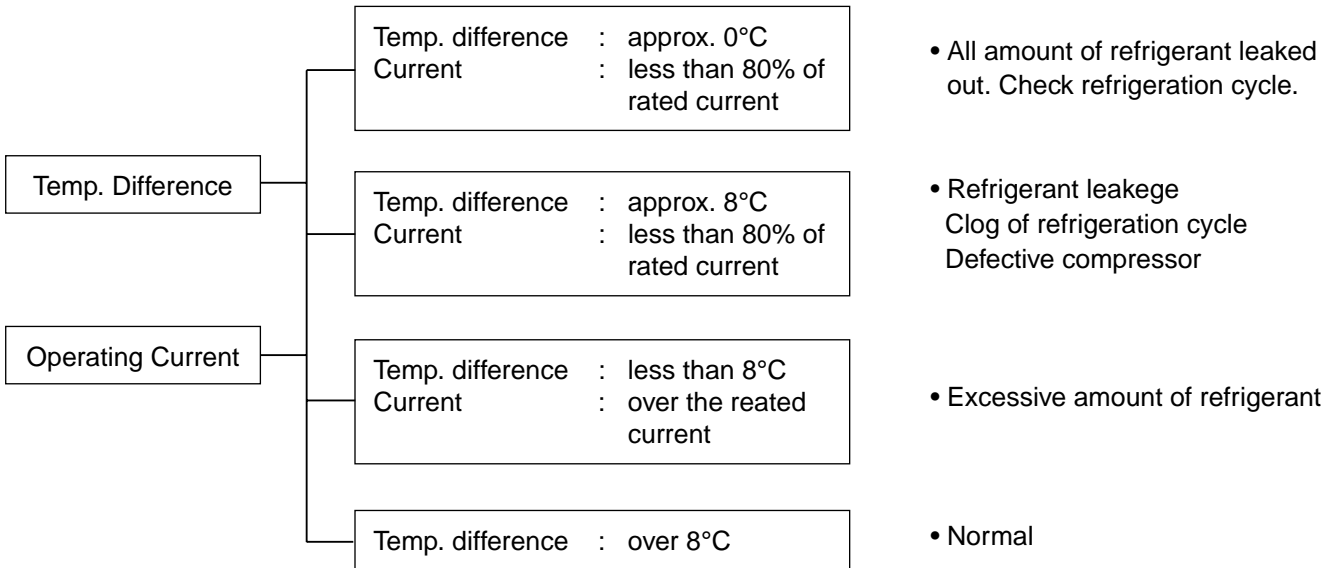

Notice :

Temperature difference between intake and discharge air depends on room air humidity. When the room air humidity is relatively higher, temperature difference is smaller. When the room air humidity is relatively lower temperature difference is larger.

2. Check temperature and pressure of refrigeration cycle.

Suction pressure (Compared with the normal value)	Temperature (Compared with the normal valve)	Cause of Trouble	Description
Higher	High	Defective compressor Defective 4-way reverse valve	Current is low.
	Normal	Excessive amount of refrigerant	High pressure does not quickly rise at the beginning of operation.
Lower	Higher	Insufficient amount of refrigerant (Leakage) Clogging	Current is low. Current is low.


Notice :

1. The suction pressure is usually 4.5~6.0 kg/cm²G(Cooling) at normal condition.
2. The temperature can be measured by attaching the thermometer to the low pressure tubing and wrap it with putty.

Electronic Parts Troubleshooting Guide


1. Product does not operate at all.

(* Refer to Electronic Control Device drawing and Schematic diagram.)

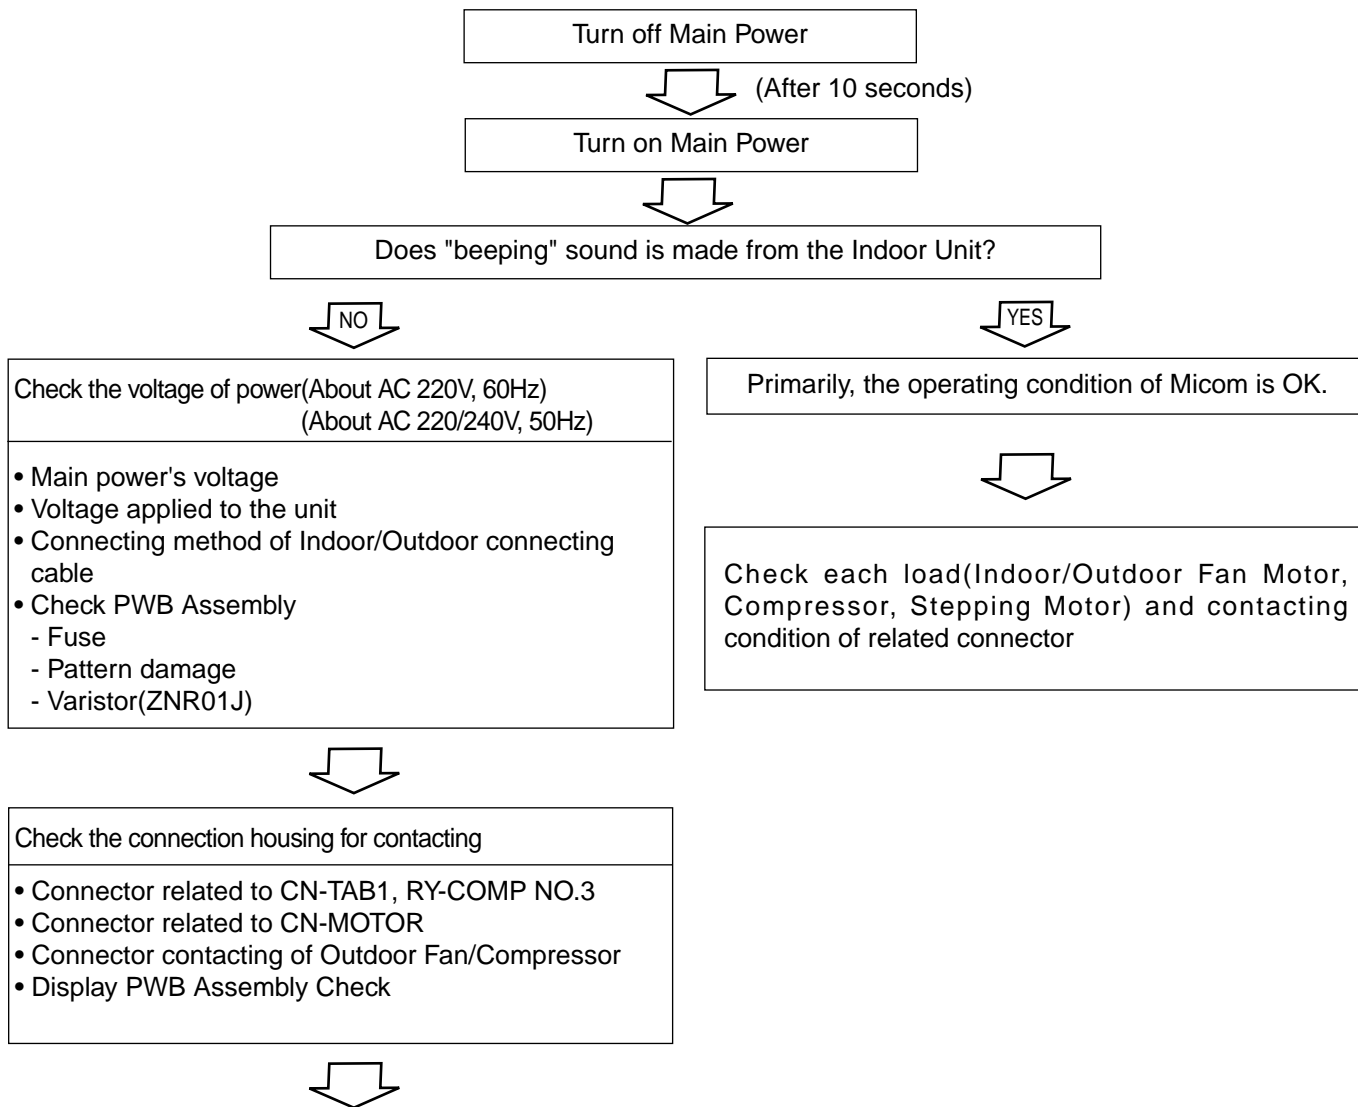

Main PCB Board Operation Check		
Items	Content	Remedy
<ul style="list-style-type: none"> • SMPS Transformer (Indoor unit) - Input Voltage - Output Voltage(ZD02D) <li style="text-align: center;">↓ • IC04D(7805) Output (Indoor/Outdoor unit) <li style="text-align: center;">↓ • IC01A(KIA7036, Reset IC) X01(8MHz) 	<ul style="list-style-type: none"> - About AC220V/240V±10% - Check the power voltage - About DC12V • DC +5V • Voltage of Micom No. 2, (DC +4.5V over) and Soldering condition. 	<ul style="list-style-type: none"> • Replace Trans • Replace IC04D • Replace faulty parts

2. The product is not operate with the remote control.

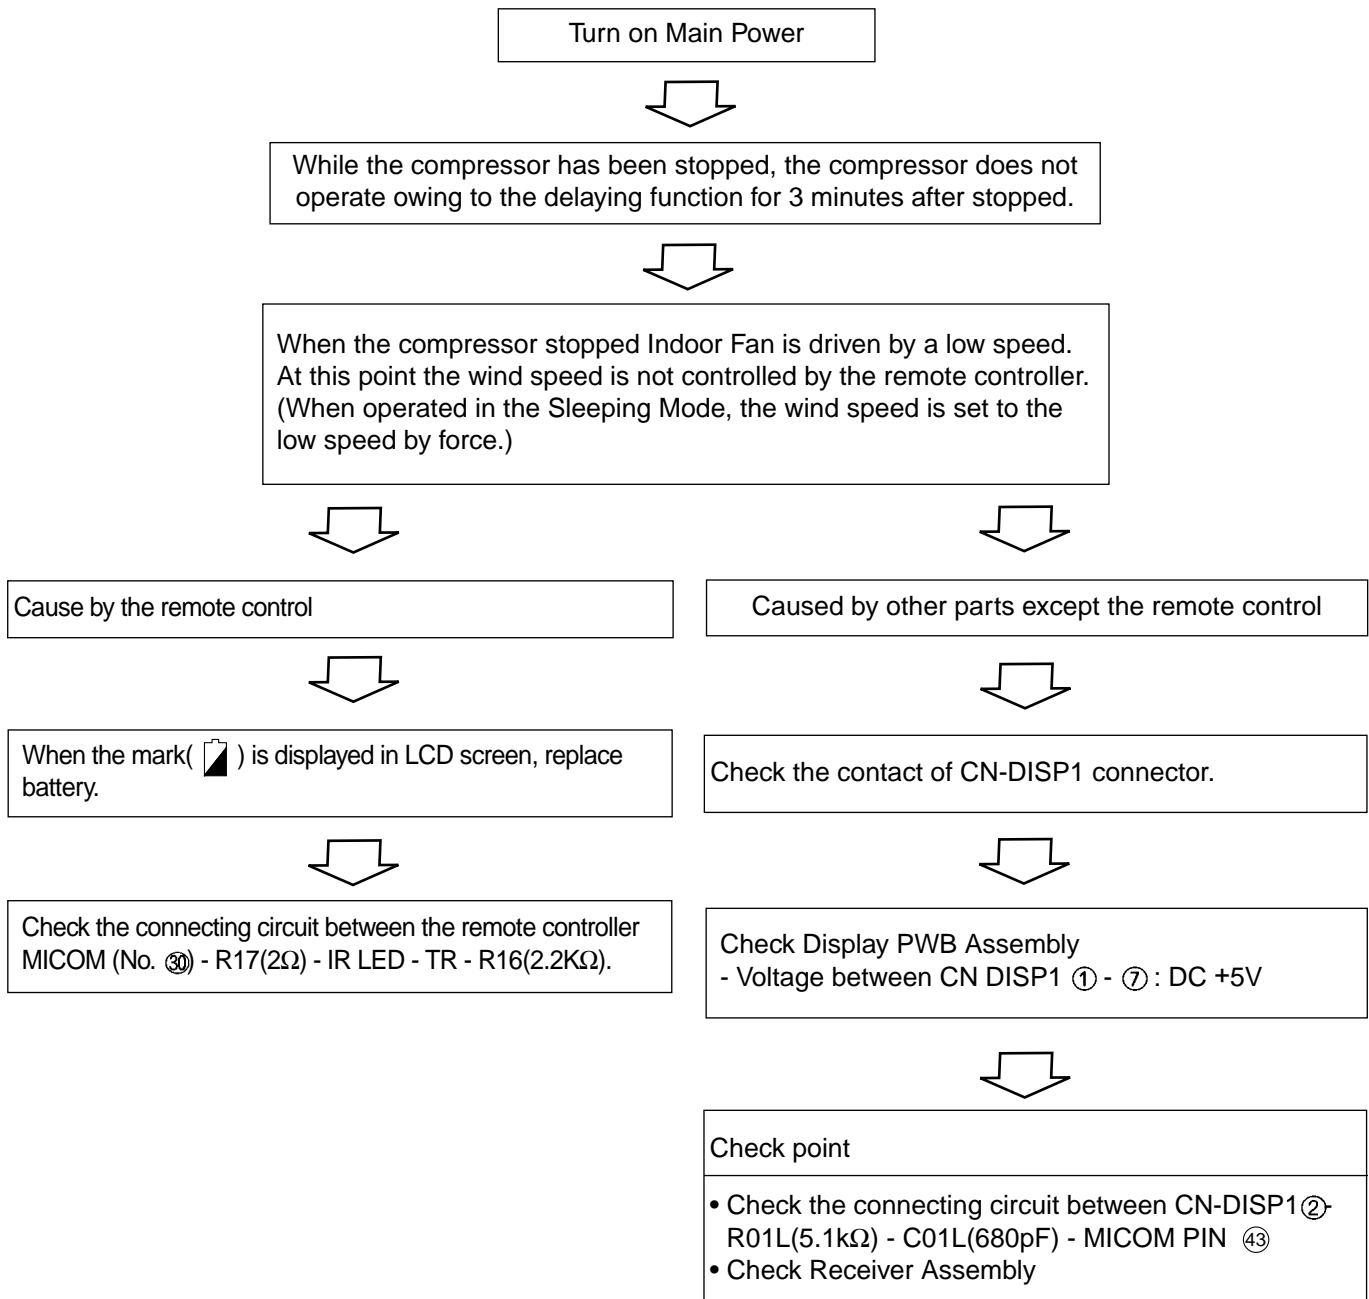

3. Compressor/Outdoor Fan are unable to drive.

Turn on Main Power



Operate "Cooling Mode(※)" by setting the desired temperature of the remote controller is less than one of the indoor temperature by 1°C at least.



When in Air Circulation Mode, Compressor/Outdoor Fan is stopped.



Check the sensor for indoor temperature is attached as close as to be effected by the temperature of Heat Exchanger(EVA).



When the sensor circuit for indoor temperature and connector are in bad connection or are not engaged, Compressor/Outdoor Fan is stopped.

- Check the related circuit of RY-FAN.
- Check the indoor temperature sensor is disconnected or not(About 10kΩ / at 25°C).



Check Relay(RY - COMP) for driving compressor.

- When the power(About AC220V/240V) is applied to the connecting wire terminal support transferred to compressor, PWB Assembly is normal.
- Check the circuit related to the relay.

Check point	COMP ON	COMP OFF
Between Micom(No. 62) and GND	DC5V	DC0V
Between IC01M(No. 14) and GND	Below DC 1V (app)	About DC12V




Turn off Main Power



- Check the electrical wiring diagram of outdoor side.
- Check the abnormal condition for the component of Compressor/Outdoor Fan Motor.
- Check the "open" or "short" of connecting wires between indoor and outdoor.

4. When indoor Fan does not operate.

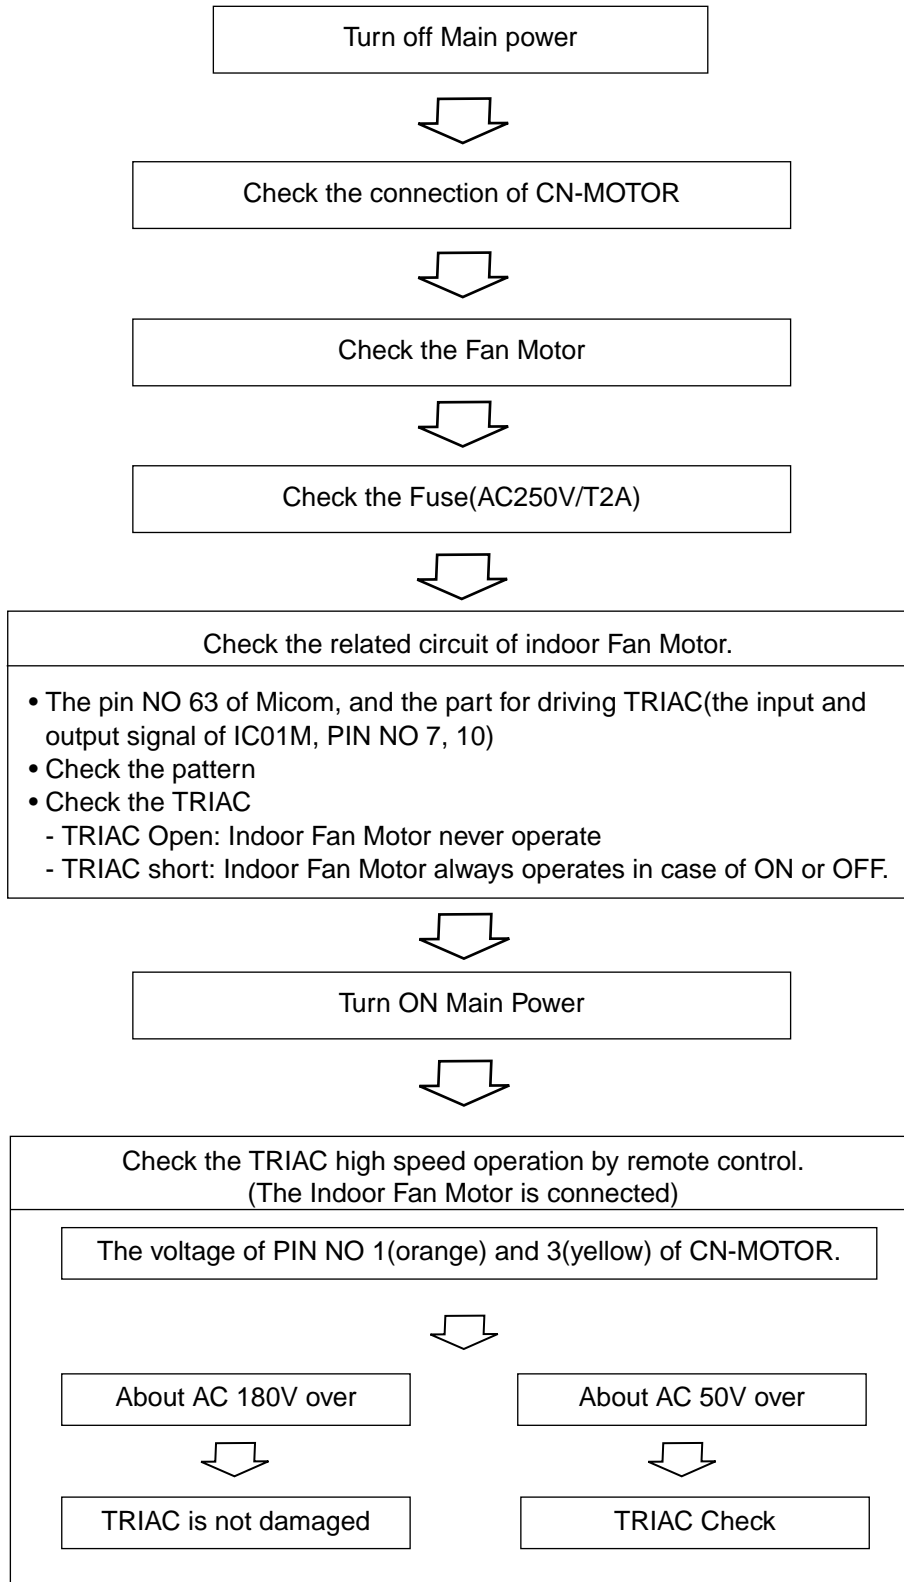

5. When Vertical Louver does not operate.

- Confirm that the Vertical Louver is normally geared with the shaft of Stepping Motor.
- If the regular torque is detected when rotating the Vertical Louver with hands ⇒ Normal



- Check the connecting condition of CN-U/D Connector
- Check the soldering condition(on PWB) of CN-U/D Connector



Check the operating circuit of the Vertical Louver

- Confirm that there is DC +12V between pin①(REDF) of CN-U/D and GND.
- Confirm that there is a soldering short at following terminals.
 - Between ⑥⑩, ⑥⑪, ⑥⑫ and ⑥⑬ of MICOM
 - Between ②, ③, ④ and ⑤ of IC01M
 - Between ⑮, ⑭, ⑬ and ⑫ of IC01M



If there are no problems after above checks

- Confirm the assembly conditions that are catching and interfering parts in the rotation radial of the Vertical Louver

6. When Heating does not operate

Turn ON Main Power



Operate "Heating Mode(☀)" by setting the desired temperature of the remote control is higher than one of the indoor temperature by 2°C at least.



In heating Mode, the indoor fan operates in case the pipe temperature is higher than 28°C.



Check the connector of intake and pipe sensor(thermistors)

- Check the related circuit of RY-4WAY
- Check the indoor room temperature is disconnected or not (about 10KΩ/at 25°C).
- Check the indoor pipe temperature is disconnected or not (about 5KΩ/at 25°C).



Check the DC voltage on the PWB ASSEMBLY

- The details of check are as followings

- Comp Relay.

Check point	Comp ON	Comp OFF
Between Micom (NO.59) and GND	DC 5V	DC 0V
Between IC01M (NO.11) and GND	Below DC 1V	About DC 12V

- Outdoor fan Relay

Check point	Fan ON	Fan OFF
Between Micom (NO.53) and GND	DC 5V	DC 0V
Between IC02M (NO.12) and GND	Below DC 1V	About DC 12V

- 4 way Relay

Check point	4 way ON	4 way OFF
Between Micom (NO.51) and GND	DC 5V	DC 0V
Between IC02M (NO.11) and GND	Below DC 1V	About DC 12V



Turn off Main Power




- Check the electrical wiring diagram of outdoor side.
- Check the abnormal condition for the component of Compressor/Outdoor Fan Motor, 4 way.
- Check the "open" or "short" of connecting wires between indoor and outdoor.


Electronic Control Device

(1) MAIN P.W.B ASSEMBLY (AC PART)

• TOP VIEW

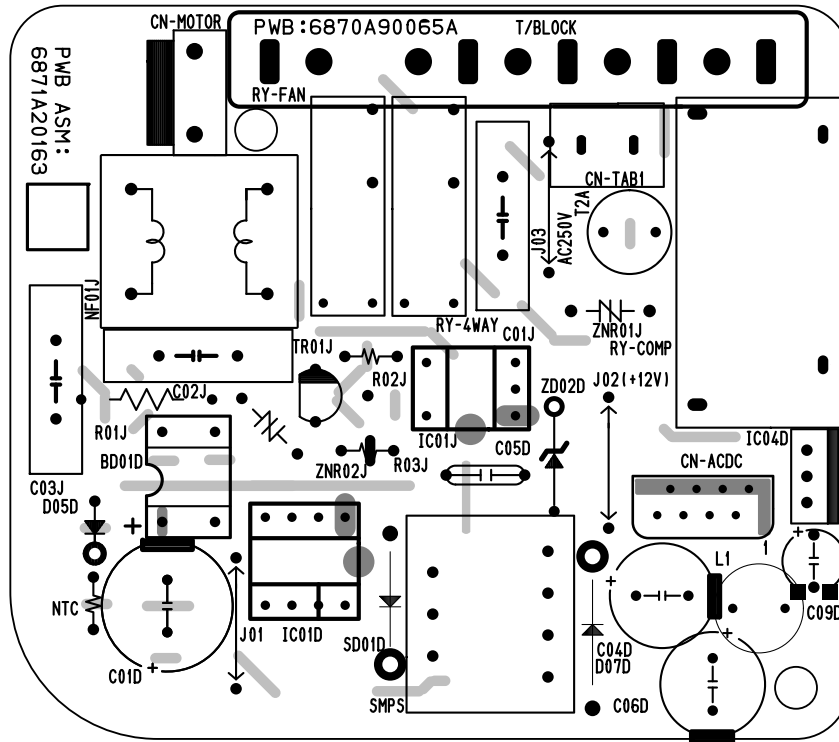


• BOTTOM VIEW

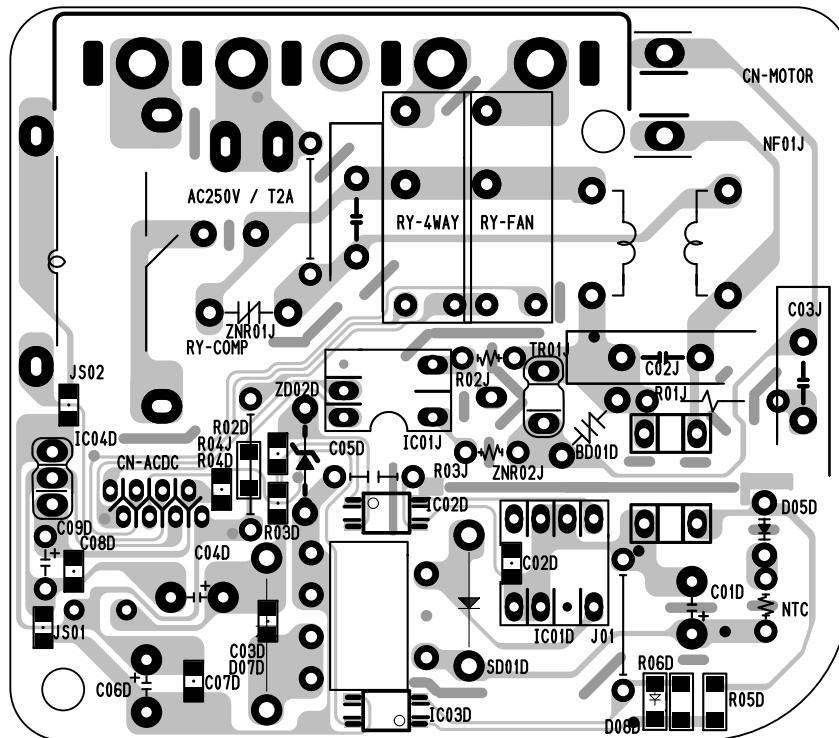


(3) DISPLAY ASSEMBLY

– 6871A20194

• TOP VIEW

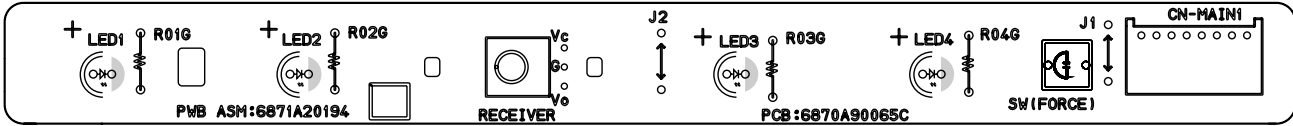


• BOTTOM VIEW

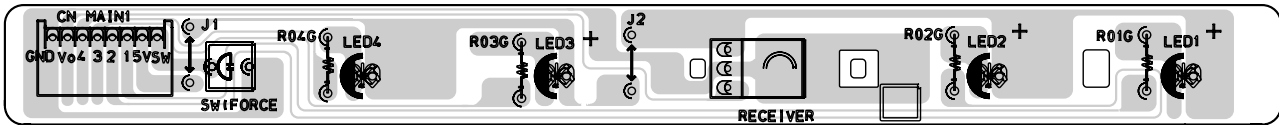


– 6871A30009


• TOP VIEW

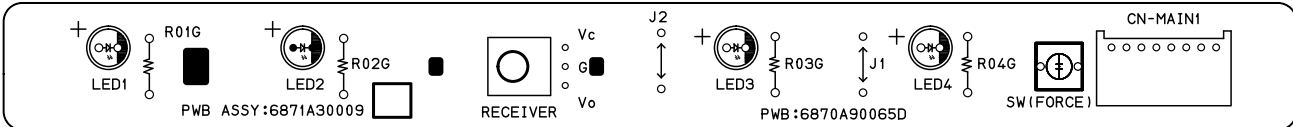

• BOTTOM VIEW

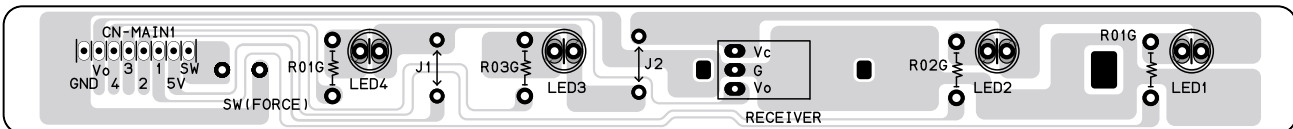


Schematic Diagram

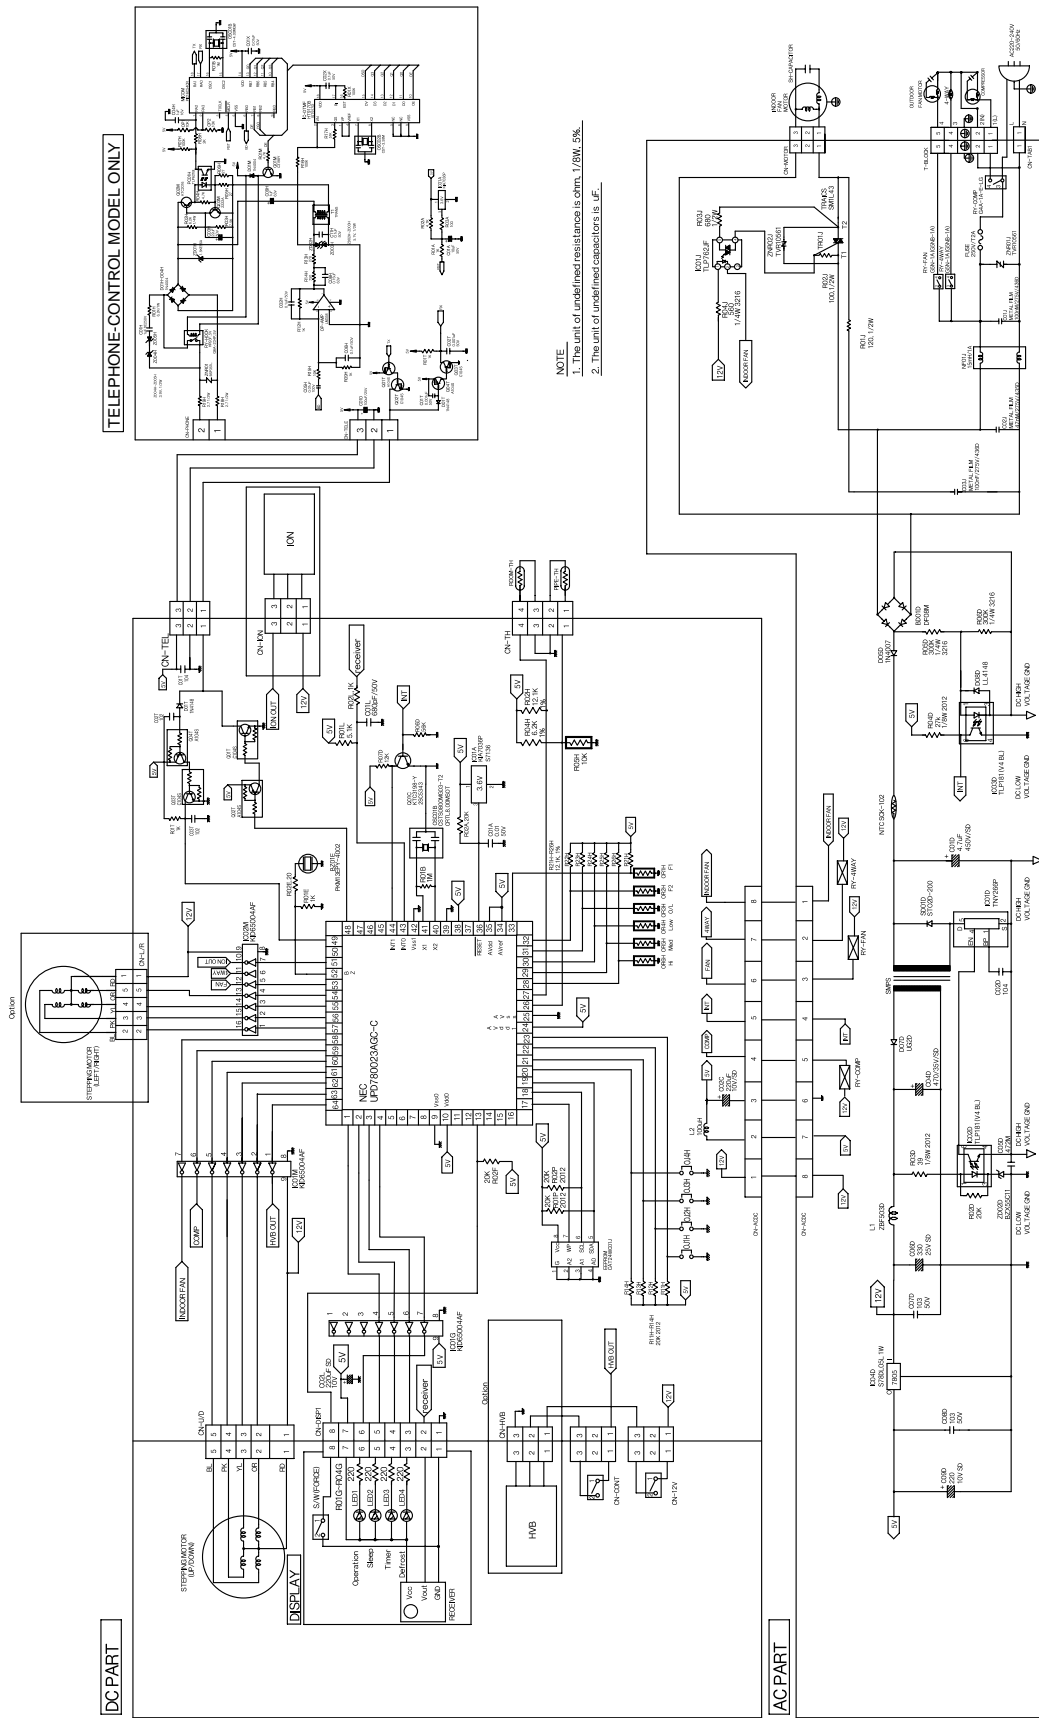


Exploded View and Replacement Parts List

1. Indoor Unit

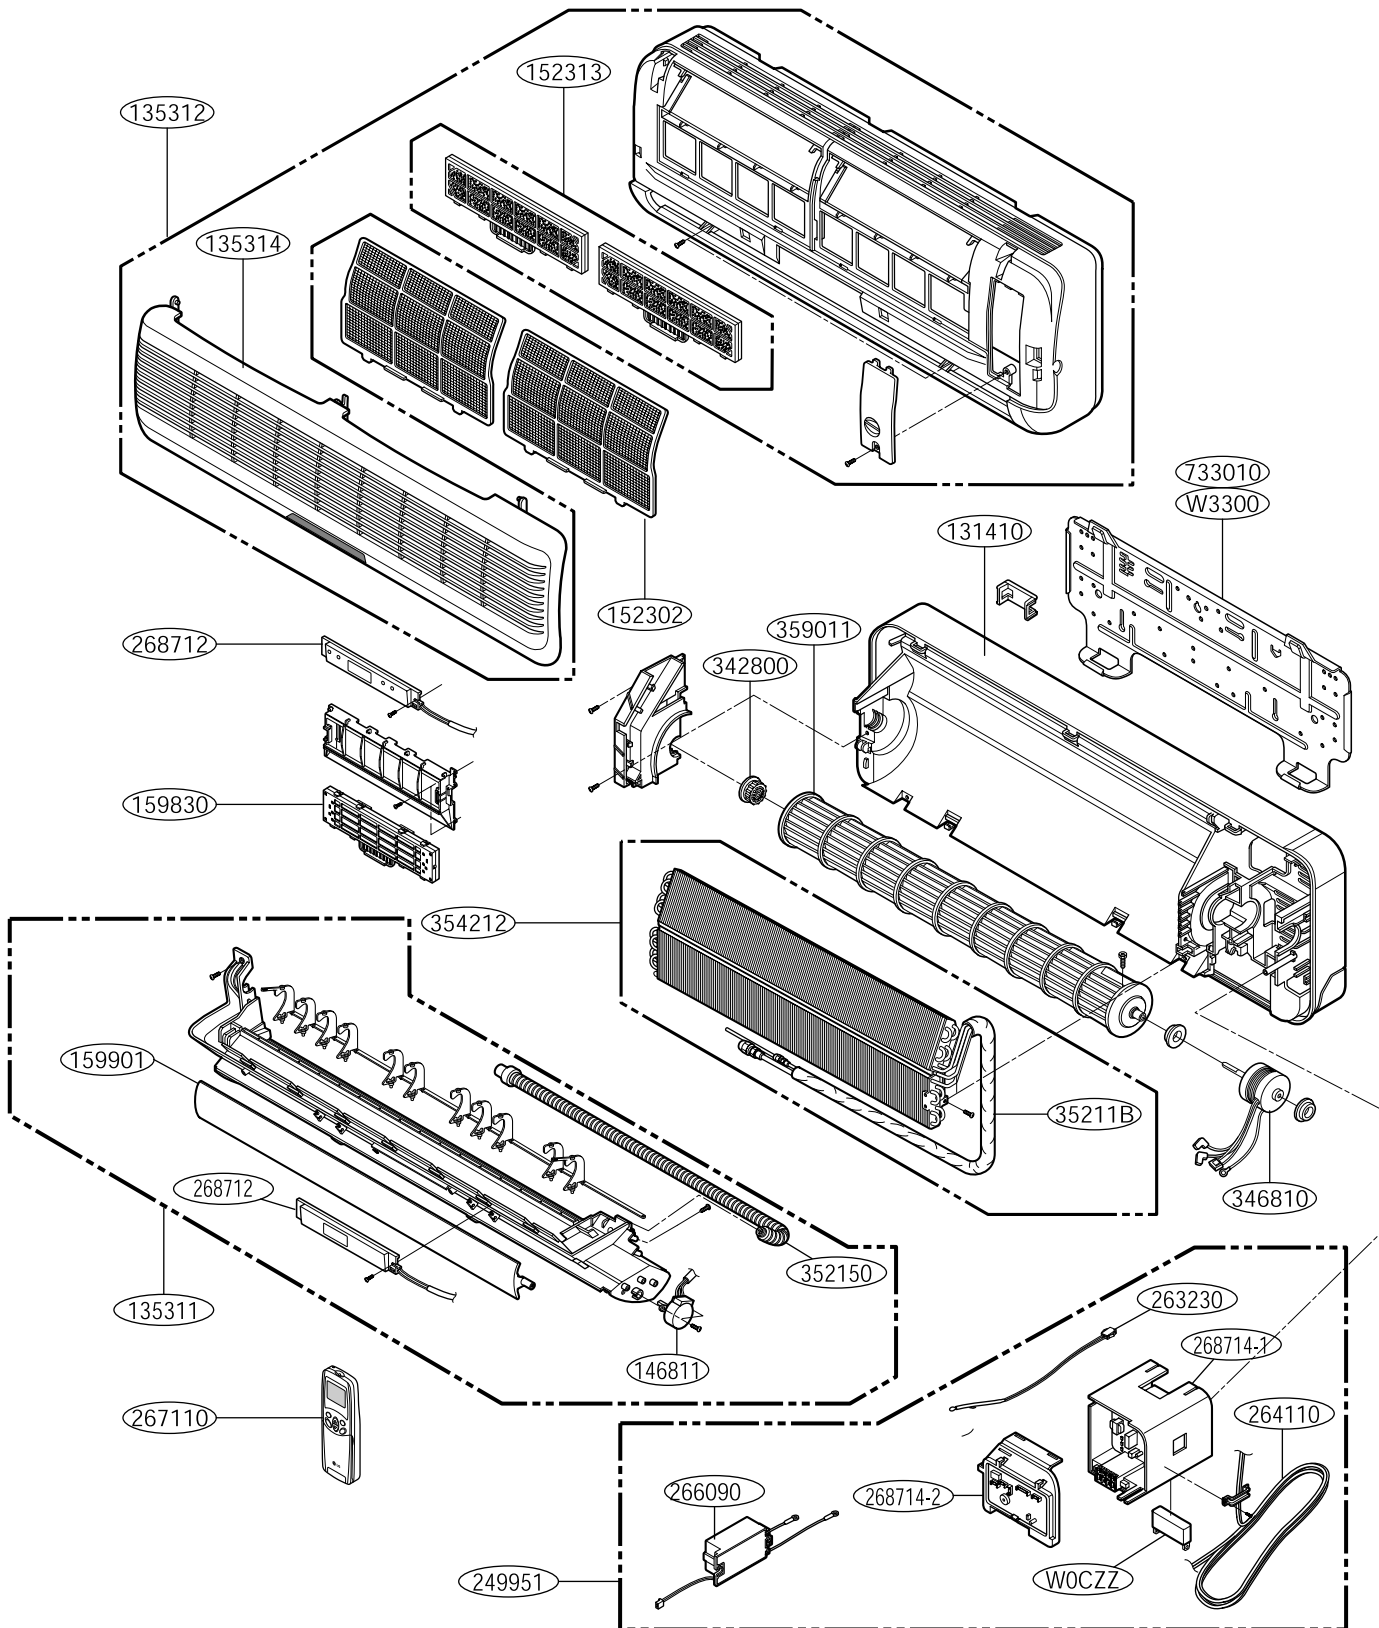

Exploded View and Replacement Parts List

1. Indoor Unit

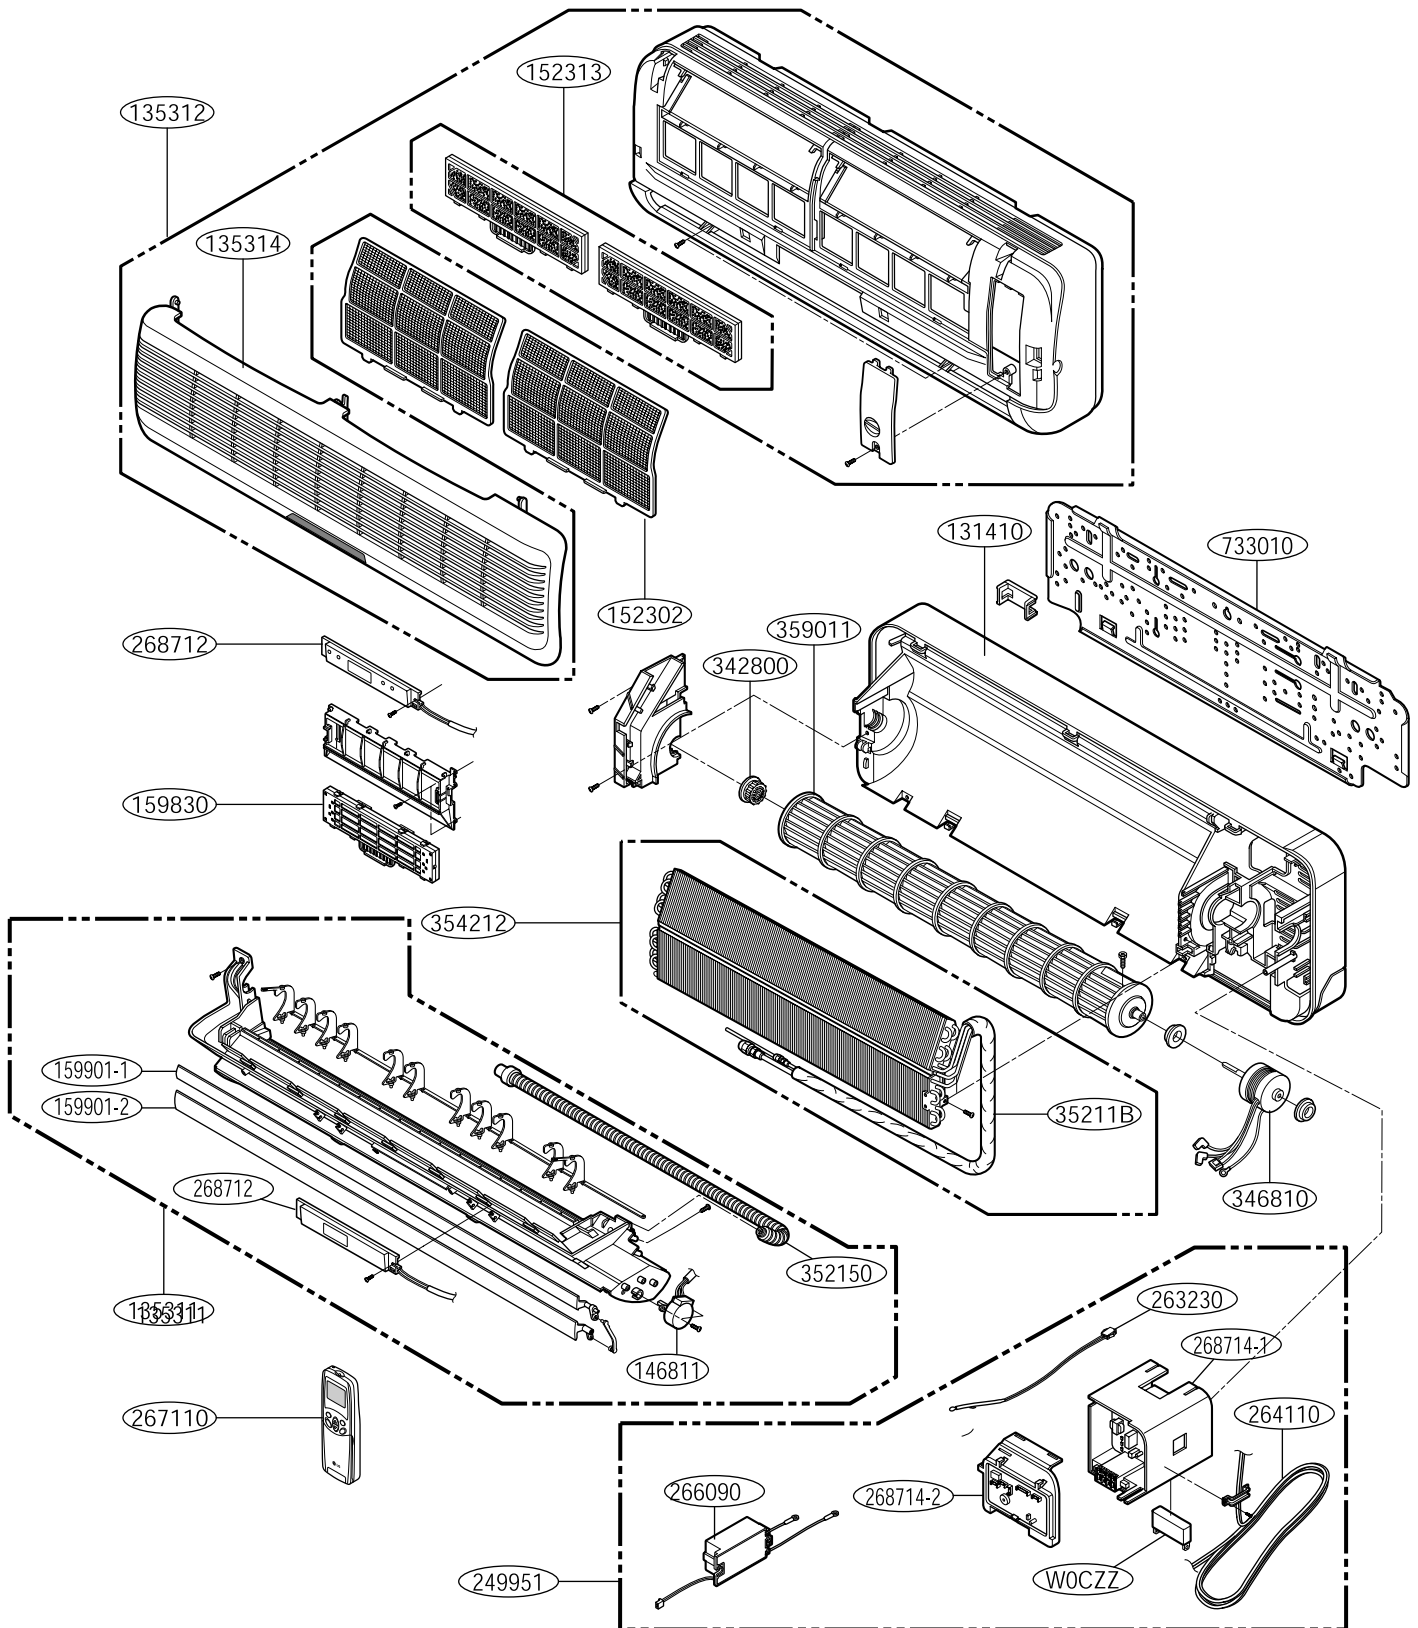

Parts List

LOCATION NO	DESCRIPTION	LS-J0766ML	LS-J0965ML	LS-J0965FR
131410	CHASSIS ASSY	3141A20001D	3141A20001D	3141A20001B
135311	GRILLE ASSEMBLY,DISCHARGE(INDO	3531A10120B	3531A10120B	3531A10074F
135314	GRILLE ASSY,INLET SUB	3531A10047F		
135316	GRILLE ASSEMBLY,FRONT(INDOOR)	3531A10102P	3531A10102F	3531A10086P
135516	COVER ASSEMBLY,MOTOR	3551A30054A	3551A30054A	3551A30054A
146811	MOTOR ASSEMBLY,STEP	4681A20055A	4681A20055A	4681A20055A
152302	FILTER(MECH),A/C	5230AR2630A	5230AR2630A	5230AR2630A
152313	FILTER ASSY,DEODORIZER	5231A30001C	5231AR2412T	5231AR2412T
159830	AIR CLEANER ASSY	5983A10009B	-	
159901	VANE,HORIZONTAL	5990AR7225D	5990AR7225D	5990A30012C
249951	CONTROL BOX ASSEMBLY,INDOOR	4995A20199V	4995A20199F	4995A20199F
263230	THERMISTOR ASSY	3Q35015U	3Q35015U	3Q35015U
263230	THERMISTOR ASSEMBLY	6323A20004C	6323A20004C	6323A20004C
264110	POWER CORD ASSEMBLY	6411A20013D	6411A20013D	6411A20013D
266090	H.V ASSEMBLY	6609A10003J	-	-
267110	REMOTE CONTROLLER ASSEMBLY	6711A20010E	6711A20010A	6711A20025T
268712	PWB(PCB) ASSEMBLY,DISPLAY	6871A30009S	6871A30009S	6871A20139E
268714-1	PWB(PCB) ASSEMBLY,MAIN(AC)	6871A20163B	6871A20163B	6871A20163B
268714-2	PWB(PCB) ASSEMBLY,MAIN(DC)	6871A20218S	6871A20218F	6871A20218F
342800	BEARING	3H02821B	3H02821B	3H02821B
346810	MOTOR ASSEMBLY,INDOOR	4681A20003C	4681A20003C	4681A20003C
35211B	TUBE ASSY,TUBING	5211AR7288C	5211AR7288D	5211AR7288D
352150	HOSE ASSEMBLY,DRAIN	5251AR2575A	5251AR2575A	5251AR2575A
354212	EVAPORATOR ASSY,FINAL	5421AR6176G	5421AR6176L	5421AR6176L
359011	FAN ASSY,CROSS FLOW	5901AR6141A	5901AR6141A	5901AR6141A


Parts List

LOCATION NO	DESCRIPTION	LS-L1265ML	LS-L1265FR
131410	CHASSIS ASSY	3141A20003B	3141A20003H
135311	GRILLE ASSEMBLY,DISCHARGE(INDO	3531A10121A	3531A10075F
135314	GRILLE ASSY,INLET SUB	3531A20059H	3531A10093D
135316	GRILLE ASSEMBLY,FRONT(INDOOR)	3531A10099M	3531A10087P
135516	COVER ASSEMBLY,MOTOR	3551A30054C	3551A30054C
146811	MOTOR ASSEMBLY,STEP	4681A20055A	4681A20055A
152302	FILTER(MECH),A/C	5230A20004A	5230A20004A
152313	FILTER ASSY,DEODORIZER	5231AR2412T	5231AR2412T
159830	AIR CLEANER ASSY	-	-
159901-1	VANE,HORIZONTAL	5990A30006B	5990A30013B
159901-2	VANE,HORIZONTAL	5990A30007B	5990A30014B
249951	CONTROL BOX ASSEMBLY,INDOOR	4995A20184E	4995A20184E
263230	THERMISTOR ASSEMBLY	6323A20004A	6323A20004A
264110	POWER CORD ASSEMBLY	6411A20013A	6411A20013A
266090	H.V ASSEMBLY	-	-
267110	REMOTE CONTROLLER ASSEMBLY	6711A20010A	6711A20025T
268712	PWB(PCB) ASSEMBLY,DISPLAY	6871A30009S	6871A20139F
268714-1	PWB(PCB) ASSEMBLY,MAIN(AC)	6871A20163B	6871A20163B
268714-2	PWB(PCB) ASSEMBLY,MAIN(DC)	6871A20164E	6871A20164E
342800	BEARING	3H02821B	3H02821B
346810	MOTOR ASSEMBLY,INDOOR	4681A20003P	4681A20003P
35211B	TUBE ASSY,TUBING	2H02449B	2H02449B
352150	HOSE ASSEMBLY,DRAIN	5251AR2575A	5251AR2575A
354212	EVAPORATOR ASSY,FINAL	5421A20031V	5421A20031V
359011	FAN ASSY,CROSS FLOW	5901AR6141C	5901AR6141C

Parts List


LOCATION NO	DESCRIPTION	LS-K1865ML	LS-K1865FR	LS-K2465ML	LS-K2465FR
131410	CHASSIS ASSY	3141A20002H	3141A20002D	3141A20002H	3141A20002D
135311	GRILLE ASSEMBLY,DISCHARGE(INDO	3531A10124F	3531A10076F	3531A10124F	3531A10076F
135314	GRILLE ASSY,INLET SUB	3531A20062F	3531A10094D	3531A20062F	3531A10094D
135316	GRILLE ASSEMBLY,FRONT(INDOOR)	3531A20065Y	3531A10088K	3531A20065Y	3531A10088K
135516	COVER ASSEMBLY,MOTOR	3551A30054E	3551A30054E	3551A30054G	3551A30054G
146811	MOTOR ASSEMBLY,STEP	4681A20055A	4681A20055A	4681A20055A	4681A20055A
152302	FILTER(MECH),A/C	5230A20001A	5230A20001A	5230A20001A	5230A20001A
152313	FILTER ASSY,DEODORIZER	5231AR2595G	5231AR2595G	5231AR2595G	5231AR2595G
159830	AIR CLEANER ASSY	-	-	-	-
159901-1	VANE,HORIZONTAL	5990A30001B	5990A30015B	5990A30001B	5990A30015B
159901-2	VANE,HORIZONTAL	5990A30002B	5990A30016B	5990A30002B	5990A30016B
249951	CONTROL BOX ASSEMBLY,INDOOR	4995A20188E	4995A20188E	4995A20188B	4995A20188B
263230	THERMISTOR ASSY	3Q35015U	3Q35015U	3Q35015U	3Q35015U
263230	THERMISTOR ASSEMBLY	6323A20004B	6323A20004B	6323A20004A	6323A20004A
264110	POWER CORD ASSEMBLY	6411A20013B	6411A20013B	6411A20013C	6411A20013C
266090	H.V ASSEMBLY	-	-	-	-
267110	REMOTE CONTROLLER ASSEMBLY	6711A20010A	6711A20025T	6711A20010A	6711A20025T
268712	PWB(PCB) ASSEMBLY,DISPLAY	6871A30009T	6871A20139F	6871A30009T	6871A20139F
268714-1	PWB(PCB) ASSEMBLY,MAIN(AC)	6871A20163B	6871A20163B	6871A20163B	6871A20163B
268714-2	PWB(PCB) ASSEMBLY,MAIN(DC)	6871A20216E	6871A20216E	6871A20216B	6871A20216B
342800	BEARING	3H02821B	3H02821B	3H02821B	3H02821B
346810	MOTOR ASSEMBLY,INDOOR	4681A20003D	4681A20003D	4681A20003H	4681A20003H
35211B	TUBE ASSY,TUBING	5211A30038B	5211A30038B	5211A30038L	5211A30038L
352150	HOSE ASSEMBLY,DRAIN	5251AR2575A	5251AR2575C	5251AR2575A	5251AR2575C
354212	EVAPORATOR ASSY,FINAL	5421A20011P	5421A20011P	5421A20021K	5421A20021K
359011	FAN ASSY,CROSS FLOW	5901AR2441D	5901AR2441D	5901AR2441D	5901AR2441D

2. Outdoor unit

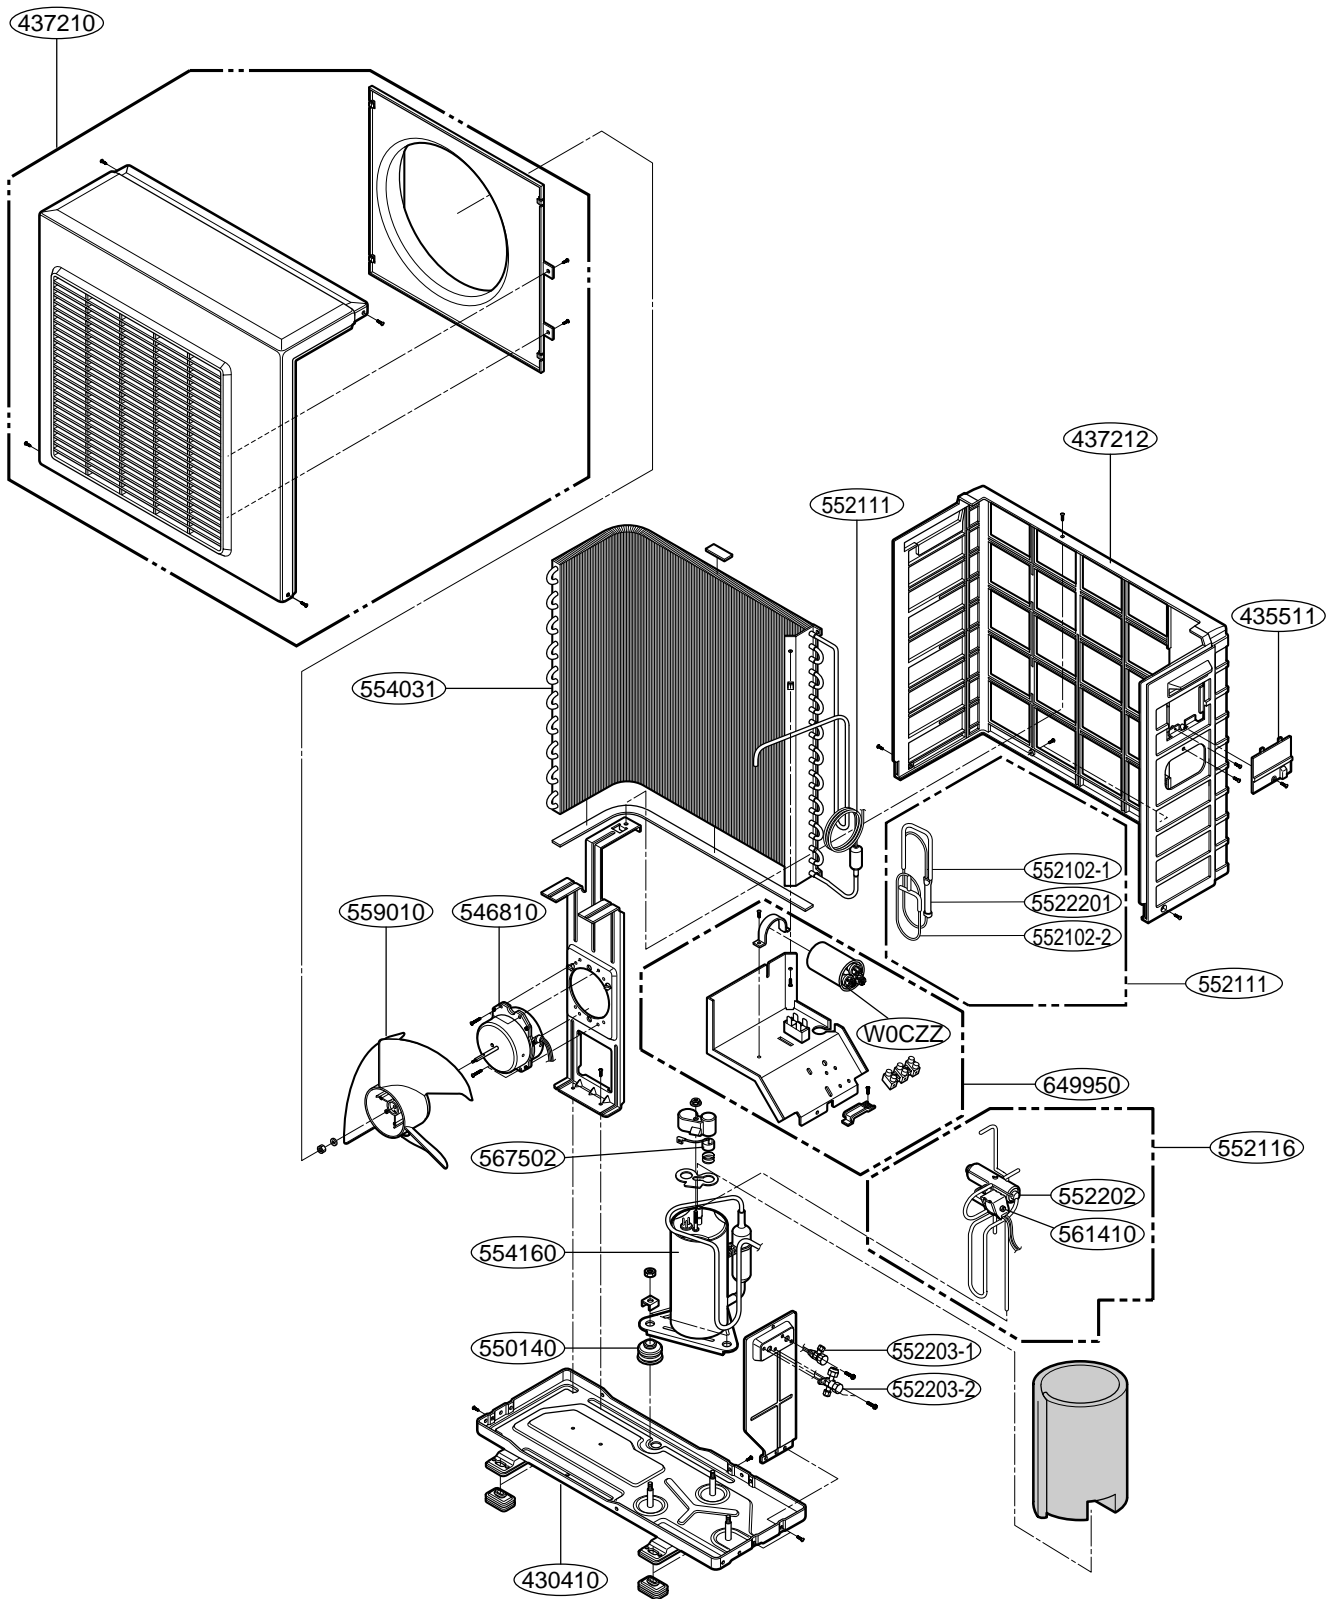


3. Outdoor unit

- 9K Btu Heat Pump

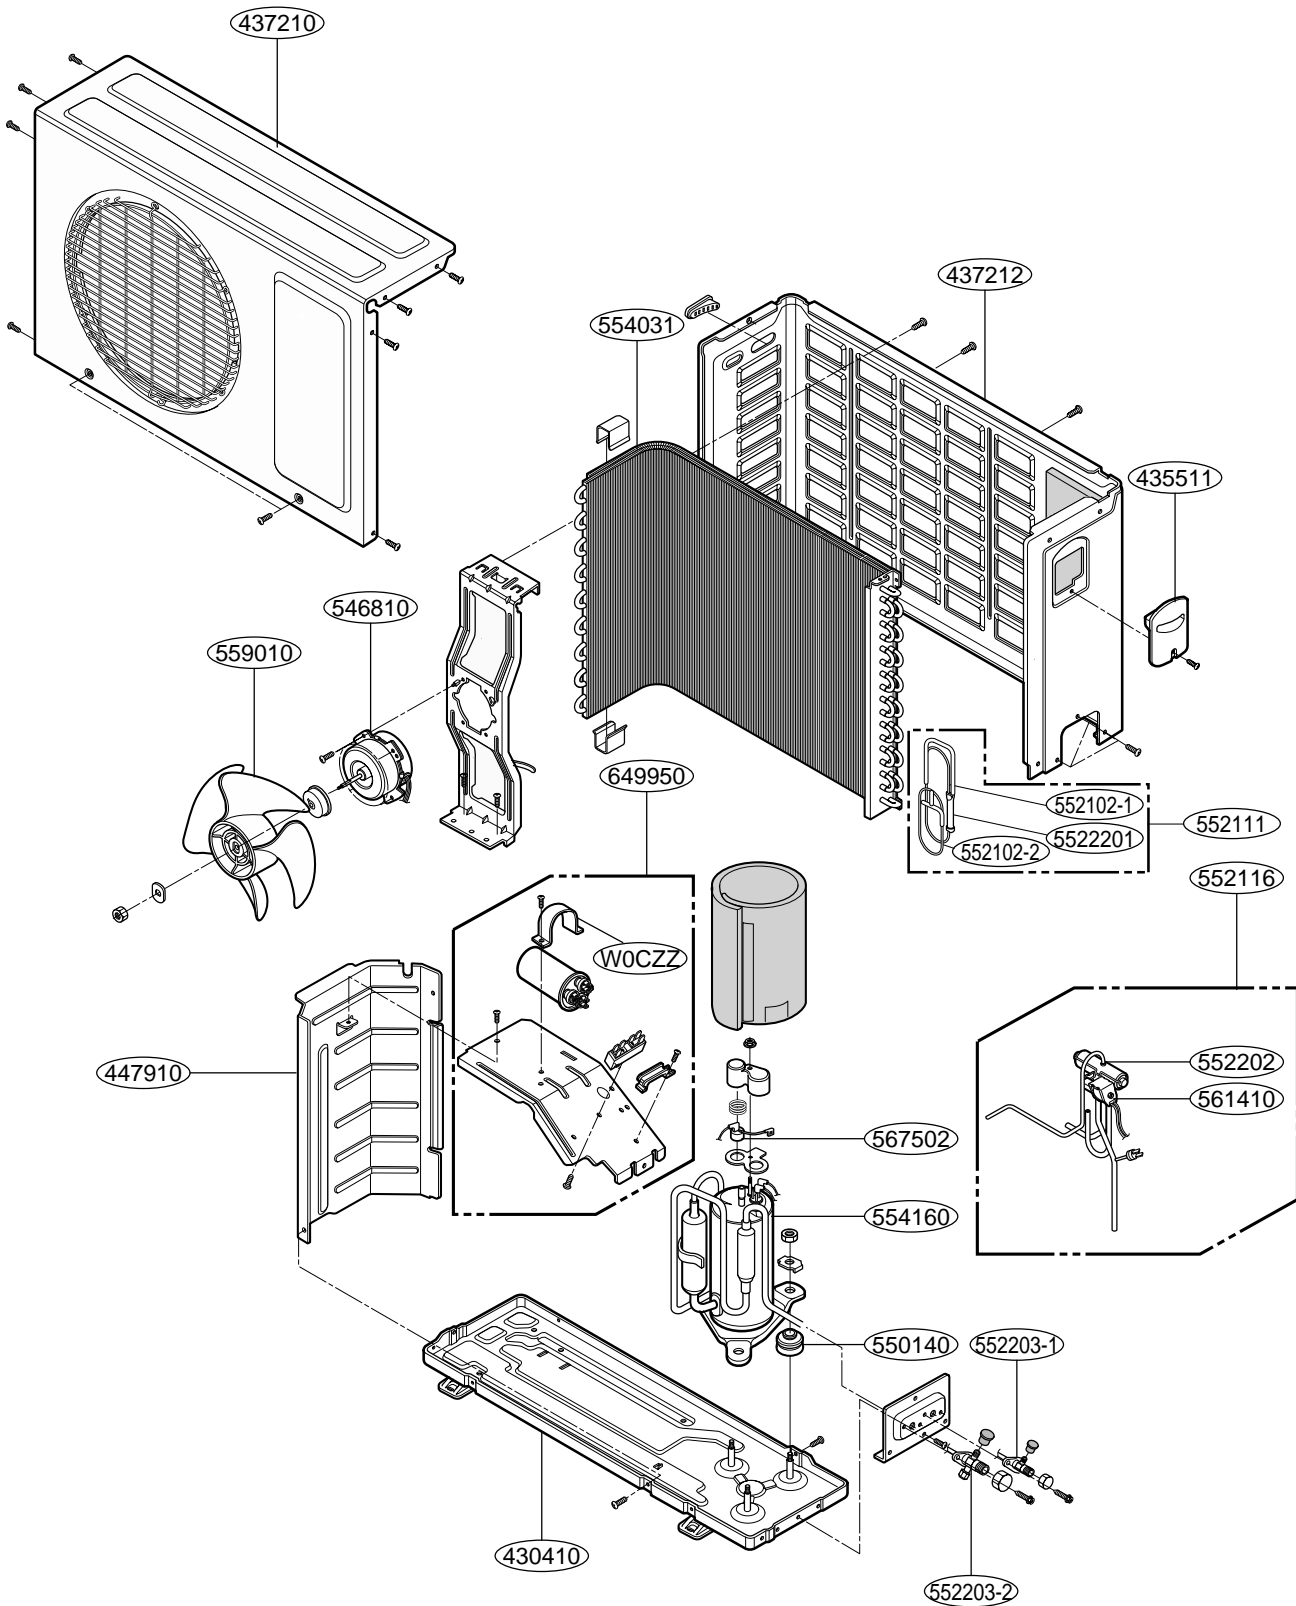

2. Outdoor unit

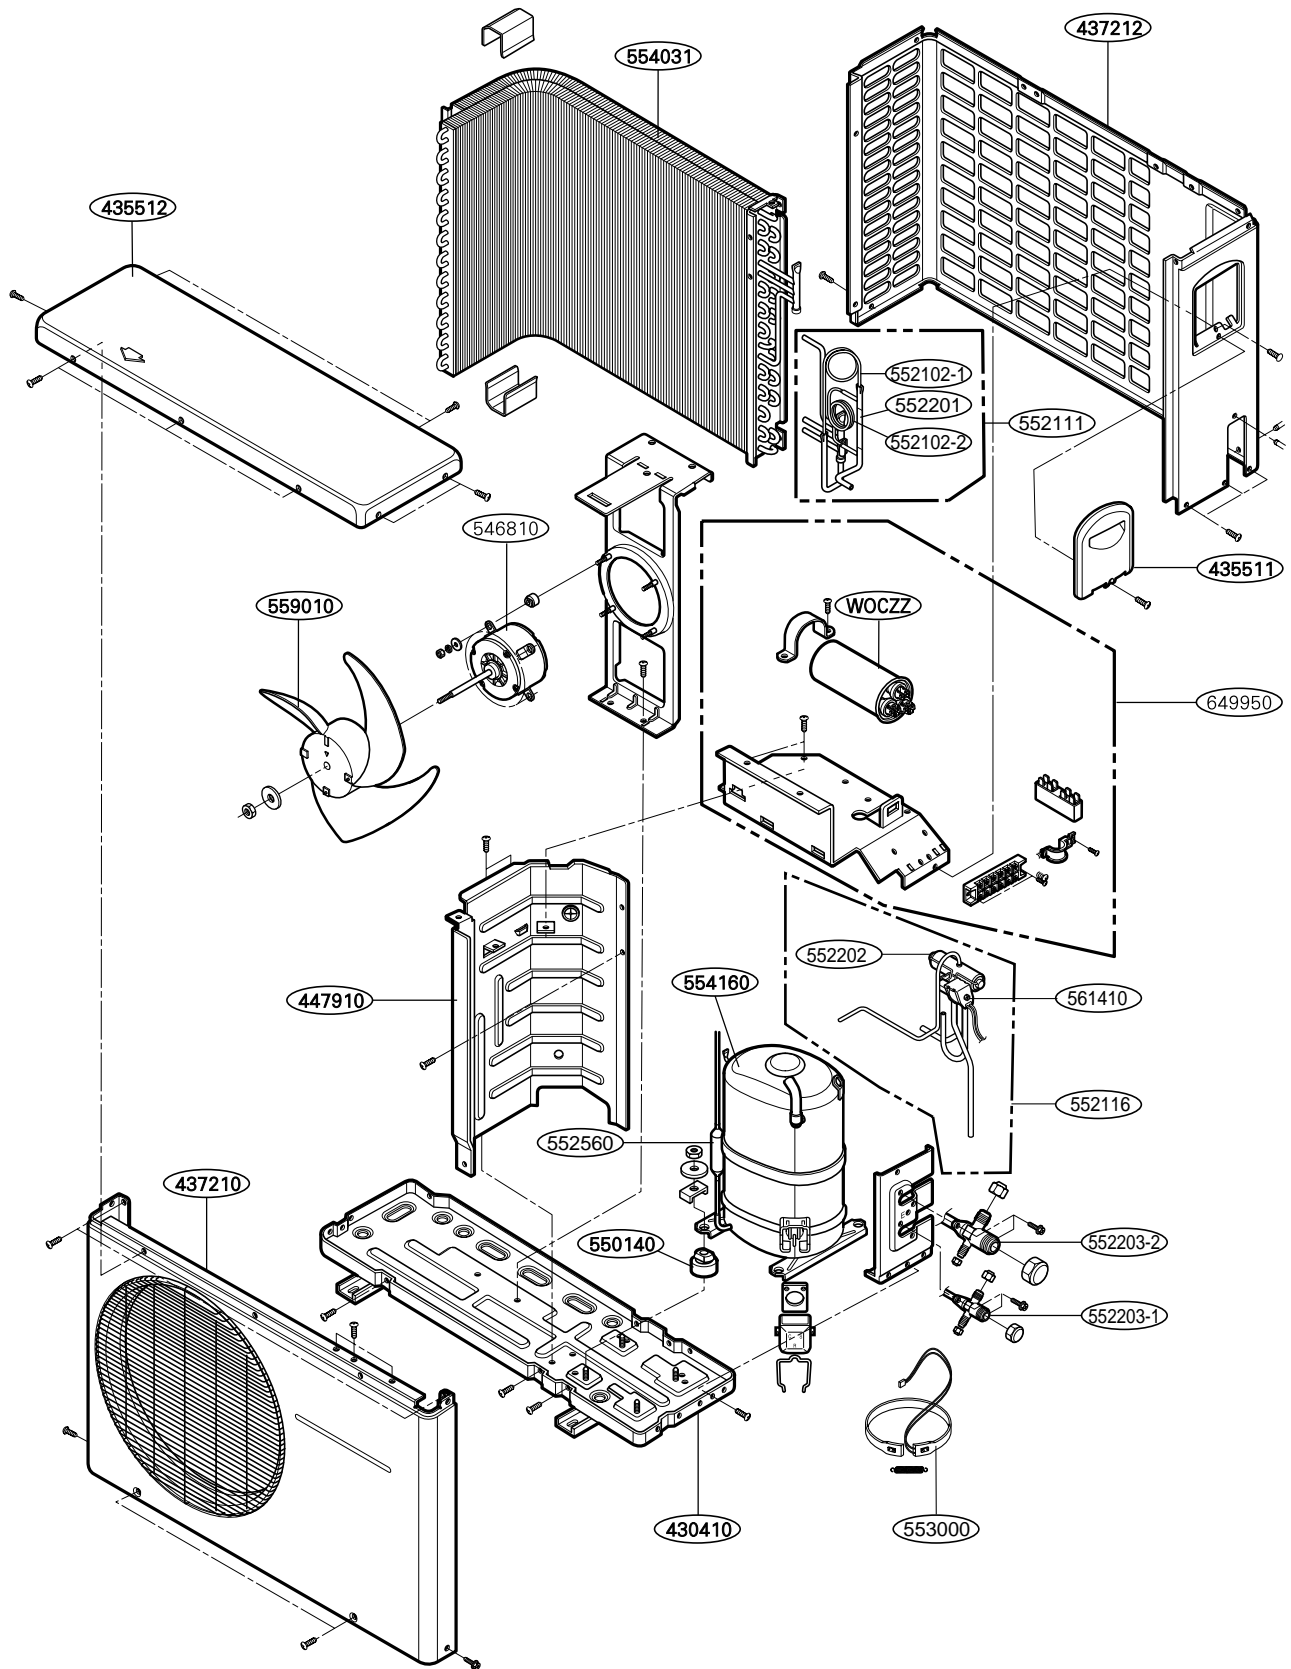

Parts List

LOCATION NO	DESCRIPTION	LS-J0766ML	LS-J0965FR	LS-J0965ML
430411	BASE ASSY,WELD[OUTDOOR]	3041A20016A	3041A20016A	3041A20016A
435511	COVER ASSEMBLY,CONTROL(OUTDOOR)	3551A30058F	3551A30058C	3551A30058C
435512	COVER ASSY,TOP(OUTDOOR)	3551A20034A	3551A20034A	3551A20034A
437210	PANEL ASSY,FRONT(OUTDOOR)	3721A20060B	3721A20060B	3721A20060B
437212	PANEL ASSY,REAR(OUTDOOR)	3721A20059A	3721A20059A	3721A20059A
447910	BARRIER ASSY,OUTDOOR	4791A20011A	4791A20011A	4791A20011A
546810	MOTOR ASSEMBLY,OUTDOOR	4681A20004F	4681A20004F	4681A20004F
550140	ISOLATOR,COMP	4H00982E	4H00982E	4H00982E
567502	O.L.P	6750U-L013A	-	-
552102	TUBE,CAPILLARY BEND	5210A20595F	5210A30151F	5210A30151F
552111	TUBE ASSEMBLY,CAPILLARY	5211A20133K	5211A30082R	5211A30082R
552203-1	VALVE,SERVICE	5220A20001B	2H02479H	2H02479H
552203-2	VALVE,SERVICE	2H02479H	5220A20001B	5220A20001B
554031	CONDENSER ASSEMBLY,BENT	5403A20045T	5403A20045B	5403A20045P
554160	COMPRESSOR SET	2520UGDP2BA	2520UGAP2FA	2520UGAP2FA
559010	FAN ASSEMBLY,PROPELLER	5900AR1266A	5900AR1266A	5900AR1266A
649950	CONTROL BOX ASSEMBLY,OUTDOOR	4995A10032G	4995A10032E	4995A10032E
668713	PWB(PCB) ASSEMBLY,SUB	6871A20130G	6871A20130F	6871A20130F
W0CZZ	CAPACITOR,DRAWING	6120AR2194H	2H01451P	2H01451P

Parts List

LOCATION NO	DESCRIPTION	LS-L1265ML	LS-L1265FR	LS-K1865ML
430411	BASE ASSY,WELD[OUTDOOR]	3041A20008J	3041A20008J	3041A30003F
435511	COVER ASSEMBLY,CONTROL(OUTDOOR)	3551A30058A	3551A30058A	3551A30018U
435512	COVER ASSY,TOP(OUTDOOR)	-	-	3H03266K
437210	PANEL ASSY,FRONT(OUTDOOR)	3721A20027B	3721A20027B	3721A20005B
437212	PANEL ASSY,REAR(OUTDOOR)	3721A20026A	3721A20026A	3720AP0003D
447910	BARRIER ASSY,OUTDOOR	4791A30002A	4791A30002A	2H02110A
546810	MOTOR ASSEMBLY,OUTDOOR	4681A20004H	4681A20004H	4681A20013A
550140	ISOLATOR,COMP	4H00982E	4H00982E	4H00982E
552102	TUBE,CAPILLARY BEND	5424AR7208T	5424AR7208T	5210A30216V
552111	TUBE ASSEMBLY,CAPILLARY	5211A20133L	5211A20133L	5425AR3847P
552203-1	VALVE,SERVICE	2H02479H	2H02479H	2H02479J
552203-2	VALVE,SERVICE	5220A20001B	5220A20001B	5220A20006A
554031	CONDENSER ASSEMBLY,BENT	5403A20019Y	5403A20019K	5403A20022R
554160	COMPRESSOR SET	2520UTAP2AA	2520UTAP2AA	2520UTFP2BA
559010	FAN ASSEMBLY,PROPELLER	5901A10004A	5901A10004A	1A00195B
649950	CONTROL BOX ASSEMBLY,OUTDOOR	4995A20083R	4995A20083R	4995A10002G
668713	PWB(PCB) ASSEMBLY,SUB	6871A20130J	6871A20130J	6871A20130J
W0CZZ	CAPACITOR,DRAWING	6120AR2194N	6120AR2194N	2A00986Y

Parts List

LOCATION NO	DESCRIPTION	LS-K1865FR	LS-K2465ML	LS-K2465FR
430410	BASE ASSEMBLY,WELD[OUTDOOR]	3041A30003F	3041A20022E	3041A20022E
435511	COVER ASSEMBLY,CONTROL(OUTDOOR)	3551A30018U	3551A30018U	3551A30018U
435512	COVER ASSEMBLY,TOP(OUTDOOR)	3H03266K	3H03266K	3H03266K
437210	PANEL ASSEMBLY,FRONT(OUTDOOR)	3721A20005B	3721A20005B	3721A20005B
437212	PANEL ASSY,REAR	3720AP0003D	3720AP0003D	3720AP0003D
447910	BARRIER ASSY,OUTDOOR	2H02110A	2H02110A	2H02110A
546810	MOTOR ASSEMBLY,OUTDOOR	4681A20013A	4681A20013D	4681A20013D
550140	ISOLATOR,COMP	4H00982E	4H00637A	4H00637A
552102	TUBE,CAPILLARY BEND	5210A30216V	5210A20595M	5210A20595M
552111	TUBE ASSY,CAPILLARY	5425AR3847P	5425AR3847X	5425AR3847X
552203-1	VALVE,SERVICE	2H02479J	5220A20001C	5220A20001C
552203-2	VALVE,SERVICE	5220A20006A	5220A20006A	5220A20006A
552560	MUFFLER	5256A30003C	5257A30001M	5257A30001M
554031	CONDENSER ASSY,BENT	5403A20022Z	5403A20022M	5403A20022D
554160	COMPRESSOR SET	2520UTFP2BA	5416A20018B	5416A20018B
559010	FAN ASSEMBLY,PROPELLER	1A00195B	1A00195B	1A00195B
649950	CONTROL BOX ASSEMBLY,OUTDOOR	4995A10002G	4995A10002H	4995A10002H
668713	PWB(PCB) ASSEMBLY,SUB	6871A20130J	6871A20130J	6871A20130J
W0CZZ	CAPACITOR,DRAWING	2A00986Y	6120AR2194P	6120AR2194P

Parts List

LOCATION NO	DESCRIPTION	LS-J0967HR	LS-L1267HR	LS-K186GHR	LS-K246GHR
268714	PWB(PCB) ASSEMBLY,SUB	6871A20130J	6871A20130J	6871A20130J	6871A20130J
430410	BASE ASSY,OUTDOOR	3041A20008K	3041A20008K	3041A20022E	3041A20022E
435511	COVER ASSEMBLY,CONTROL(OUTDOOR)	3551A30058B	3551A30058B	3551A30018V	3551A30018V
437210	PANEL ASSY,FRONT(OUTDOOR)	3721A20027A	3721A20027B	3721A20005B	3721A20005B
437212	PANEL ASSY,REAR(OUTDOOR)	3721A20026B	3721A20026B	3720AP0003D	3720AP0003D
447910	BARRIER ASSY,OUTDOOR	4791A30002B	4791A30002A	2H02110A	2H02110A
546810	MOTOR ASSY,OUTDOOR	4681A20004J	4681A20004H	4681A20013A	4681A20013D
552111	TUBE ASSY,CAPILLARY	5211A20117A	5211A20141K	5211A10039C	5211A10039E
552102-1	TUBE,CAPILLARY BEND	5424AR7208L	5210A30688B	5210A30216P	5210A30216Q
552102-2	TUBE,CAPILLARY BEND	5424AR7208M	5210A30688C	5424AR3479Q	5424AR3479F
552116	TUBE ASSY,REVERSING	5211A20116A	5211A20140C	5221AR2014Z	5211A30042E
552201	VALVE,CHECK	3H01552F	-	3A01020H	3A01020H
552202	VALVE,REVERSING	5220AR3084A	5220AR3084A	3A02027A	3A02027A
552203-1	VALVE,SERVICE	2H02479H	5220A20005A	2H02479F	2A00393C
552203-2	VALVE,SERVICE	2A00393U	5220A20003A	2H01890P	2A00392E
554031	CONDENSER ASSY,BENT	5403A20028B	5403A20026B	5403A20022F	5403A20022F
554160	COMPRESSOR	5416A20013C	5416A20019A	2A00713E	2A00713D
550140	ISOLATOR,COMP	4H00982E	4H00982E	4H00637A	4H00637A
559010	FAN ASSY,PROPELLER	5901A10004A	5901A10004A	1A00195B	1A00195B
561410	COIL ASSY,REVERSING VALVE	3A02028Y	3A02028Y	3A02028B	3A02028B
567502	O.L.P	6750A30001C	-	-	-
649950	CONTROL BOX ASSEMBLY,OUTDOOR	4995A20083Q	4995A20083Q	4995A10002T	4995A10002S
W0CZZ	CAPACITOR,DRAWING	2H01451P	2H01451P	6120AR2194M	6120AR2194K

